



Block E-1 THROTTLE BODY

FR. →

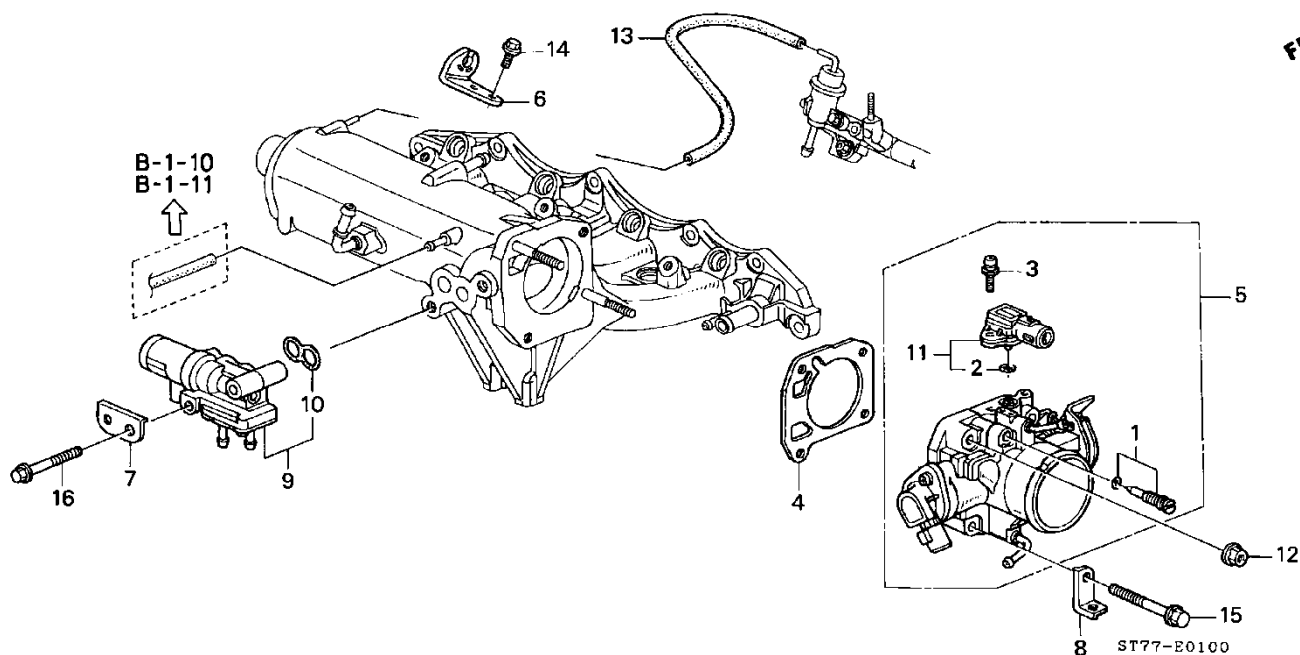


Refnr	Part Number	Part Description	Unit Qty
1	16016-P73-005	SCREW SET	001
2	16075-P07-000	O-RING, 9.8X1.9	001
3	16080-P07-000	SCREW-WASHER, 4X16	002
4	16176-P73-004	GASKET, THROTTLE BODY (NIPPON LEAKLESS)	001
5	16400-P73-A01	THROTTLE BODY ASSY. (GF89A)	001
6	16411-P73-000	STAY, THROTTLE WIRE	001
7	32740-P73-A00	STAY A, ENGINE WIRE HARNESS	001
8	32751-P6T-S00	STAY M, ENGINE WIRE HARNESS	001
9	36450-P6T-S01	VALVE ASSY., ELECTRONIC AIR CONTROL (DENSO)	001
10	36455-PT3-A01	PACKING, ELECTRONIC AIR CONTROL VALVE (DENSO)	001
11	37830-P0G-S00	SENSOR SET, MAP	001
12	94050-08080	NUT, FLANGE, 8MM	002
13	95005-35150-10	TUBE, 3.5X150 (95005-35001-10M)	001
14	95701-06012-08	BOLT, FLANGE, 6X12	002
15	95701-08040-08	BOLT, FLANGE, 8X40	002
16	95701-08045-08	BOLT, FLANGE, 8X45	002

Block E-3 INTAKE MANIFOLD

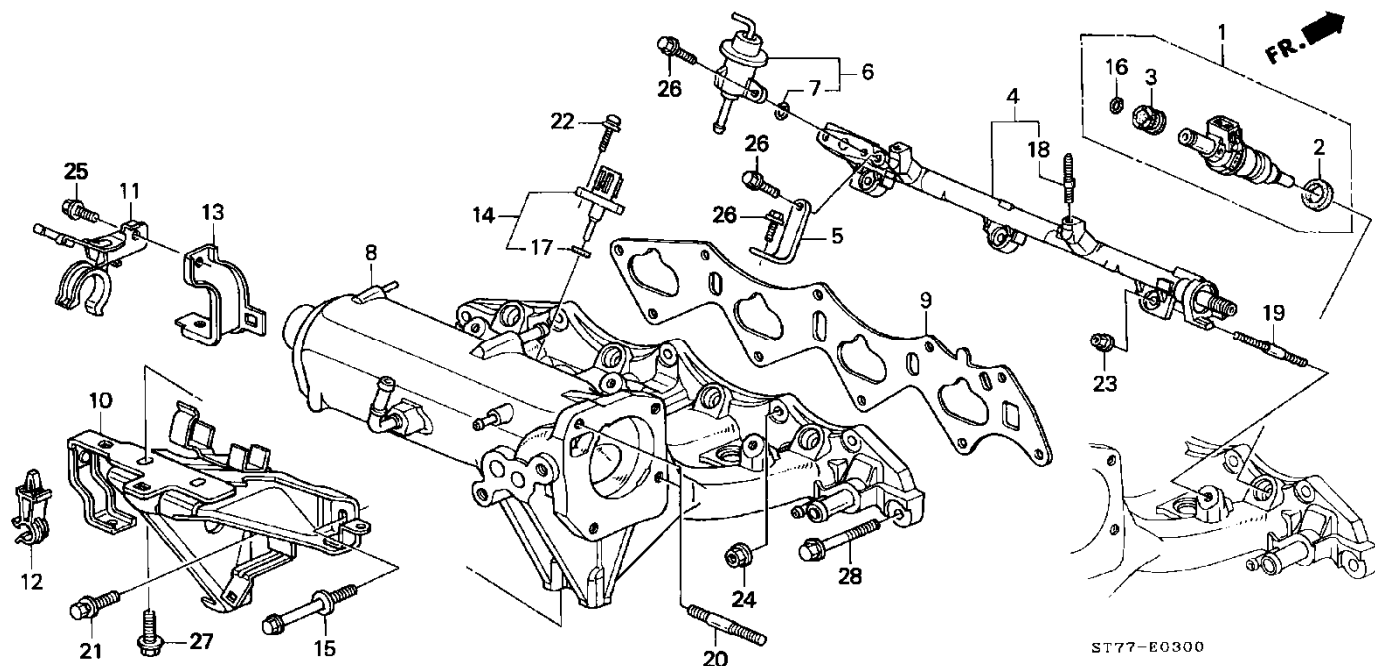


Refnr	Part Number	Part Description	Unit Qty
1	06164-P2J-000	PACKING SET, INJECTOR	004
2	16472-PD6-000	SEAL RING, INJECTOR (OTSUKA)	004
3	16473-PD6-000	CUSHION RING, INJECTOR (OTSUKA)	004
4	16620-P72-010	PIPE ASSY., FUEL	001
5	16622-P73-000	STAY, FUEL PIPE	001
6	16740-P73-003	REGULATOR ASSY., PRESSURE	001
7	16741-PG7-005	O-RING, PRESSURE REGULATOR	001
8	17100-P73-A00	MANIFOLD COMP., INTAKE	001
9	17105-P73-A01	GASKET, INTAKE MANIFOLD (NIPPON LEAKLESS)	001
10	17132-P73-000	STAY COMP., INTAKE MANIFOLD	001
11	17749-SR3-J92	CLAMP, RETURN HOSE	001 (RH)
11	53776-ST7-R00	CLAMP B, FEED HOSE	001 (LH)
12	19509-PR3-003	CLAMP, ELECTRONIC AIR CONTROL VALVE	001
13	32754-P30-000	STAY D, ENGINE WIRE HARNESS	001
14	37880-PE2-013	SENSOR ASSY., AIR TEMP	001
15	90033-P2T-005	BOLT, INTAKE MANIFOLD STAY	002
16	91301-PM7-003	O-RING, 7.3X2.2 (ARAI)	004
17	91303-PD1-910	O-RING, 7.5X1.5	001
18	92900-06018-1B	BOLT, STUD, 6X18	002
19	92900-06022-0B	BOLT, STUD, 6X22	003
20	92900-08035-1B	BOLT, STUD, 8X35	002
21	93406-08016-08	BOLT-WASHER, 8X16	001
22	93893-05016-08	SCREW-WASHER, 5X16	002
23	94050-06080	NUT, FLANGE, 6MM	003
24	94050-08080	NUT, FLANGE, 8MM	006
25	95701-06012-08	BOLT, FLANGE, 6X12	001
26	95701-06014-08	BOLT, FLANGE, 6X14	004
27	95701-08020-08	BOLT, FLANGE, 8X20	002
28	95701-08028-08	BOLT, FLANGE, 8X28	004

Block E-4 EXHAUST MANIFOLD

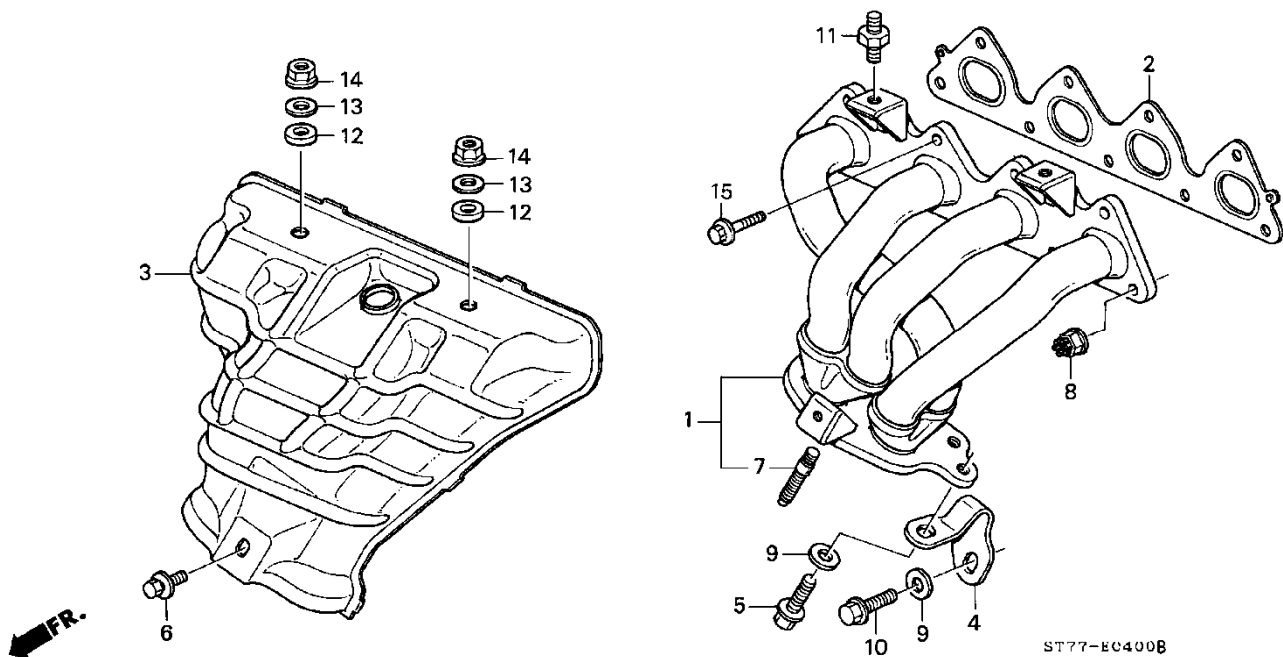


Refnr	Part Number	Part Description	Unit Qty
1	18100-P73-G00	MANIFOLD ASSY., EX.	001
2	18115-P30-003	GASKET, EX. MANIFOLD (NIPPON LEAKLESS)	001 ('98)
2	18115-P30-013	GASKET, EX. MANIFOLD (NIPPON LEAKLESS)	001 ('98-'00)
3	18120-P73-G00	COVER, EX. MANIFOLD	001
4	18199-P9K-G01	STAY, EX. MANIFOLD	001
5	90010-PE2-900	BOLT, SPECIAL, 10X22	001
6	90015-PT0-B00	BOLT-WASHER, 8X14	001
7	90065-PG6-000	BOLT, STUD, 10X24	003
8	90212-PD2-003	NUT, SELF-LOCK, 8MM	009 ('98)
8	90212-PD2-003	NUT, SELF-LOCK, 8MM	002 ('99-'00)
9	90451-PE2-000	WASHER, SPECIAL, 11X28	002
10	95701-1002508	BOLT, FLANGE, 10X25	001
11	90034-P73-000	BOLT, EX. MANIFOLD COVER	002
12	18135-P73-003	MESH, EX. MANIFOLD MOUNTING	002
13	94103-08700	WASHER, PLAIN, 8MM	002
14	94050-08070	NUT, FLANGE, 8MM	002
15	90001-P30-003	BOLT, FLANGE, 8X25	007 ('99-'00)

Block E-5 HIGH TENSION CORD/PLUG

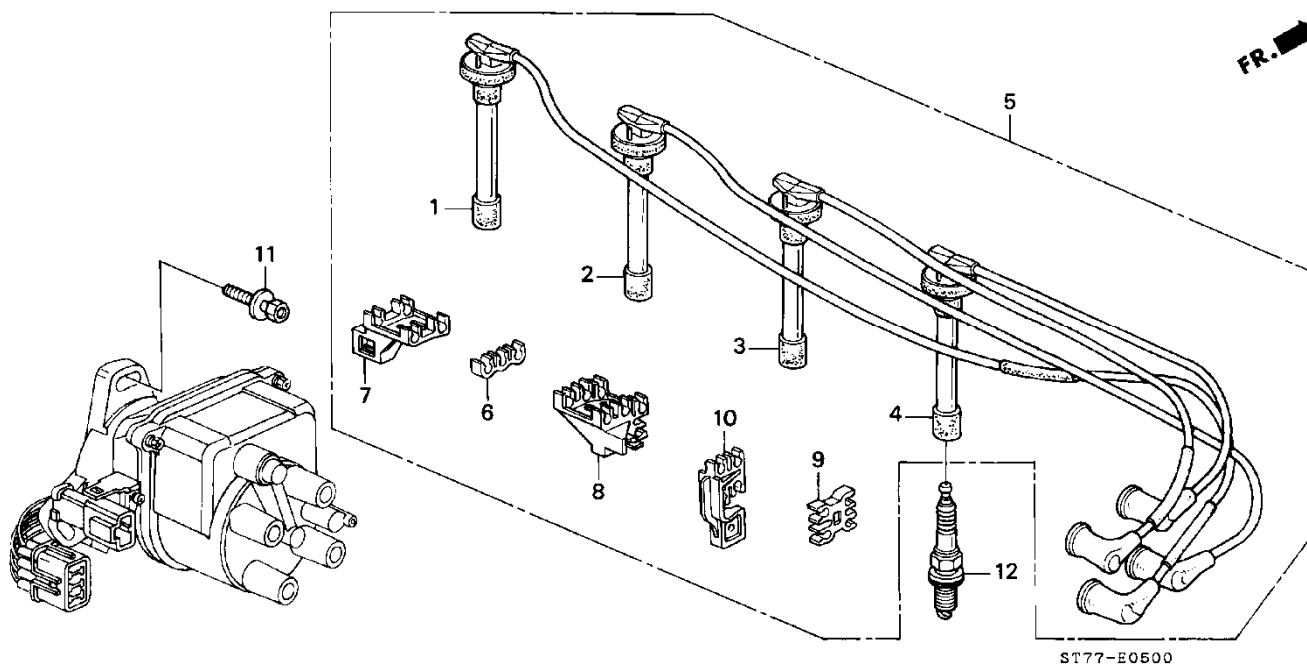


Refnr	Part Number	Part Description	Unit Qty
1	32701-P30-010	CORD COMP., RESISTANCE (NO.1) (SUMITOMO)	001
2	32702-P30-010	CORD COMP., RESISTANCE (NO.2) (SUMITOMO)	001
3	32703-P30-010	CORD COMP., RESISTANCE (NO.3) (SUMITOMO)	001
4	32704-P30-010	CORD COMP., RESISTANCE (NO.4) (SUMITOMO)	001
5	32722-P30-000	CORD COMP., HIGH TENSION (SUMITOMO)	001
6	32763-PM3-000	CLAMP C, HIGH TENSION CORD	001
7	32764-PR3-000	CLAMP C, HIGH TENSION CORD	001
8	32766-PR3-000	CLAMP D, HIGH TENSION CORD	001
9	32777-PG7-J00	GROMMET, HIGH TENSION CORD	001
10	32777-PR3-010	CLAMP E, HIGH TENSION CORD	001
11	90003-P01-000	BOLT-WASHER, 8X28	003
12	98079-5714H	PLUG, SPARK (PFR7G-11) (NGK)	004
12	98079-5715H	PLUG, SPARK (PK22PR-L11) (DENSO)	004

Block E-5-10 DISTRIBUTOR (TEC)

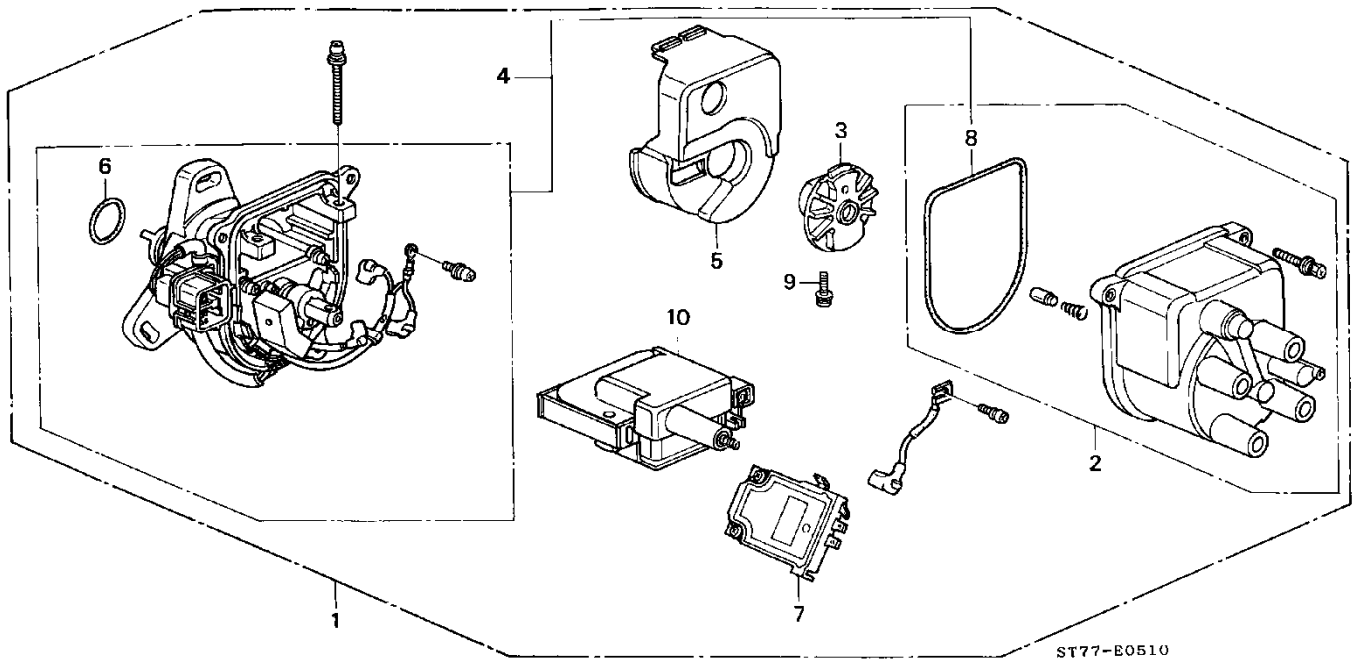

Refnr	Part Number	Part Description	Unit Qty
1	30100-P73-A02	DISTRIBUTOR ASSY. (TD-87U) (TEC)	001
2	30102-P72-006	CAP ASSY.	001
3	30103-P73-003	HEAD ASSY., ROTOR	001
4	30105-P73-004	HOUSING COMP., DISTRIBUTOR (TEC)	001
5	30107-P73-004	COVER, LEAK	001
6	30110-PA1-732	O-RING, 26.4X3.1 (TEC)	001
7	30130-P73-A01	IGNITER UNIT (E12-303) (HITACHI)	001
8	30132-P72-006	PACKING, CAP	001
9	30135-P73-004	SCREW-WASHER, 5X12	001
10	30510-P73-A02	COIL ASSY., IGNITION	001


Block E-6 ALTERNATOR BRACKET

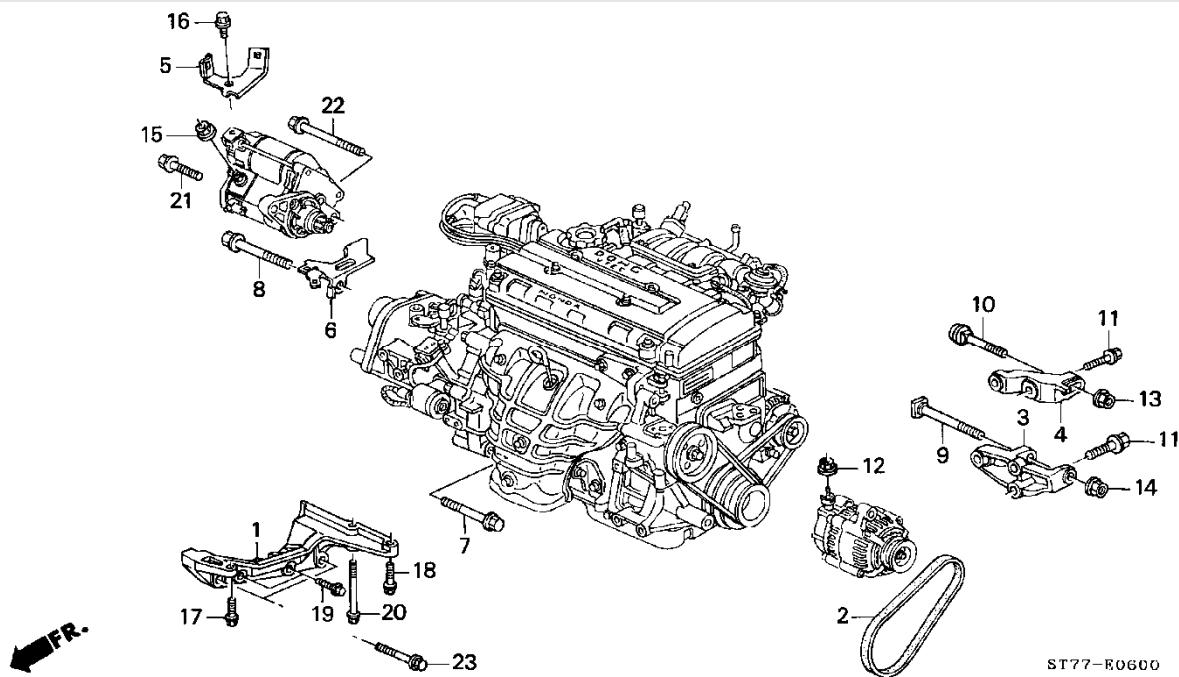

ST77-R0600


Refnr	Part Number	Part Description	Unit Qty
1	11950-P73-J00	STIFFENER, ENGINE	001
2	31110-P73-A01	BELT, ALTERNATOR (MITSUBOSHI)	001
3	31112-P2T-000	BRACKET COMP. A, ALTERNATOR	001
4	31113-P2T-000	BRACKET B, ALTERNATOR	001
5	32746-P72-A00	STAY F, ENGINE HARNESS	001
6	32752-P01-000	STAY B, ENGINE WIRE HARNESS	001
7	90050-PG7-000	BOLT, FLANGE, 12X65	002
8	90051-PE0-000	BOLT, FLANGE, 12X70	003
9	90057-PG7-003	BOLT, ALTERNATOR	001
10	90058-P72-000	BOLT, ALTERNATOR UPPER	001
11	90059-PR3-000	BOLT, KNOCK, 10X35	005
12	94050-06080	NUT, FLANGE, 6MM	001
13	94050-08080	NUT, FLANGE, 8MM	001
14	94050-10080	NUT, FLANGE, 10MM	001
15	94070-08080	NUT-WASHER, 8MM	001
16	95701-06012-08	BOLT, FLANGE, 6X12	001
17	95701-08030-08	BOLT, FLANGE, 8X30	001
18	95701-08035-08	BOLT, FLANGE, 8X35	001
19	95701-08045-08	BOLT, FLANGE, 8X45	002
20	95701-08060-08	BOLT, FLANGE, 8X60	001
21	95701-10040-08	BOLT, FLANGE, 10X40	001
22	95701-10105-08	BOLT, FLANGE, 10X105	001
23	95701-12050-08	BOLT, FLANGE, 12X50	002

Block E-6-10 ALTERNATOR (MITSUBISHI)

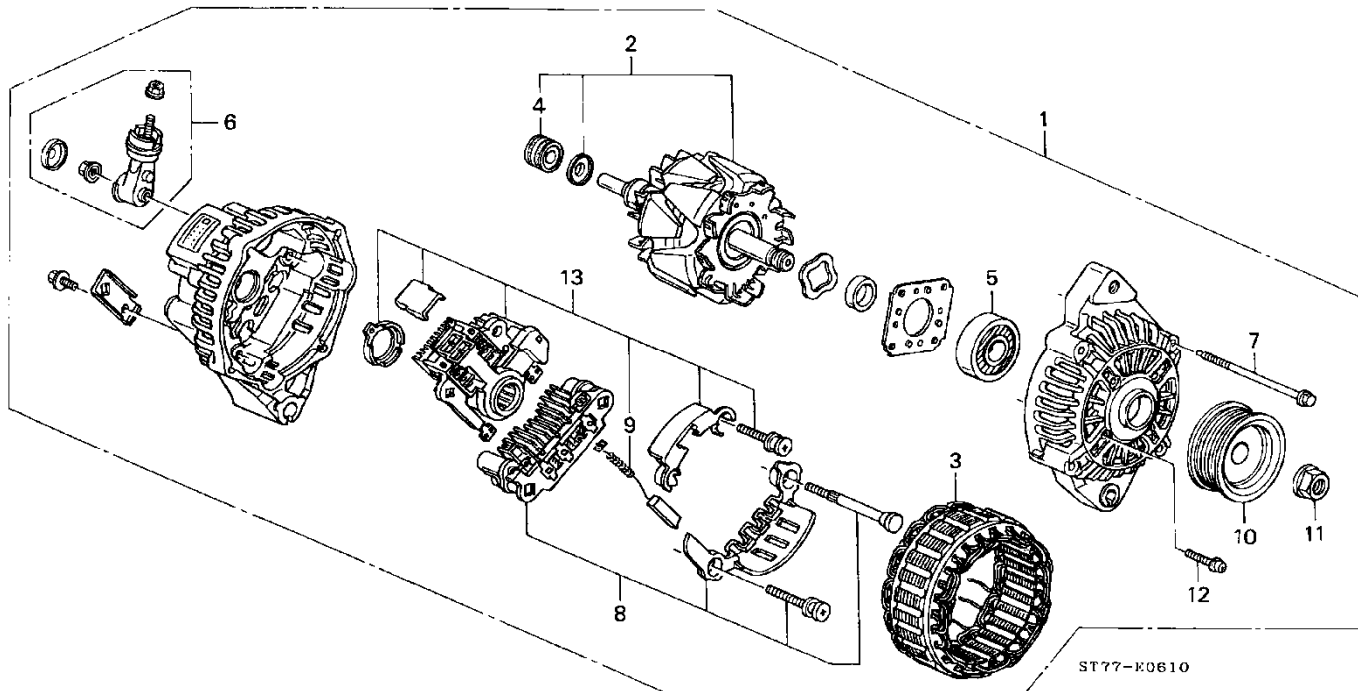


Refnr	Part Number	Part Description	Unit Qty
1	31100-P73-G01	ALTERNATOR ASSY. (AHGA34) (MITSUBISHI)	001
2	31101-P73-A01	ROTOR ASSY.	001
3	31102-P73-A01	STATOR	001
4	31111-P08-J02	BEARING, RR. GENERATOR	001
5	31114-P01-014	BEARING, FR. GENERATOR	001
6	31123-P08-J02	TERMINAL SET	001
7	31125-P08-J02	BOLT, FLANGE	004
8	31127-P08-J02	RECTIFIER ASSY.	001
9	31140-P64-902	BRUSH SET	002
10	31141-P2E-A01	PULLEY	001
11	31142-P08-J02	NUT	001
12	31146-PE0-004	SCREW	004
13	31150-P2F-C02	REGULATOR ASSY.	001 ('98)
13	31150-P2F-C03	REGULATOR ASSY.	001 ('99-'00)

Block E-7 ENGINE WIRE HARNESS (LH)

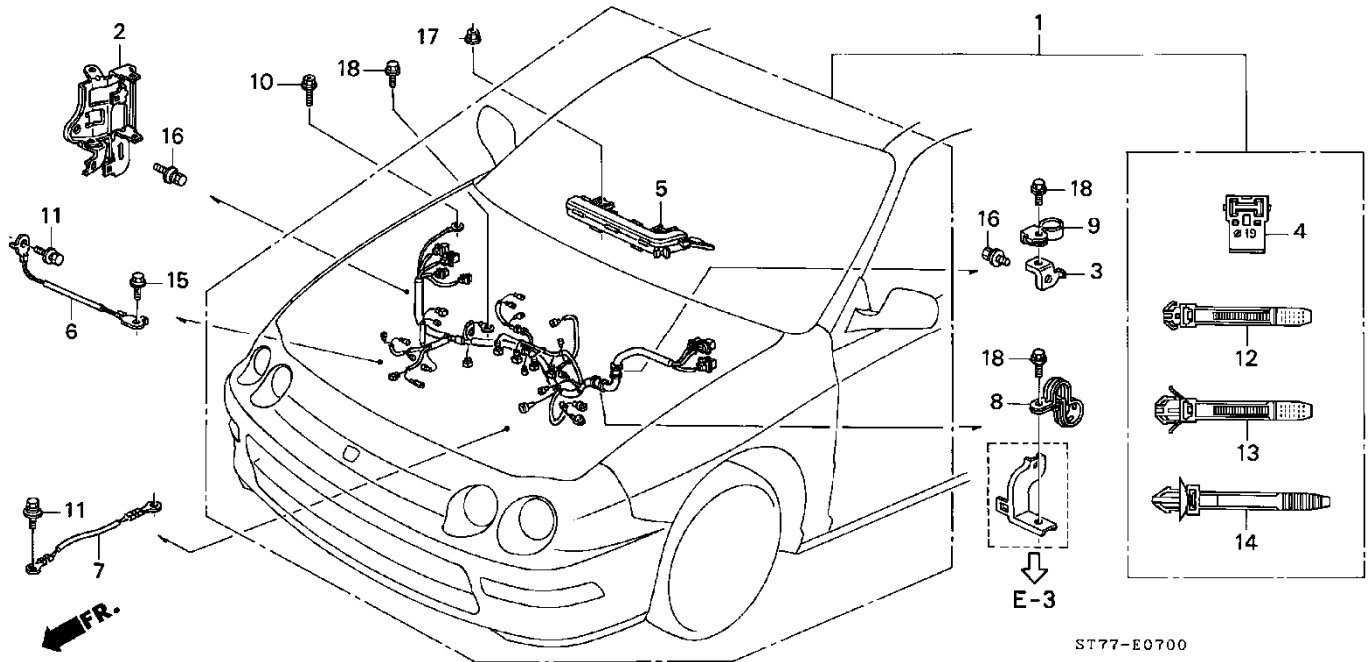

Refnr	Part Number	Part Description	Unit Qty
1	32110-P73-G00	HARNESS, ENGINE WIRE	001
2	32113-P28-000	STAY COMP., R. COUPLER	001
3	32115-P01-000	STAY, ENGINE WIRE HARNESS CLAMP	001
4	32118-P72-003	HOLDER, CORRUGATED (DARK GREEN) (19MM)	002
5	32127-P05-A00	HOLDER COMP., HARNESS	001
6	32601-S04-003	CABLE ASSY., MISSION EARTH (FURUKAWA)	001
7	32610-ST7-961	CABLE, SUB EARTH	001
8	32741-P01-000	CLAMP A, ENGINE HARNESS (GREEN)	001
9	32744-P01-000	CLAMP D, ENGINE HARNESS (GREEN)	001
10	90130-SR3-003	BOLT, 5X13	001
11	90153-SE0-003	BOLT, EARTH, 6X12	002
12	91506-P01-003	CLIP A, HARNESS BAND (DARK GRAY) (129.4MM)	004
13	91507-P01-003	CLIP B, HARNESS BAND (DARK BROWN) (129.4MM)	001
14	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	005
15	92000-06008-08	BOLT, HEX., 6X8	001
16	93403-06012-08	BOLT-WASHER, 6X12	002
17	94050-06080	NUT, FLANGE, 6MM	002
18	95701-06012-08	BOLT, FLANGE, 6X12	003


Block E-7-1 ENGINE WIRE HARNESS (RH)

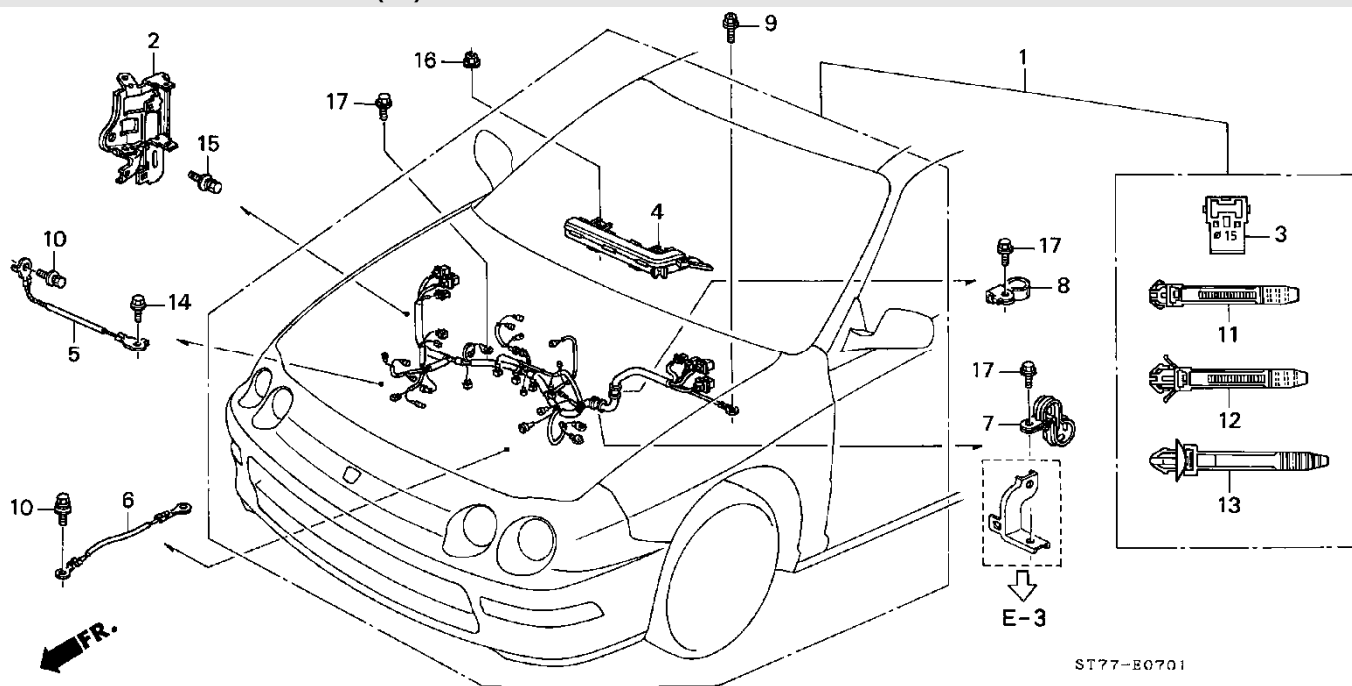

ST77-E0701


Refnr	Part Number	Part Description	Unit Qty
1	32110-P73-E00	HARNESS, ENGINE WIRE	001
2	32113-P28-000	STAY COMP., R. COUPLER	001
3	32117-P65-003	HOLDER, CORRUGATED (DARK BLUE)(15MM)	002
4	32127-P05-A00	HOLDER COMP., HARNESS	001
5	32601-S04-003	CABLE ASSY., MISSION EARTH (FURUKAWA)	001
6	32610-ST7-961	CABLE, SUB EARTH	001
7	32741-P08-000	CLAMP A, ENGINE HARNESS (BLACK)	001
8	32744-P05-A01	CLAMP D, ENGINE HARNESS (BLACK)	001
9	90130-SR3-003	BOLT, 5X13	001
10	90153-SE0-003	BOLT, EARTH, 6X12	002
11	91506-P01-003	CLIP A, HARNESS BAND (DARK GRAY) (129.4MM)	005
12	91507-P01-003	CLIP B, HARNESS BAND (DARK BROWN) (129.4MM)	001
13	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	002
14	92000-06008-08	BOLT, HEX., 6X8	001
15	93403-06012-08	BOLT-WASHER, 6X12	001
16	94050-06080	NUT, FLANGE, 6MM	002
17	95701-06012-08	BOLT, FLANGE, 6X12	003

Block E-7-10 STARTER MOTOR (DENSO)

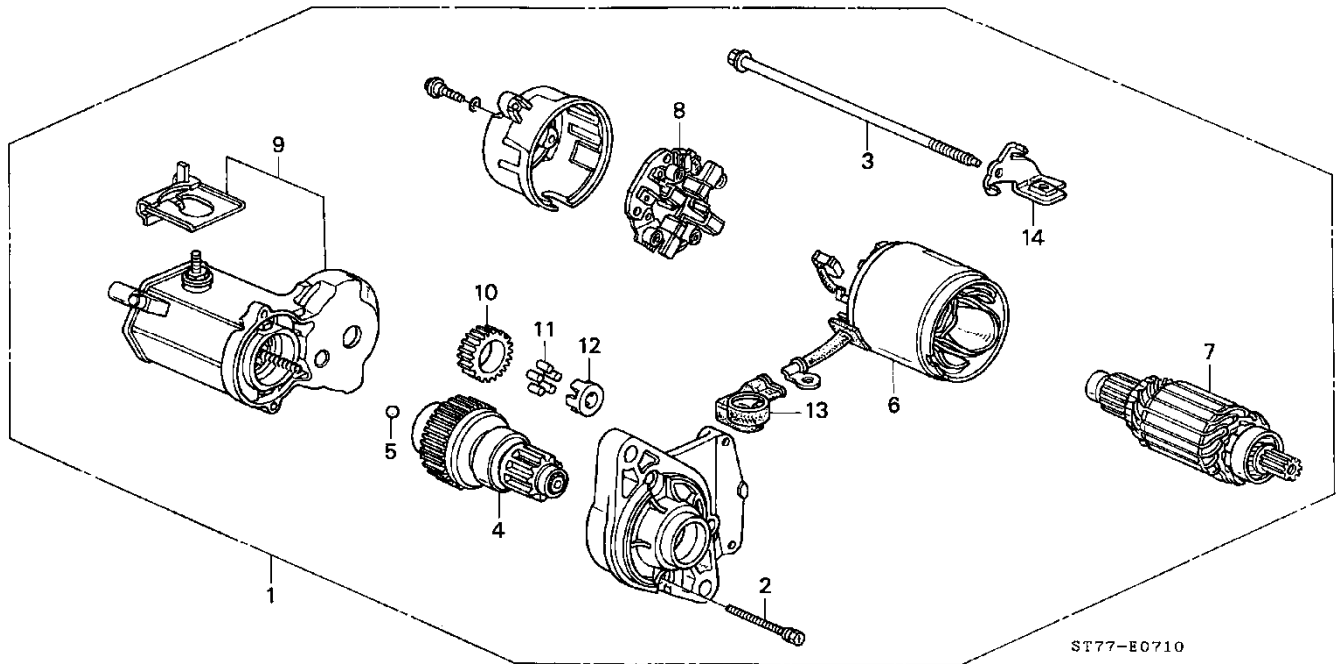


Refnr	Part Number	Part Description	Unit Qty
1	31200-P73-A01	MOTOR ASSY., STARTER (DXDRJ) (DENSO)	001
2	31201-PM3-J01	SCREW	002
3	31202-PM3-J01	BOLT, THROUGH (DENSO)	002
4	31204-P54-003	CLUTCH COMP., OVERRUNNING	001
5	31205-657-671	BALL, STEEL (DENSO)	001
6	31206-P73-A01	YOKE COMP.	001
7	31207-PM3-J01	ARMATURE COMP.	001
8	31208-PM3-J01	PLATE COMP., BRUSH HOLDER	001
9	31210-P54-003	SWITCH ASSY., MAGNETIC	001
10	31222-PM3-J01	GEAR, IDLE	001
11	31225-PB2-006	ROLLER, BEARING (DENSO)	005
12	31226-PM3-J01	RETAINER	001
13	31235-P72-A01	COVER, TERMINAL	001
14	31291-P72-A01	STAY, ENGINE HARNESS	001

Block E-8 BREATHER CHAMBER

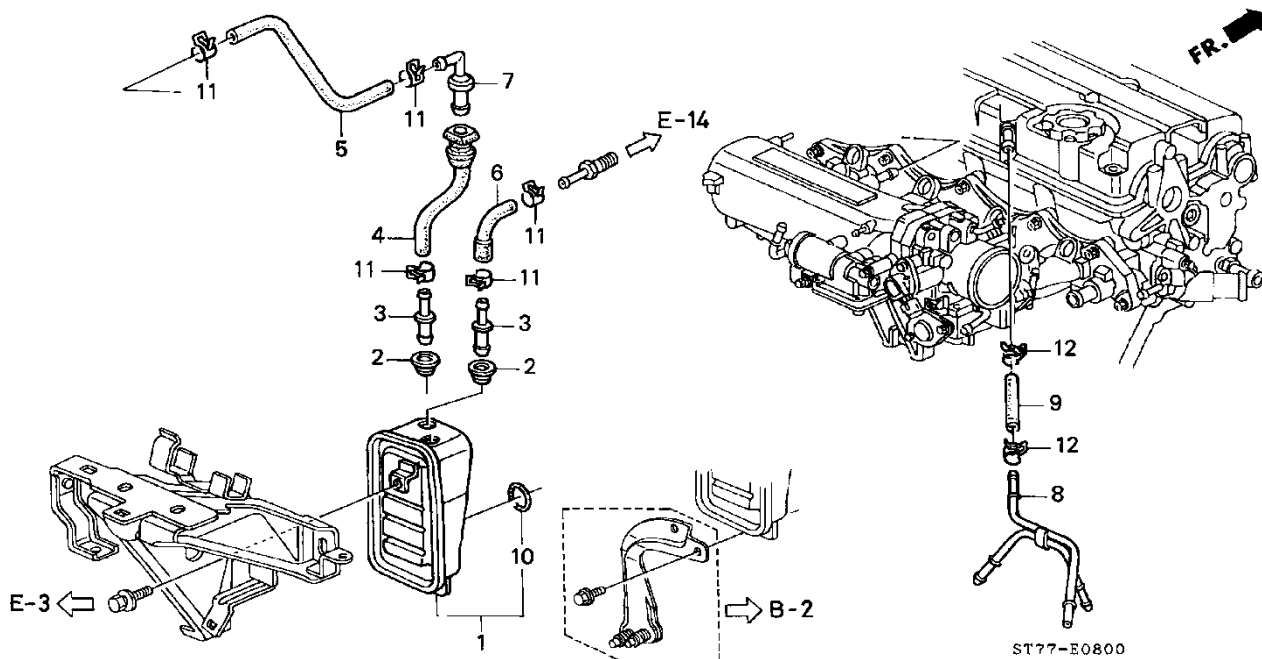

Refnr	Part Number	Part Description	Unit Qty
1	11851-P73-000	CHAMBER SET, BREATHER	001
2	11853-PR3-000	GROMMET, BREATHER CHAMBER	002
3	11854-PR3-000	JOINT, BREATHER CHAMBER	002
4	11855-P30-000	TUBE A, PCV	001
5	11856-P30-000	TUBE B, PCV	001
6	11857-PR3-000	TUBE C, PCV	001
7	17130-PK1-003	VALVE ASSY., PCV	001
8	17135-P73-010	PIPE COMP., BREATHER	001
9	17153-P2T-000	TUBE, BREATHER	001
10	91324-PR3-003	O-RING, 29X2.5	001
11	95002-41250-04	CLAMP, TUBE (D12.5)	005
12	95002-41300-04	CLAMP, TUBE (D13)	002



Block E-9 CYLINDER HEAD COVER

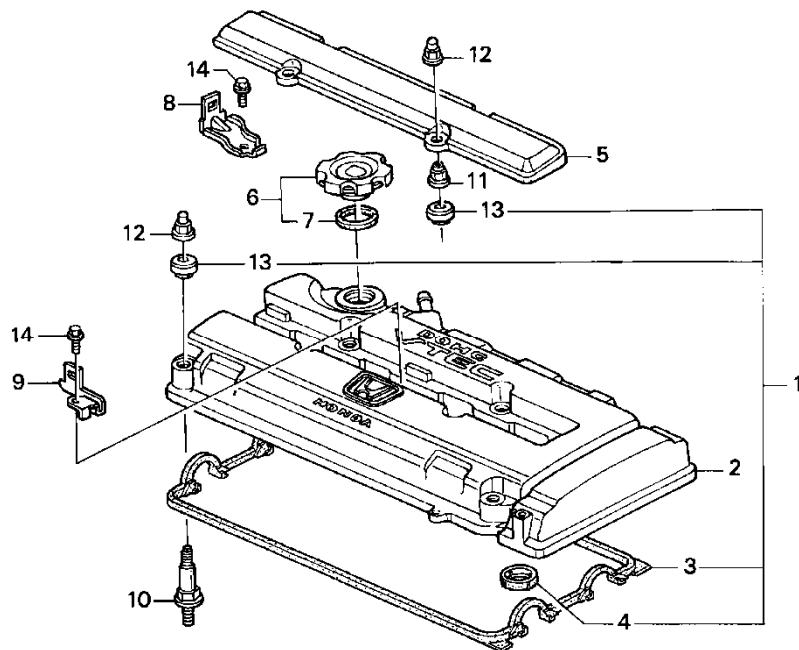

ST77-E0900

Refnr	Part Number	Part Description	Unit Qty
1	12030-P73-000	PACKING SET, HEAD COVER	001
2	12310-P73-J00	COVER COMP., CYLINDER HEAD	001
3	12341-PR3-000	PACKING, CYLINDER HEAD COVER	001
4	12342-PG6-000	PACKING B, HEAD COVER	004
5	12500-PR3-000	COVER, HIGH TENSION CORD	001
6	15610-P73-J01	CAP COMP., OIL FILLER	001
7	15613-PC6-000	PACKING, OIL FILLER	001
8	32762-PR3-000	STAY B, HIGH TENSION CORD CLAMP	001
9	32770-PR3-000	STAY C, HIGH TENSION CORD CLAMP	001
10	90012-PM7-000	BOLT B, HEAD COVER	004
11	90212-PR3-000	NUT, HEAD COVER	004
12	90213-PH3-000	NUT, CAP, 6MM	008
13	90442-P73-J00	WASHER, HEAD COVER	008
14	95701-06010-08	BOLT, FLANGE, 6X10	002


Block E-11 CAMSHAFT/TIMING BELT

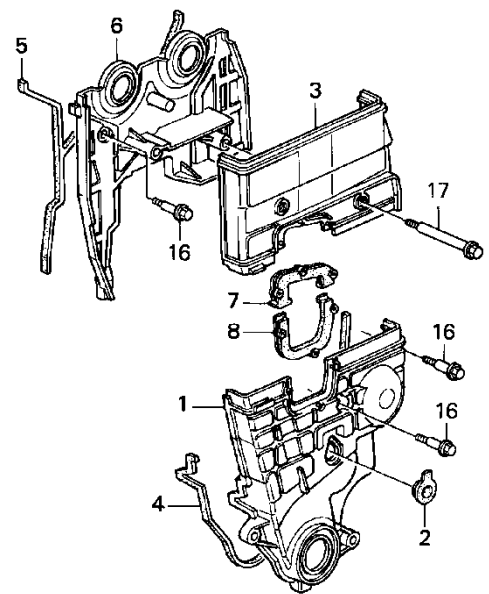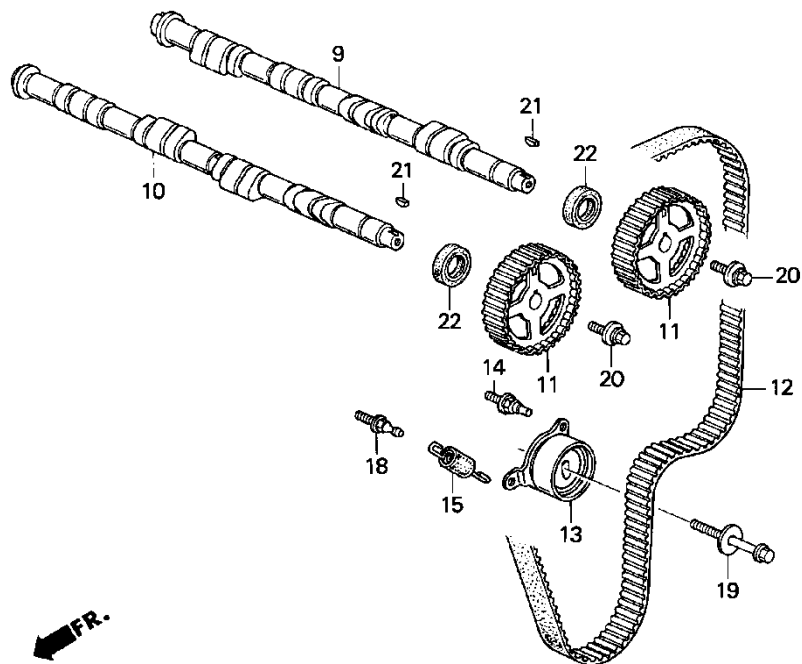

ST77-E1100



Refnr	Part Number	Part Description	Unit Qty
1	11810-P3F-000	COVER, TIMING BELT LOWER	001
2	11812-PJ7-310	GROMMET, TIMING BELT COVER	001
3	11820-P72-000	COVER, TIMING BELT MIDDLE	001
4	11831-PR3-000	RUBBER, LOWER SEAL	001
5	11832-P72-000	RUBBER, R. BACK SEAL	001
6	11840-P72-010	COVER, TIMING BELT BACK	001
7	11925-P30-000	RUBBER A, ENGINE MOUNTING BRACKET SEAL	001
8	11926-PR3-000	RUBBER B, ENGINE MOUNTING BRACKET SEAL	001
9	14111-P73-J00	CAMSHAFT, INTAKE	001 ('98-'99)
9	14111-P73-J01	CAMSHAFT, INTAKE	001 ('00)
10	14121-P73-J00	CAMSHAFT, EX.	001
11	14211-PR3-003	PULLEY, TIMING BELT DRIVEN	002
12	14400-P72-014	BELT, TIMING (126RU26)	001
13	14510-P30-003	TENSIONER COMP., TIMING BELT (KOYO SEIKO)	001
14	14513-PK1-000	BOLT, TIMING BELT ADJUSTER BASE	001
15	14516-PR4-A00	SPRING COMP., TIMING BELT ADJUSTER	001
16	90007-679-000	BOLT A, TIMING BELT COVER	005
17	90010-PR3-000	BOLT, TIMING BELT COVER	002
18	90012-PH3-004	BOLT, TIMING BELT ADJUSTER SPRING (NAGOYA RASHI)	001
19	90026-PR3-003	BOLT, TENSIONER	001
20	90031-PV0-003	BOLT-WASHER, 10X30	002
21	90741-657-000	KEY, 25.4X13	002
22	91213-PR3-004	OIL SEAL, 29X43X8 (ARAI)	002

Block E-12 VALVE/ROCKER ARM

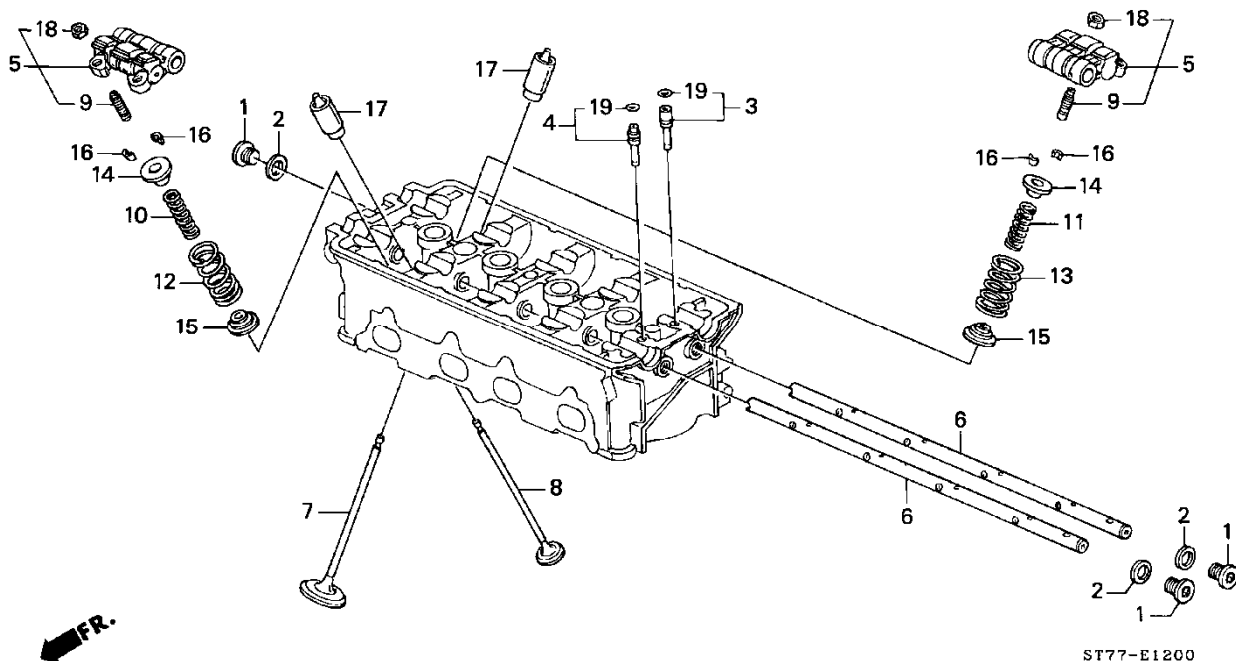

Refnr	Part Number	Part Description	Unit Qty
1	12208-PR3-000	BOLT, SEALING, 20MM	003
2	12209-PR3-000	WASHER, SEALING, 20MM	003
3	12250-PR3-000	ORIFICE ASSY., IN. ROCKER SHAFT	001
4	12260-PR3-000	ORIFICE ASSY., EX. ROCKER SHAFT	001
5	14620-P30-000	ARM ASSY., ROCKER	008
6	14631-PR3-000	SHAFT, VALVE ROCKER ARM	002
7	14711-P73-J01	VALVE, IN.	008
8	14721-PR3-000	VALVE, EX.	008
9	14744-PR3-003	SCREW, TAPPET ADJUSTING	016
10	14751-P72-003	SPRING, VALVE INNER (BLUE) (NIPPON HATSUJO)	008
11	14751-P73-J02	SPRING, IN. VALVE INNER (YELLOW)(NIPPON HATSUJO)	008
12	14761-P72-003	SPRING, VALVE OUTER (BLUE) (NIPPON HATSUJO)	008
13	14761-P73-J02	SPRING, IN. VALVE OUTER (YELLOW)(NIPPON HATSUJO)	008
14	14765-P30-000	RETAINER, VALVE SPRING	016
15	14775-PR3-000	SEAT, VALVE SPRING	016
16	14781-PR7-A01	COTTER, VALVE	032
17	14820-P73-J01	MOTION ASSY., LOST	008
18	90206-590-000	NUT, TAPPET ADJUSTING	016
19	91306-PJ4-000	O-RING, 6.8X1.9	002


Block E-13 OIL PUMP/OIL STRAINER

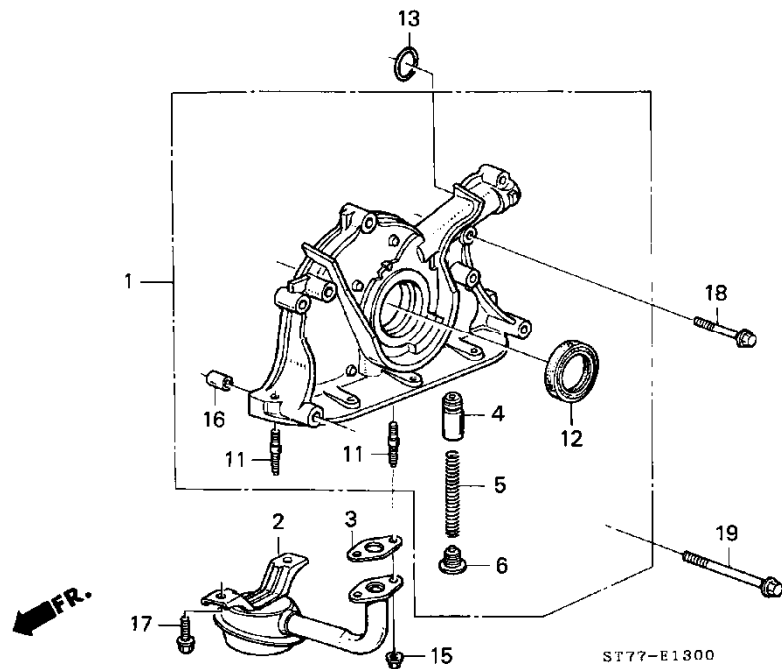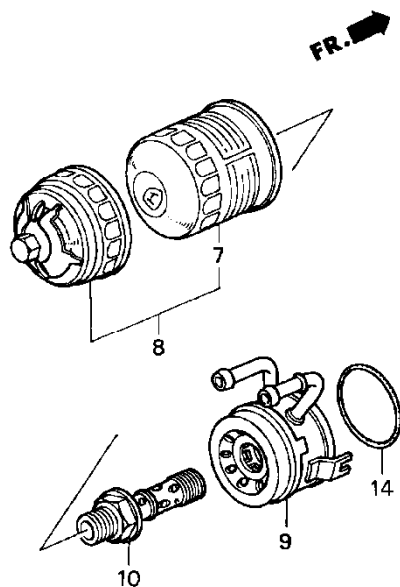

ST77-E1300


Refnr	Part Number	Part Description	Unit Qty
1	15100-PR4-A03	PUMP ASSY., OIL	001
2	15220-P72-000	STRAINER COMP., OIL	001
3	15221-PW0-S01	PACKING, OIL STRAINER	001
4	15231-PE0-000	VALVE, RELIEF	001
5	15232-PG6-000	SPRING, RELIEF VALVE	001
6	15233-PC6-000	BOLT, SEALING, 18MM	001
7	15400-PH1-F03	CARTRIDGE, OIL FILTER (LABINAL-PURFLUX)	(1) ('00)
7	15400-PR3-003	CARTRIDGE, OIL FILTER (TSUCHIYA)	001
7	15400-PR3-004	CARTRIDGE, OIL FILTER (TOYO ROKI)	001 ('98)
7	15400-PR3-014	CARTRIDGE, OIL FILTER (TOYO ROKI)	001 ('99-'00)
8	15400-PR3-305	CARTRIDGE SET, OIL FILTER (TOYO ROKI)	(1) ('98-'99)
8	15400-PR3-315	CARTRIDGE SET, OIL FILTER (TOYO ROKI)	(1) ('00)
9	15500-PR3-013	COOLER, ENGINE OIL	001
10	15560-PT6-003	BOLT, OIL COOLER CENTER	001
11	90042-PR3-000	BOLT, STUD, 6X28	005
12	91212-PR4-A01	OIL SEAL, 38X50X7.4 (NOK)	001
13	91308-PK1-003	O-RING, 26.2X2.4 (NOK)	001
14	91316-PT6-003	O-RING, 62.4X3.1	001
15	94050-06080	NUT, FLANGE, 6MM	002
16	94301-10160	DOWEL PIN, 10X16	002
17	95701-06014-08	BOLT, FLANGE, 6X14	002
18	95701-06035-08	BOLT, FLANGE, 6X35	004
19	95701-08070-08	BOLT, FLANGE, 8X70	002

Block E-14 CYLINDER BLOCK/OIL PAN

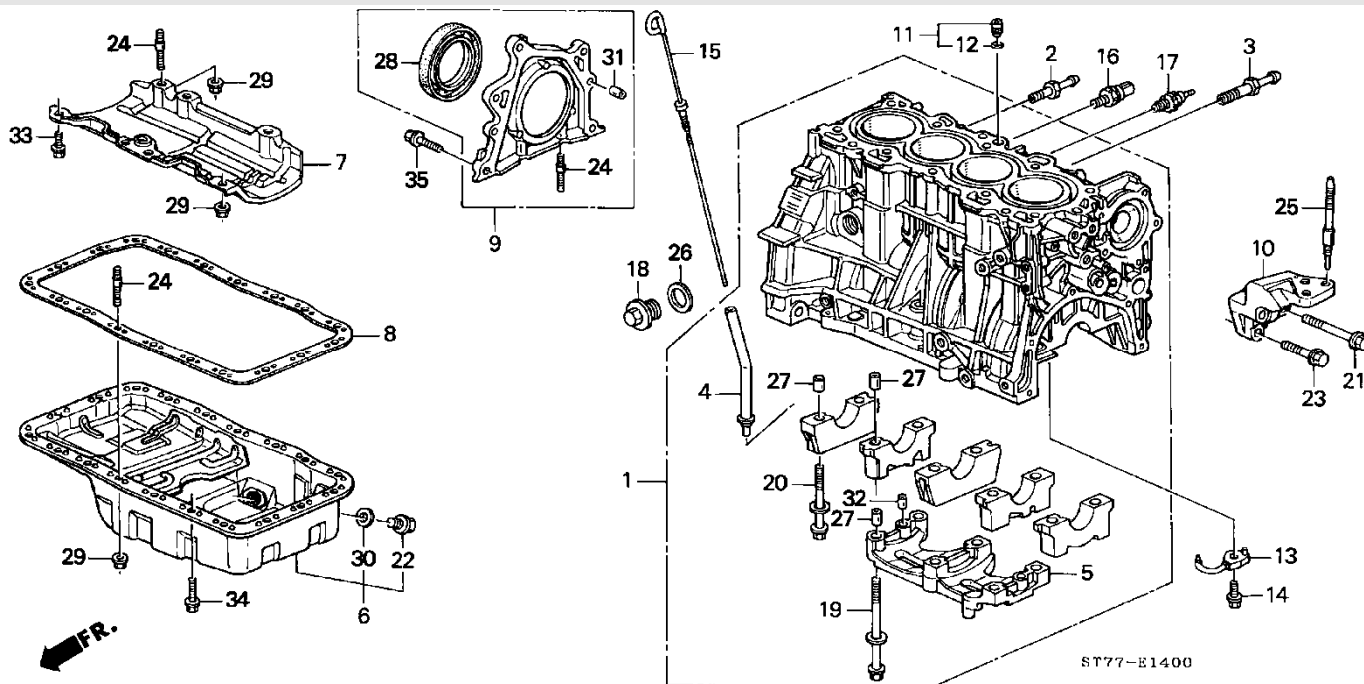

Refnr	Part Number	Part Description	Unit Qty
1	11000-P72-020	BLOCK ASSY., CYLINDER	001
2	11105-PR3-000	JOINT, PCV	001
3	11108-PR3-010	JOINT, OIL COOLER	001
4	11111-PR3-300	PIPE, OIL LEVEL	001
5	11130-P72-000	BRIDGE COMP., BEARING CAP	001
6	11200-P72-010	PAN COMP., OIL	001
7	11221-P72-000	PLATE, BAFFLE	001
8	11251-P30-004	PACKING, OIL PAN	001
9	11300-PR4-A00	COVER ASSY., R. SIDE	001
10	11910-P72-000	BRACKET, ENGINE MOUNTING	001
11	15140-PR3-000	ORIFICE ASSY., OIL CONTROL	001
12	15142-PH3-003	O-RING, 10.8X2.4 (ARAI)	001
13	15280-P72-000	BODY COMP., OIL JET	004
14	15290-PR3-000	BOLT COMP., OIL JET	004
15	15650-P3F-A00	GAUGE COMP., OIL LEVEL	001
16	30530-PV1-A01	SENSOR ASSY., KNOCK	001
17	37240-PT0-014	SWITCH, OIL PRESSURE (TEC)	001
17	37240-PT0-023	SWITCH, OIL PRESSURE (DENSO)	001
18	90001-PM3-003	BOLT, DRAIN PLUG, 28MM	001
19	90007-PAA-T01	BOLT-WASHER, 11X121	006
20	90007-P75-003	BOLT-WASHER, 11X90	004
21	90008-PR3-000	BOLT A, ENGINE MOUNT BRACKET (10X60)	002
22	90009-PH1-000	BOLT, DRAIN PLUG, 14MM	001
23	90009-PR3-000	BOLT B, ENGINE MOUNT BRACKET (10X40)	001
24	90042-PR3-000	BOLT, STUD, 6X28	008
25	90042-P72-000	BOLT, STUD, 10X81	002
26	90401-PR4-000	WASHER, SEALING, 28MM	001
27	90715-PC6-000	DOWEL PIN, 13X20	014
28	91214-PH3-751	OIL SEAL, 80X100X10 (ARAI)	001
28	91214-PR4-A01	OIL SEAL, 80X100X10 (NOK)	001
29	94050-06080	NUT, FLANGE, 6MM	011
30	94109-14000	WASHER, DRAIN PLUG, 14MM	001
31	94301-06100	DOWEL PIN, 6X10	002
32	94301-12200	DOWEL PIN, 12X20	002
33	95701-06014-08	BOLT, FLANGE, 6X14	005
34	95701-06018-08	BOLT, FLANGE, 6X18	010
35	95701-06020-08	BOLT, FLANGE, 6X20	005


Block E-15 WATER PUMP/SENSOR

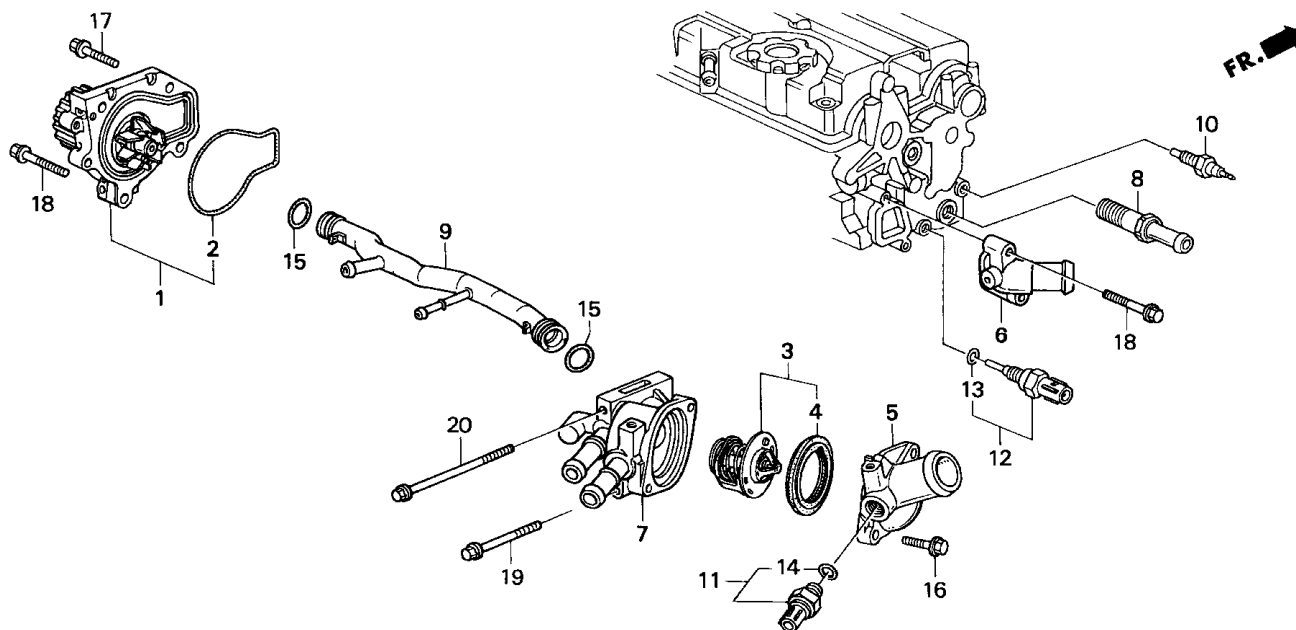

ST77-E1500


Refnr	Part Number	Part Description	Unit Qty
1	19200-P72-013	PUMP COMP., WATER (YAMADA)	001
2	19222-PR4-003	PACKING, WATER PUMP (YAMADA)	001
3	19301-P08-305	THERMOSTAT ASSY. (FUJI THOMSON)	001 ('98)
3	19301-P08-315	THERMOSTAT ASSY. (FUJI THOMSON)	001 ('99-'00)
3	19301-P08-316	THERMOSTAT ASSY. (NIPPON THERMOSTAT)	001
4	19305-PT0-000	RUBBER, THERMOSTAT MOUNTING	001
5	19311-P2T-000	COVER, THERMOSTAT	001
6	19315-P30-J01	COVER, WATER OUTLET	001
7	19320-P30-J00	CASE COMP., THERMOSTAT	001
8	19500-PE0-000	JOINT, TUBE	001
9	19505-PR3-000	PIPE, CONNECTING	001
10	37750-PH2-014	THERMO UNIT (DENSO)	001
11	37760-P00-003	SWITCH ASSY., THERMOSTAT (A-93) (NIPPON THERMOSTAT)	001
11	37760-P00-004	SWITCH ASSY., THERMOSTAT (A-93) (UCHIYA THERMOSTAT)	001
12	37870-PJ7-003	SENSOR ASSY., WATER TEMP (TW5) (MATSUSHITA)	001
13	91307-PJ7-003	O-RING, 9.5X1.5 (MATSUSHITA)	001
14	91307-PN4-000	O-RING, 17.5X1.4	001
15	91314-PH7-003	O-RING, 31.2X4.1 (NOK)	002
16	95701-06020-08	BOLT, FLANGE, 6X20	002
17	95701-06025-08	BOLT, FLANGE, 6X25	003
18	95701-06030-08	BOLT, FLANGE, 6X30	004
19	95701-06045-08	BOLT, FLANGE, 6X45	001
20	95701-06080-08	BOLT, FLANGE, 6X80	001

Block E-15-10 WATER HOSE

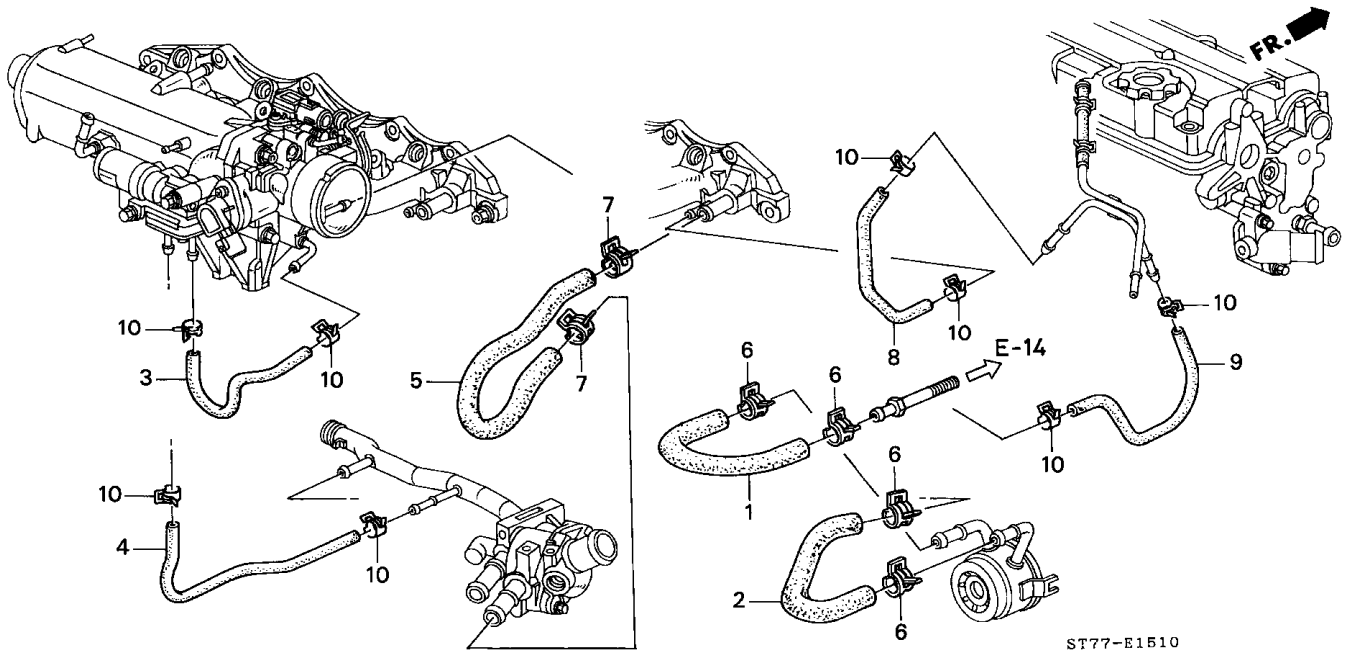

ST77-E1510


Refnr	Part Number	Part Description	Unit Qty
1	19422-PR3-000	HOSE, OIL COOLER IN.	001
2	19423-PR3-000	HOSE, OIL COOLER OUTLET	001
3	19506-P75-000	HOSE, ELECTRONIC AIR CONTROL VALVE IN.	001
4	19507-P73-000	HOSE, ELECTRONIC AIR CONTROL VALVE OUTLET	001
5	19508-P08-000	HOSE, BYPASS OUTLET	001
6	19512-PC6-003	CLIP, HOSE, 18.7MM	004
7	19513-PE0-003	CLAMP, WATER HOSE (21.7MM) (CHUO HATSUJO)	002
8	19527-P73-000	HOSE A, BREATHER HEATER	001
9	19528-P73-010	HOSE B, BREATHER HEATER	001
10	95002-41250-04	CLAMP, TUBE (D12.5)	008

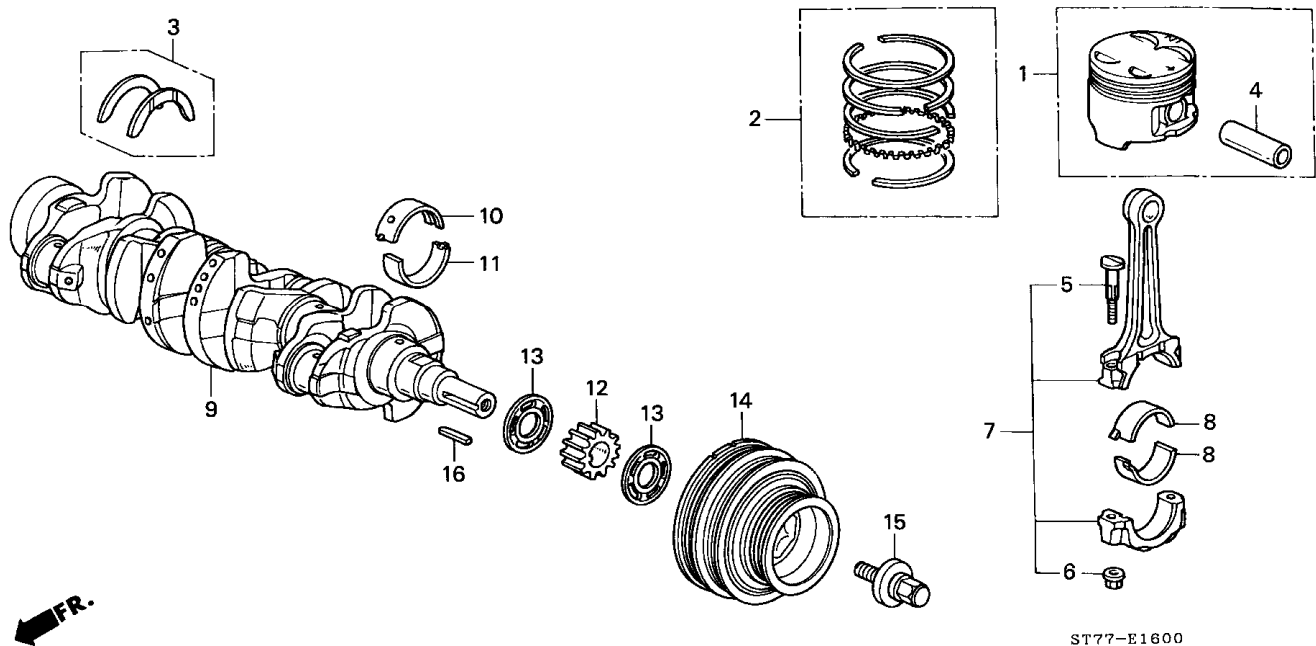

ST77-E1600

Refnr	Part Number	Part Description	Unit Qty
1	13010-P73-J00	PISTON SET (STD.)	004
1	13020-P73-J00	PISTON SET (OS 0.25)	(4)
2	13011-P9K-E01	RING SET, PISTON (STD.) (RIKEN)	004
2	13021-PR3-004	RING SET, PISTON (OS 0.25)	(4) ('98-'99)
2	13021-P9K-E01	RING SET, PISTON (OS 0.25)	(4) ('00)
3	13014-PR3-S10	WASHER SET, THRUST (DAIDO)	001
3	13014-PR3-S20	WASHER SET, THRUST (TAIHO)	001
4	13112-P3F-000	PIN, PISTON	004
5	13204-P73-J01	BOLT, CONNECTING ROD	008
6	13205-PH7-000	NUT, CONNECTING ROD	008
7	13210-P73-000	ROD COMP., CONNECTING	004
8	13211-P72-003	BEARING A, CONNECTING ROD (BLUE) (DAIDO)	008
8	13212-P72-003	BEARING B, CONNECTING ROD (BLACK) (DAIDO)	008
8	13213-P72-003	BEARING C, CONNECTING ROD (BROWN) (DAIDO)	008
8	13214-P72-003	BEARING D, CONNECTING ROD (GREEN) (DAIDO)	008
8	13215-P72-003	BEARING E, CONNECTING ROD (YELLOW) (DAIDO)	008
8	13216-P72-003	BEARING F, CONNECTING ROD (PINK) (DAIDO)	008
8	13217-P72-003	BEARING G, CONNECTING ROD (RED) (DAIDO)	008
9	13310-P73-J01	CRANKSHAFT COMP.	001
10	13321-PR3-003	BEARING A, MAIN UPPER (BLUE) (DAIDO)	005
10	13321-PR3-004	BEARING A, MAIN UPPER (BLUE) (TAIHO)	005
10	13322-PR3-003	BEARING B, MAIN UPPER (BLACK) (DAIDO)	005
10	13322-PR3-004	BEARING B, MAIN UPPER (BLACK) (TAIHO)	005
10	13323-PR3-003	BEARING C, MAIN UPPER (BROWN) (DAIDO)	005
10	13323-PR3-004	BEARING C, MAIN UPPER (BROWN) (TAIHO)	005
10	13324-PR3-003	BEARING D, MAIN UPPER (GREEN) (DAIDO)	005
10	13324-PR3-004	BEARING D, MAIN UPPER (GREEN) (TAIHO)	005
10	13325-PR3-003	BEARING E, MAIN UPPER (YELLOW) (DAIDO)	005
10	13325-PR3-004	BEARING E, MAIN UPPER (YELLOW) (TAIHO)	005
10	13326-PR3-003	BEARING F, MAIN UPPER (PINK) (DAIDO)	005
10	13326-PR3-004	BEARING F, MAIN UPPER (PINK) (TAIHO)	005
10	13327-PR3-003	BEARING G, MAIN UPPER (RED)(DAIDO)	005
10	13327-PR3-004	BEARING G, MAIN UPPER (RED)(TAIHO)	005
11	13341-PR3-003	BEARING A, MAIN LOWER (BLUE) (DAIDO)	005
11	13341-PR3-004	BEARING A, MAIN LOWER (BLUE) (TAIHO)	005
11	13342-PR3-003	BEARING B, MAIN LOWER (BLACK) (DAIDO)	005
11	13342-PR3-004	BEARING B, MAIN LOWER (BLACK) (TAIHO)	005
11	13343-PR3-003	BEARING C, MAIN LOWER (BROWN) (DAIDO)	005
11	13343-PR3-004	BEARING C, MAIN LOWER (BROWN) (TAIHO)	005
11	13344-PR3-003	BEARING D, MAIN LOWER (GREEN) (DAIDO)	005
11	13344-PR3-004	BEARING D, MAIN LOWER (GREEN) (TAIHO)	005
11	13345-PR3-003	BEARING E, MAIN LOWER (YELLOW) (DAIDO)	005
11	13345-PR3-004	BEARING E, MAIN LOWER (YELLOW) (TAIHO)	005
11	13346-PR3-003	BEARING F, MAIN LOWER (PINK) (DAIDO)	005


11	13346-PR3-004	BEARING F, MAIN LOWER (PINK) (TAIHO)	005
11	13347-PR3-003	BEARING G, MAIN LOWER (RED) (DAIDO)	005
11	13347-PR3-004	BEARING G, MAIN LOWER (RED) (TAIHO)	005
12	13621-PR3-003	PULLEY, TIMING BELT DRIVE (HITACHI)	001
13	13622-PR3-000	PLATE, TIMING BELT GUIDE	002
14	13810-P73-J01	PULLEY COMP., CRANKSHAFT	001
15	90017-PR3-003	BOLT-WASHER, 14X31	001
16	90704-634-000	KEY, 4.5X11.0	001

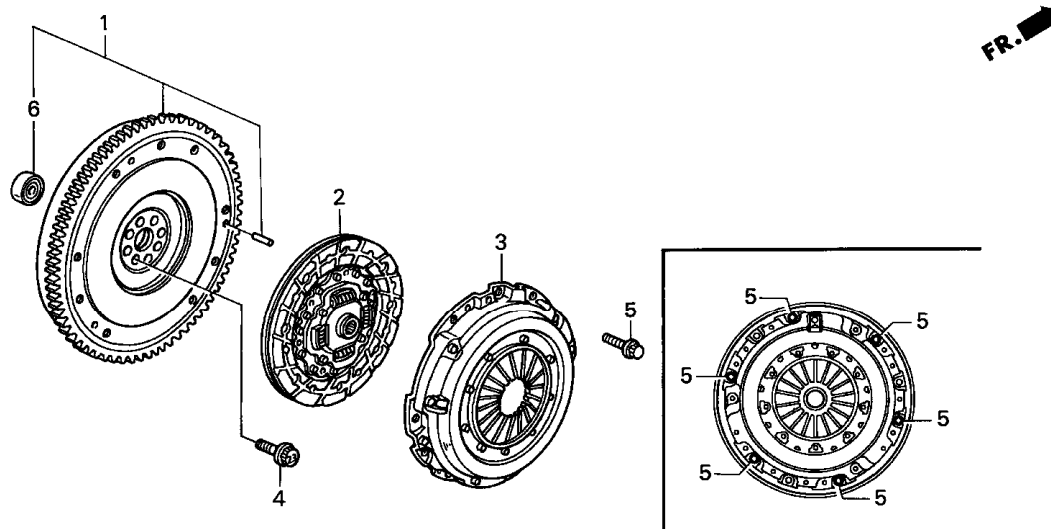

ST77-E1800


Refnr	Part Number	Part Description	Unit Qty
1	22100-P73-005	FLYWHEEL COMP.	001
2	22200-P73-015	DISK COMP., FRICTION	001 ('98-'99)
2	22200-P73-025	DISK COMP., FRICTION	001 ('00)
3	22300-P73-005	DISK COMP., PRESSURE	001 ('98-'99)
3	22300-P73-025	DISK COMP., PRESSURE	001 ('00)
4	90011-PH3-000	BOLT, FLANGE, 12MM	008
5	90034-689-000	BOLT, TWELVE POINT, 8MM (TOKAI TRW)	006
6	91006-634-008	BEARING, CLUTCH PILOT (NTN)	001

Block E-19 P.S. PUMP/BACKET

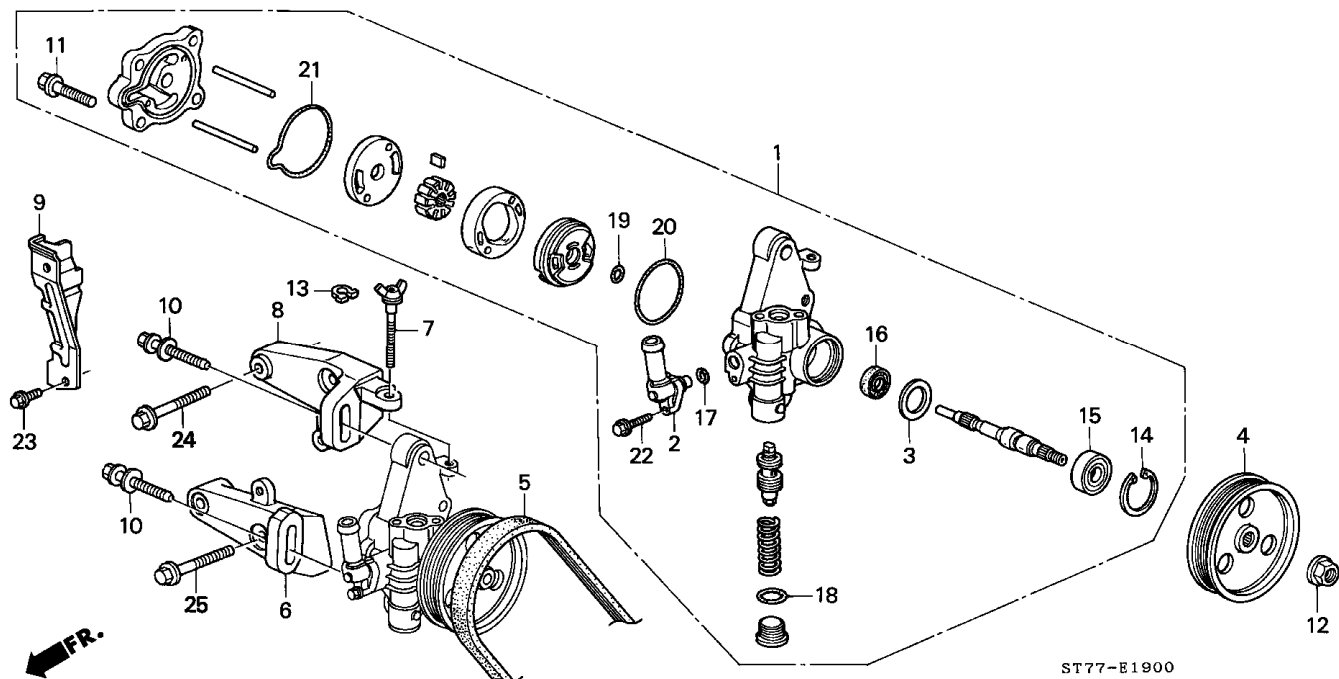


Refnr	Part Number	Part Description	Unit Qty
1	56110-P72-003	PUMP SUB ASSY., POWER STEERING (SHOWA)	001
2	56123-P2A-003	JOINT, IN.	001
3	56167-P2A-003	SPACER, PUMP SEAL	001
4	56483-P72-003	PULLEY COMP., POWER STEERING PUMP	001
5	56992-P72-004	BELT, POWER STEERING PUMP (MITSUBOSHI)	001
6	56994-P73-000	BRACKET, POWER STEERING PUMP LOWER	001
7	56996-P01-000	BOLT, POWER STEERING PUMP ADJUSTING WING	001
8	56997-P73-000	BRACKET, POWER STEERING PUMP UPPER	001
9	56999-P73-000	INSULATOR, TIMING BELT COVER HEAT	001
10	90004-P73-003	BOLT, SPECIAL, 8MM	002
11	90105-S50-003	BOLT, FLANGE, 8X28	004
12	90305-PAA-A01	NUT, POWER STEERING PULLEY	001
13	90601-P01-003	CLIP, ADJUST BOLT	001
14	90693-P2A-003	CIRCLIP, INTERNAL, 40MM	001
15	91048-P2A-003	BEARING, RADIAL BALL, 17X40X12	001
16	91249-P2A-003	SEAL, POWER STEERING PUMP	001
17	91345-PAA-A01	O-RING, 13.0X1.9	001
18	91347-PAA-A01	O-RING, 16.7X1.8	001
19	91347-P2A-003	O-RING, 15.2X2.4	001
20	91348-P2A-003	O-RING, 51.0X2.4	001
21	91349-P2A-003	SEAL, POWER STEERING PUMP COVER	001
22	91350-P8C-A01	BOLT, FLANGE, 6X20	001
23	93404-06012-08	BOLT-WASHER, 6X12	002
24	95701-10045-08	BOLT, FLANGE, 10X45	002
25	95801-10040-08	BOLT, FLANGE, 10X40	002

Block E-20 GASKET KIT

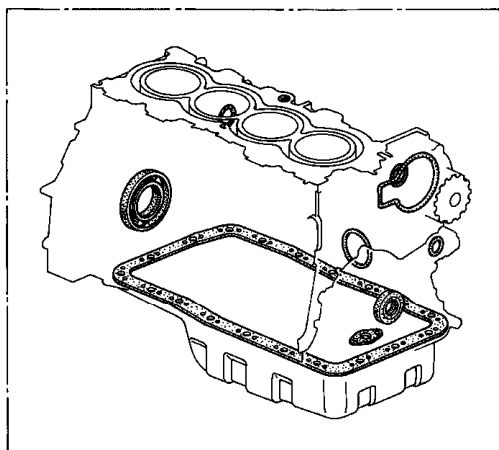

2

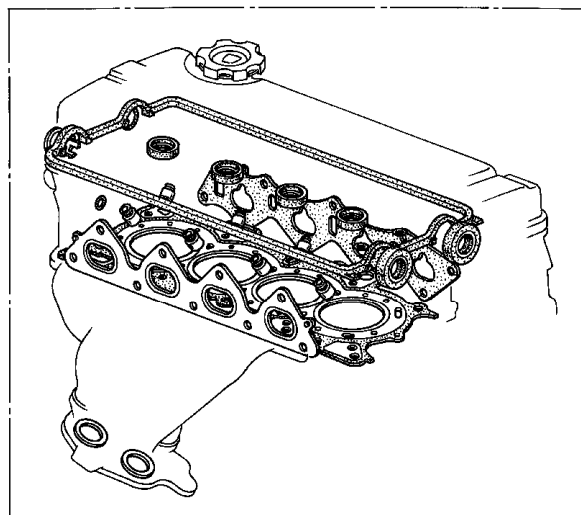


1

FR.


ST77-E2000

Refnr	Part Number	Part Description	Unit Qty
1	06110-P73-A03	GASKET KIT, CYLINDER HEAD	001
2	06111-PR4-020	GASKET KIT, CYLINDER BLOCK	001

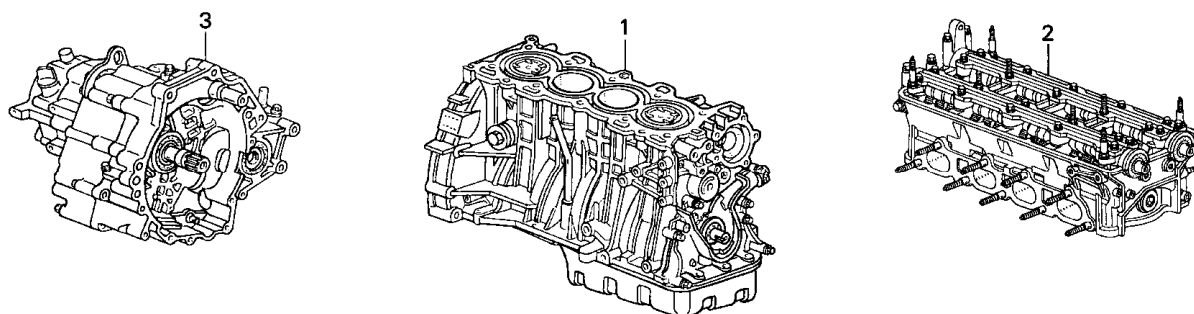

ST77-E2010


Refnr	Part Number	Part Description	Unit Qty
1	10002-P73-G01	GENERAL ASSY., CYLINDER BLOCK	001
2	10003-P73-G01	GENERAL ASSY., CYLINDER HEAD	001 ('98)
2	10003-P73-G02	GENERAL ASSY., CYLINDER HEAD	001 ('99)
2	10003-P73-G03	GENERAL ASSY., CYLINDER HEAD	001 ('00)
3	20011-P80-E30	TRANSMISSION ASSY. (MT)	001

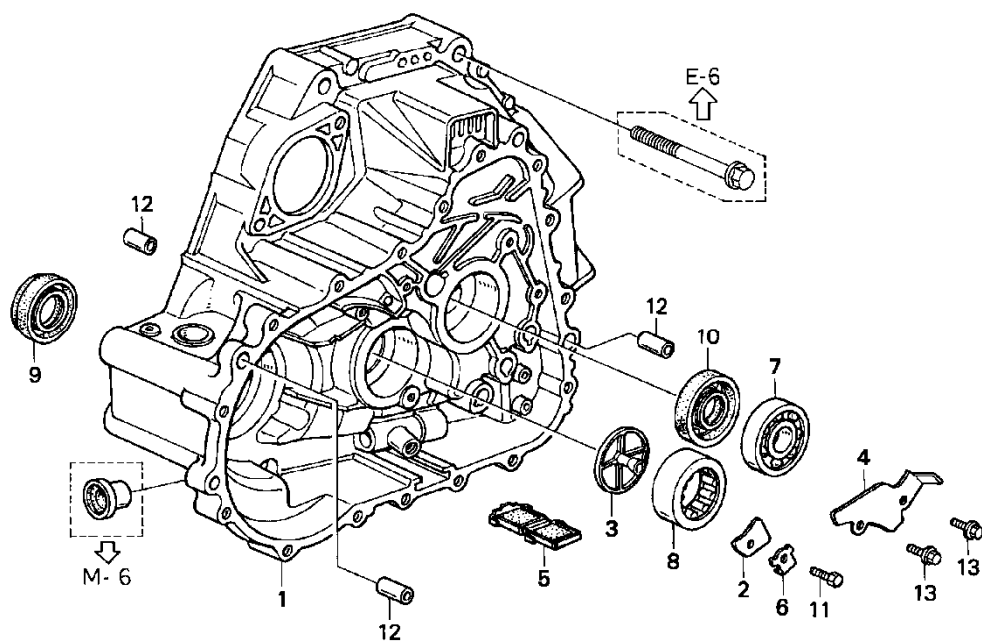

ST77-M0100

Refnr	Part Number	Part Description	Unit Qty
1	21000-P21-020	CASE COMP., CLUTCH	001
2	21101-PS1-000	PLATE, NEEDLE SET	001
3	21103-PS1-000	PLATE C, OIL GUIDE	001
4	21106-PS1-000	PLATE, OIL CHAMBER	001
5	21120-PG2-003	MAGNET, TRANSMISSION	001
6	90406-PS1-000	WASHER, LOCK	001
7	91002-PS1-003	BEARING, BALL, 28X60X15	001
8	91101-P80-008	BEARING, NEEDLE, 33X60X20 (NTN)	001
9	91205-PL3-A01	OIL SEAL, 35X56X8 (ARAI)	001
9	91205-PL3-A02	OIL SEAL, 35X56X8 (NOK)	001
10	91216-PH8-003	OIL SEAL, 28X41X7 (ARAI)	001
10	91216-PH8-005	OIL SEAL, 28X41X7 (NOK)	001
11	92201-08016-0H	BOLT, HEX., 8X16	001
12	94301-14200	DOWEL PIN, 14X20	004
13	95701-06012-08	BOLT, FLANGE, 6X12	002

Block M-2 TRANSMISSION HOUSING

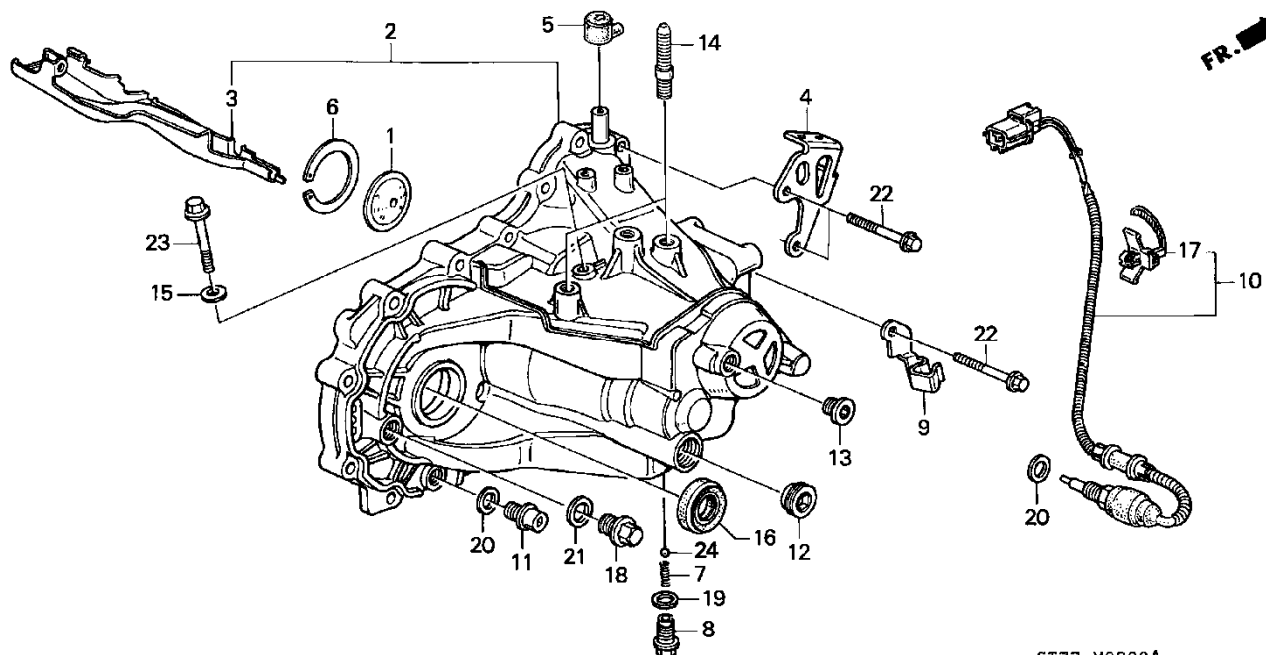


ST77-M0200A

Refnr	Part Number	Part Description	Unit Qty
1	21104-PS1-020	PLATE M, OIL GUIDE	001
2	21200-P21-040	CASE COMP., TRANSMISSION	001
3	21211-P21-300	PLATE, OIL GUTTER	001
4	21221-P21-000	HANGER A, TRANSMISSION	001
5	21396-P20-000	CAP, BREATHER	001
6	23931-P21-000	SHIM A, 72MM (0.60)	001
6	23932-P21-000	SHIM B, 72MM (0.63)	001
6	23933-P21-000	SHIM C, 72MM (0.66)	001
6	23934-P21-000	SHIM D, 72MM (0.69)	001
6	23935-P21-000	SHIM E, 72MM (0.72)	001
6	23936-P21-000	SHIM F, 72MM (0.75)	001
6	23937-P21-000	SHIM G, 72MM (0.78)	001
6	23938-P21-000	SHIM H, 72MM (0.81)	001
6	23939-P21-000	SHIM I, 72MM (0.84)	001
6	23940-P21-000	SHIM J, 72MM (0.87)	001
6	23941-P21-000	SHIM K, 72MM (0.90)	001
6	23942-P21-000	SHIM L, 72MM (0.93)	001
6	23943-P21-000	SHIM M, 72MM (0.96)	001
6	23944-P21-000	SHIM N, 72MM (0.99)	001
6	23945-P21-000	SHIM O, 72MM (1.02)	001
6	23946-P21-000	SHIM P, 72MM (1.05)	001
6	23947-P21-000	SHIM Q, 72MM (1.08)	001
6	23948-P21-000	SHIM R, 72MM (1.11)	001
6	23949-P21-000	SHIM S, 72MM (1.14)	001
6	23950-P21-000	SHIM T, 72MM (1.17)	001
6	23951-P21-000	SHIM U, 72MM (1.20)	001
6	23952-P21-000	SHIM V, 72MM (1.23)	001
6	23953-P21-000	SHIM W, 72MM (1.26)	001
6	23954-P21-000	SHIM X, 72MM (1.29)	001
6	23955-P21-000	SHIM Y, 72MM (1.32)	001
6	23956-P21-000	SHIM Z, 72MM (1.35)	001
6	23957-P21-000	SHIM AA, 72MM (1.38)	001
6	23958-P21-000	SHIM AB, 72MM (1.41)	001
6	23959-P21-000	SHIM AC, 72MM (1.44)	001
6	23960-P21-000	SHIM AD, 72MM (1.47)	001
6	23961-P21-000	SHIM AE, 72MM (1.50)	001
6	23962-P21-000	SHIM AF, 72MM (1.53)	001
6	23963-P21-000	SHIM AG, 72MM (1.56)	001
6	23964-P21-000	SHIM AH, 72MM (1.59)	001
6	23965-P21-000	SHIM AI, 72MM (1.62)	001
6	23966-P21-000	SHIM AJ, 72MM (1.65)	001
6	23967-P21-000	SHIM AK, 72MM (1.68)	001
6	23968-P21-000	SHIM AL, 72MM (1.71)	001
6	23969-P21-000	SHIM AM, 72MM (1.74)	001


6	23970-P21-000	SHIM AN, 72MM (1.77)	001
6	23971-P21-000	SHIM AO, 72MM (1.80)	001
7	24452-PB6-020	SPRING A, BALL SETTING	002
8	24519-PB6-000	SCREW, BALL SPRING SETTING	002
9	32746-P21-000	STAY, BACK LIGHT HARNESS	001
10	35600-P21-003	SWITCH ASSY., BACK LIGHT	001
11	90081-PB6-000	BOLT, PLUG, 14MM	001
12	90081-PX5-000	SCREW, SEALING, 32MM	001
13	90083-PG1-000	BOLT, SEALING, 16MM	001
14	90380-SR3-000	BOLT, STUD, 12X57.6	002
15	90401-PG1-000	WASHER, DRAIN PLUG, 10MM	001
16	91205-PC9-711	OIL SEAL, 40X62X8 (NOK)	001
16	91205-PG1-003	OIL SEAL, 40X62X8 (ARAI)	001
17	91507-P01-003	CLIP B, HARNESS BAND (DARK BROWN) (129.4MM)	001
18	92800-20000	BOLT, DRAIN PLUG, 20MM	001
19	94109-12000	WASHER, DRAIN PLUG, 12MM	002
20	94109-14000	WASHER, DRAIN PLUG, 14MM	002
21	94109-20000	WASHER, DRAIN PLUG, 20MM	001
22	95701-08040-08	BOLT, FLANGE, 8X40	016
23	95801-10035-08	BOLT, FLANGE, 10X35	001
24	96211-10000	BALL, STEEL, #10 (5/16)	002

Block M-3 CLUTCH RELEASE

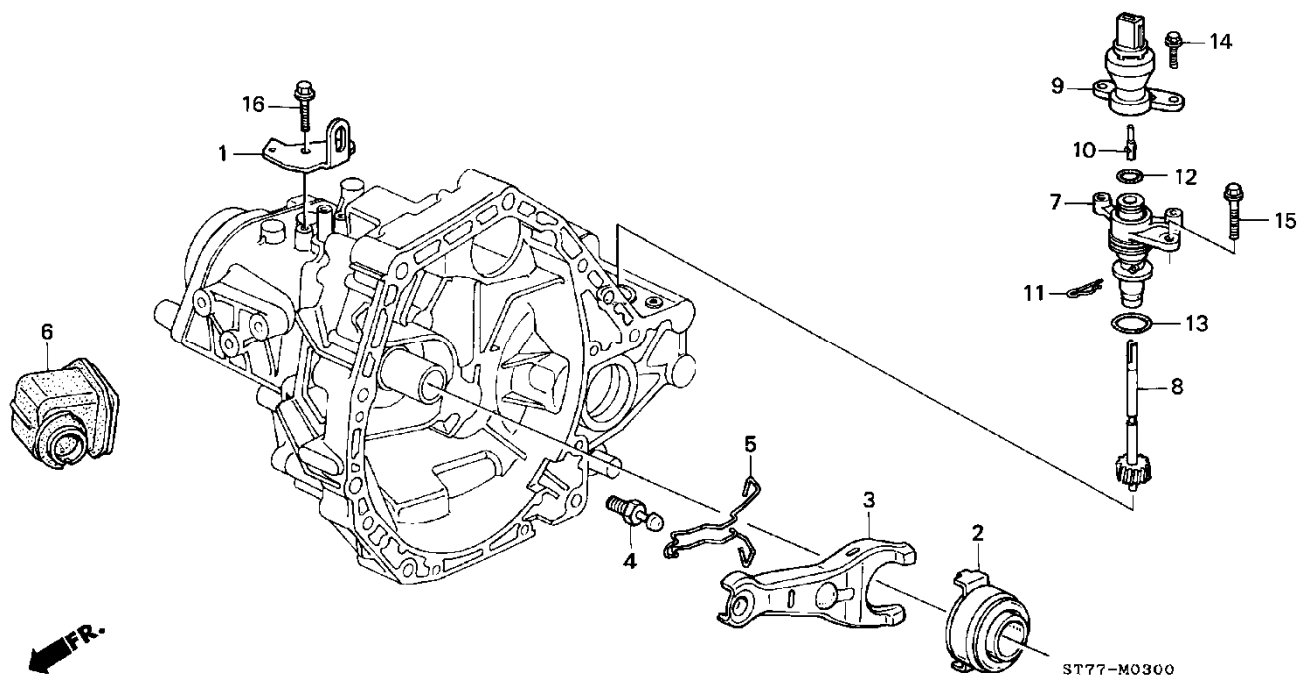


Refnr	Part Number	Part Description	Unit Qty
1	21222-P21-000	HANGER B, TRANSMISSION	001
2	22810-P21-003	BEARING, CLUTCH RELEASE (FUJIKOSHI)	001
3	22821-P80-010	FORK, CLUTCH RELEASE	001
4	22825-P0S-000	BOLT, RELEASE FORK	001
5	22835-P80-000	SPRING, CLUTCH RELEASE SETTING	001
6	22841-P20-000	BOOT, RELEASE FORK	001
7	23811-P36-000	HOLDER COMP., SPEEDOMETER GEAR	001
8	23820-P03-000	GEAR COMP., SPEEDOMETER	001
9	78410-ST7-003	SENSOR ASSY., SPEED (DENSO)	001
10	78411-ST7-003	JOINT	001
11	90638-689-000	CLIP, SPEEDOMETER GEAR	001
12	91304-PT0-000	O-RING, 14.8X1.9	001
13	91313-611-010	O-RING, 23.5X2	001
14	95701-06016-08	BOLT, FLANGE, 6X16	002
15	95701-06025-08	BOLT, FLANGE, 6X25	001
16	95701-08020-08	BOLT, FLANGE, 8X20	002

Block M-4 MAINSHAFT

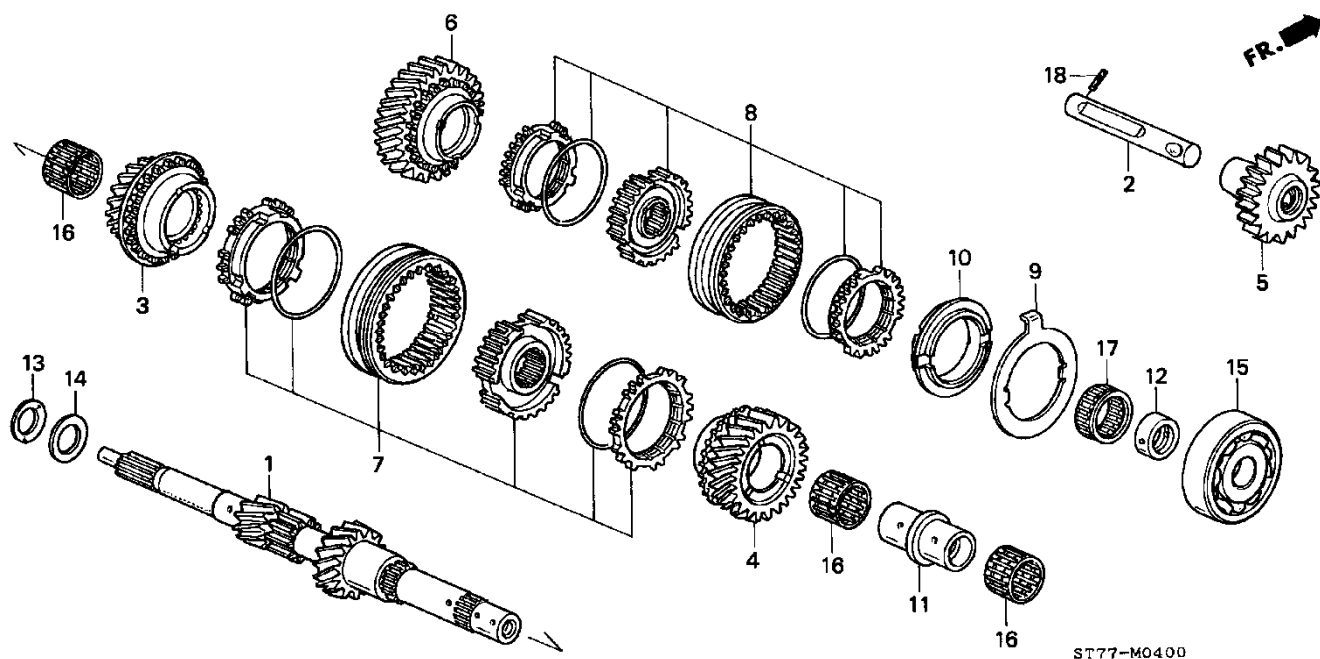


Refnr	Part Number	Part Description	Unit Qty
1	23210-P21-020	MAINSHAFT COMP.	001
2	23261-P80-900	SHAFT, REVERSE IDLE GEAR	001
3	23440-P21-000	GEAR COMP., MAINSHAFT THIRD	001
4	23451-P80-V00	GEAR, MAINSHAFT FOURTH	001
5	23540-P80-900	GEAR COMP., REVERSE IDLE	001
6	23581-P80-V00	GEAR, MAINSHAFT FIFTH	001
7	23623-P21-315	SLEEVE SET, SYNCHRONIZER (3-4)	001
8	23626-P21-335	SLEEVE SET, SYNCHRONIZER (5-R)	001
9	23646-P21-000	STOPPER, RING BRAKE	001
10	23647-P21-000	RING, TAPER CONE	001
11	23915-P21-000	COLLAR, DISTANCE, 31X38X56.5	001
12	23916-P21-M00	COLLAR, DISTANCE, 28X37X15	001
13	23927-PG2-A00	WASHER, SPRING, 28MM	001
14	23928-PS1-000	WASHER, 28MM	001
15	91004-P21-003	BEARING, ANGULAR BALL, 28X72X18	001
16	91104-P21-008	BEARING, NEEDLE, 38X43X26 (NTN)	003
17	91108-P21-008	BEARING, NEEDLE, 37X42X14.8 (NTN)	001
18	94305-40082	PIN, SPRING, 4X8	001

Block M-5 COUNTERSHAFT

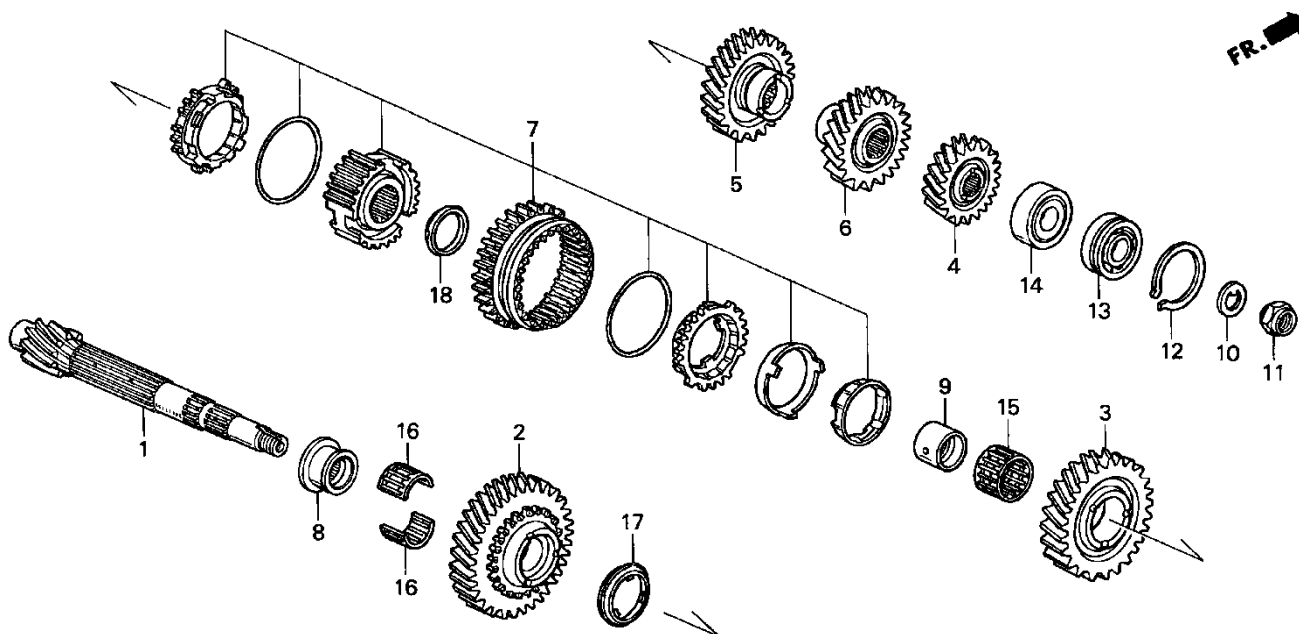


ST77-M0500

Refnr	Part Number	Part Description	Unit Qty
1	23221-P80-E30	COUNTERSHAFT	001
2	23421-P80-E30	GEAR, COUNTERSHAFT LOW	001
3	23431-P21-000	GEAR, COUNTERSHAFT SECOND	001
4	23461-P80-V00	GEAR, COUNTERSHAFT FIFTH	001
5	23471-P21-000	GEAR, COUNTERSHAFT THIRD	001
6	23481-P80-V00	GEAR, COUNTERSHAFT FOURTH	001
7	23521-P21-315	SLEEVE SET, SYNCHRONIZER (1-2)	001
8	23914-P80-E30	COLLAR, DISTANCE, 36.5X42X30	001
9	23918-P21-010	COLLAR, DISTANCE, 36.5X42X29 (0.07-0.09)	001
10	23926-P21-000	WASHER, SPRING, 23MM	001
11	90202-PH8-000	NUT, HEX., 23MM	001
12	90603-PL3-000	RING, SNAP, 52MM	001
13	91003-P21-003	BEARING, BALL, 25X52X14/15 (NTN)	001
14	91102-P80-003	BEARING, NEEDLE, 25X52.2X15	001
15	91105-P21-003	BEARING, NEEDLE, 42X47X24	001
16	91107-P80-E31	BEARING, NEEDLE, 42X47X20	002
17	91211-P21-008	DAMPER, FRICTION (LOW)	001
18	91212-P21-008	DAMPER, FRICTION (SECOND)	001

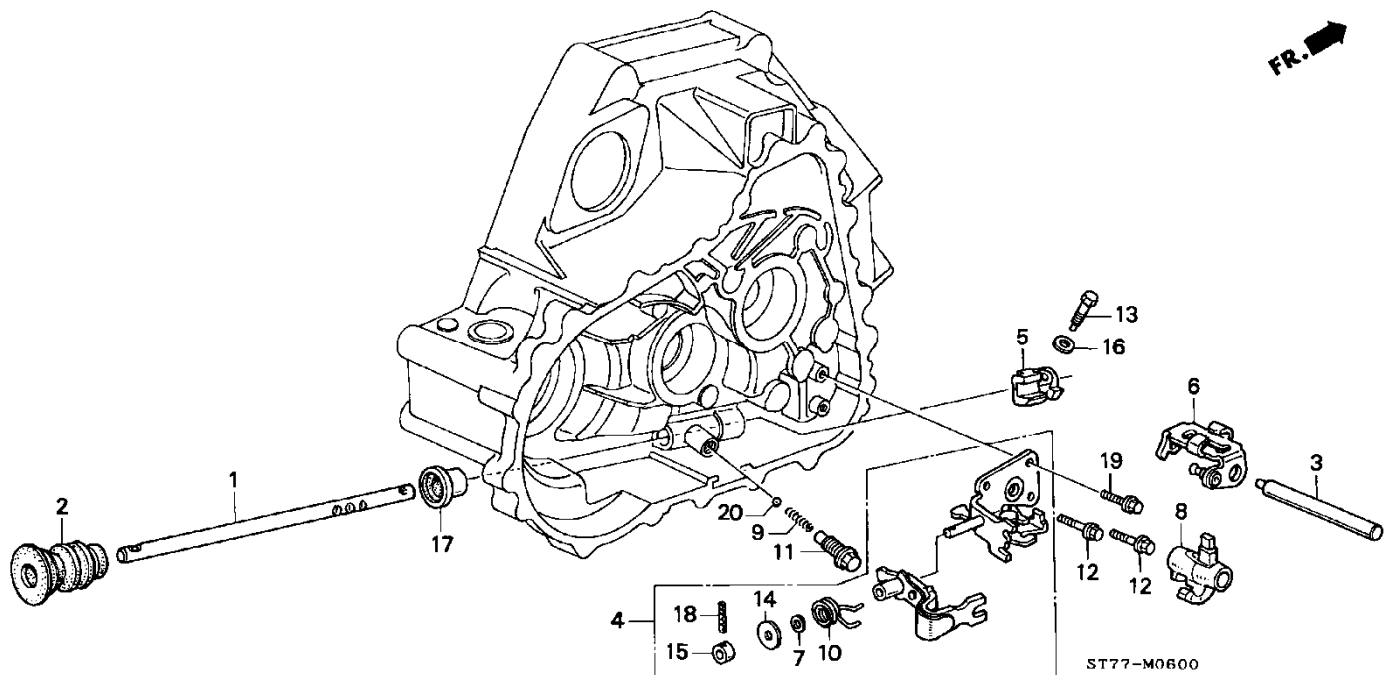

Refnr	Part Number	Part Description	Unit Qty
1	24311-PS1-000	ROD, GEARSHIFT	001
2	24316-PS1-000	BOOT, SHIFT ROD	001
3	24351-PS1-000	SHAFT, SHIFT PIECE	001
4	24400-P21-020	HOLDER ASSY., CHANGE	001
5	24411-PB6-010	PIECE, CHANGE	001
6	24432-P21-000	INTERLOCK COMP.	001
7	24435-689-000	SHIM A, SELECT ARM, 10.1X16X0.8	001
7	24436-689-000	SHIM B, SELECT ARM, 10.1X16X1.0	001
7	24437-689-000	SHIM C, SELECT ARM, 10.1X16X1.2	001
7	24438-689-000	SHIM D, SELECT ARM, 10.1X16X1.4	001
7	24439-689-000	SHIM E, SELECT ARM, 10.1X16X1.6	001
8	24440-P21-000	PIECE COMP., GEARSHIFT	001
9	24452-P20-000	SPRING, BALL SETTING	001
10	24457-PB6-020	SPRING, SELECT RETURN	001
11	24519-PB6-000	SCREW, BALL SPRING SETTING	001
12	90028-PB6-010	BOLT, SPECIAL, 6X22.5	002
13	90029-611-010	BOLT, HEX., 8X24	001
14	90401-689-010	WASHER, 10MM	001
15	90403-689-000	COLLAR, LOCK	001
16	90412-679-000	WASHER, CONICAL SPRING, 8MM	001
17	91215-689-013	OIL SEAL, 14X25X16	001
18	94305-30162	PIN, SPRING, 3X16	001
19	95701-06016-08	BOLT, FLANGE, 6X16	001
20	96211-10000	BALL, STEEL, #10 (5/16)	001

Block M-7 SHIFT FORK

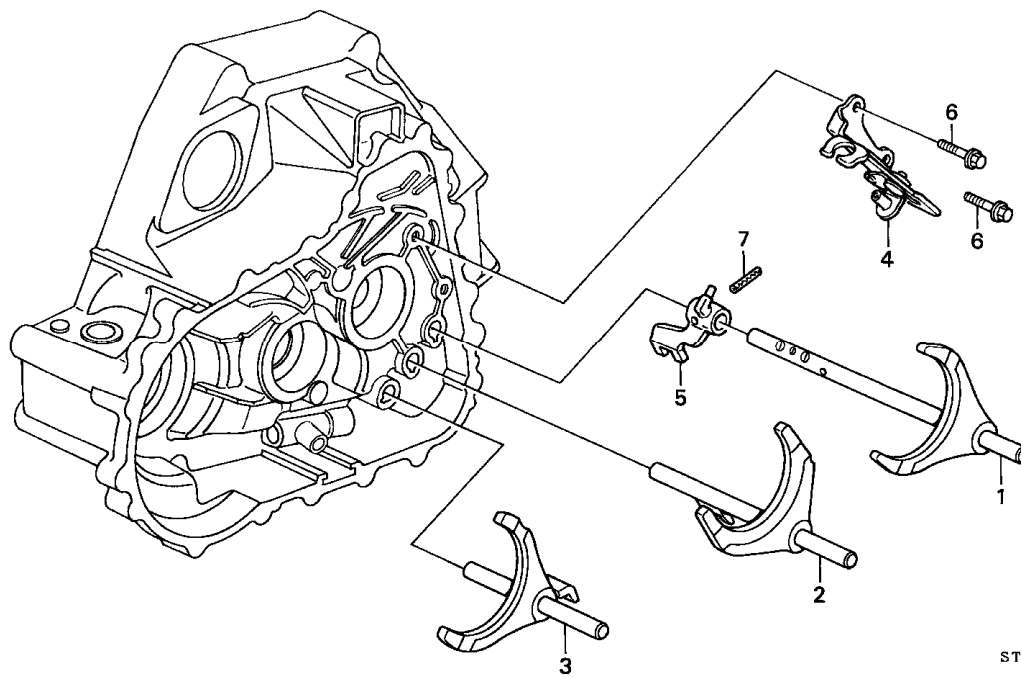


FR.

ST77-M0700

Refnr	Part Number	Part Description	Unit Qty
1	24201-P80-000	FORK SUB COMP., FIFTH-REVERSE SHIFT	001
2	24210-P80-V00	FORK COMP., GEARSHIFT (3-4)	001
3	24220-P80-000	FORK COMP., GEARSHIFT (1-2)	001
4	24230-P21-010	HOLDER COMP., REVERSE CHANGE	001
5	24243-P21-000	PIECE, FIFTH & REVERSE SHIFT	001
6	90028-PB6-010	BOLT, SPECIAL, 6X22.5	002
7	94305-50222	PIN, SPRING, 5X22	001

Block M-8 DIFFERENTIAL

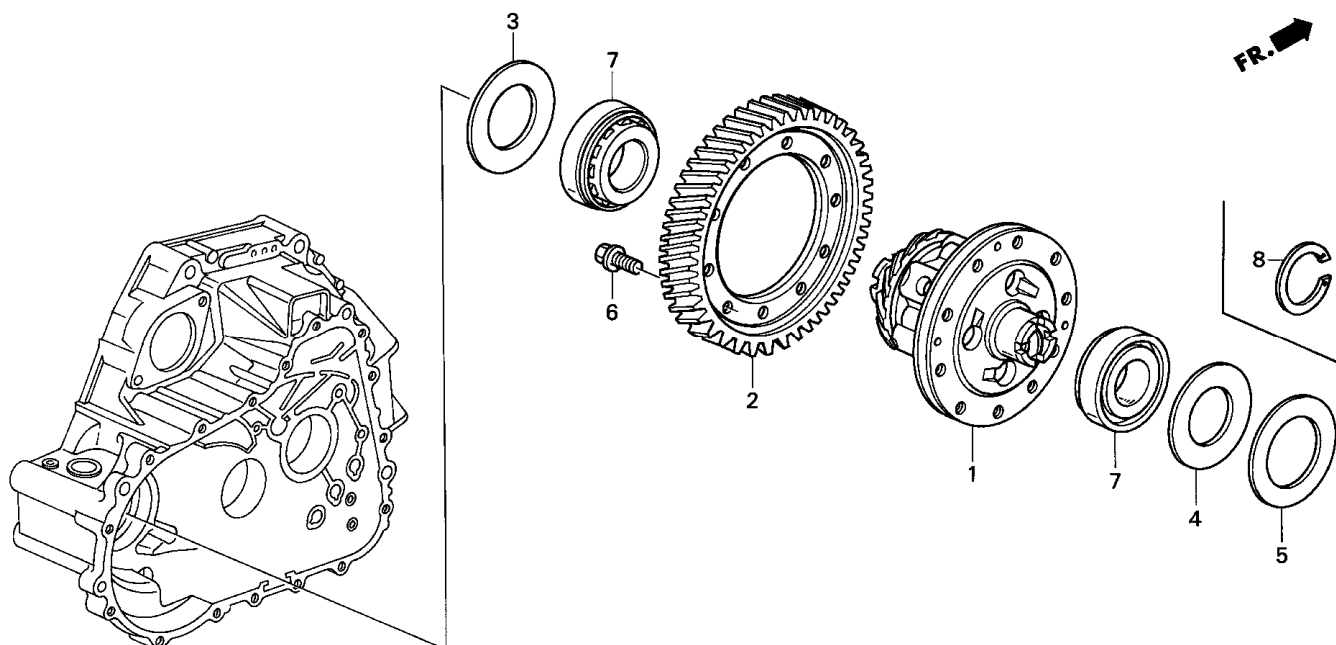


ST77-M0800 A

Refnr	Part Number	Part Description	Unit Qty
1	41200-P80-003	DIFFERENTIAL ASSY., HELICAL LIMITED SLIP	001
2	41233-P80-E30	GEAR, FINAL DRIVEN (67T)	001
3	41381-P80-000	SPACER, 41X80X2.5	001 ('98)
4	41382-P80-000	SPACER, 41X80X2.0	001 ('98)
5	41460-P5D-000	SHIM AA, 44X79.5 (0.66)	001 ('98)
5	41461-P5D-000	SHIM AB, 44X79.5 (1.17)	001 ('98)
5	41462-P5D-000	SHIM AC, 44X79.5 (1.20)	001 ('98)
5	41463-P5D-000	SHIM AD, 44X79.5 (1.23)	001 ('98)
5	41464-P5D-000	SHIM AE, 44X79.5 (1.26)	001 ('98)
5	41465-P5D-000	SHIM AF, 44X79.5 (1.29)	001 ('98)
5	41466-P5D-000	SHIM AG, 44X79.5 (1.32)	001 ('98)
5	41467-P5D-000	SHIM AH, 44X79.5 (1.35)	001 ('98)
5	41468-P5D-000	SHIM AI, 44X79.5 (1.38)	001 ('98)
5	41469-P5D-000	SHIM AJ, 44X79.5 (1.41)	001 ('98)
5	41470-P5D-000	SHIM AK, 44X79.5 (1.44)	001 ('98)
5	41471-P5D-000	SHIM AL, 44X79.5 (1.47)	001 ('98)
5	41472-P5D-000	SHIM AM, 44X79.5 (1.50)	001 ('98)
5	41473-P5D-000	SHIM AN, 44X79.5 (1.53)	001 ('98)
5	41474-P5D-000	SHIM AO, 44X79.5 (1.56)	001 ('98)
5	41475-P5D-000	SHIM AP, 44X79.5 (1.59)	001 ('98)
5	41476-P5D-000	SHIM AQ, 44X79.5 (1.62)	001 ('98)
5	41477-P5D-000	SHIM AR, 44X79.5 (1.65)	001 ('98)
5	41478-P5D-000	SHIM AS, 44X79.5 (1.68)	001 ('98)
5	41479-P5D-000	SHIM AT, 44X79.5 (1.71)	001 ('98)
5	41480-P5D-000	SHIM AU, 44X79.5 (1.74)	001 ('98)
5	41481-P5D-000	SHIM AV, 44X79.5 (1.77)	001 ('98)
5	41482-P5D-000	SHIM AW, 44X79.5 (1.80)	001 ('98)
5	41483-P5D-000	SHIM AX, 44X79.5 (1.83)	001 ('98)
6	90017-P80-J00	BOLT, SPECIAL, 10MM	010
7	91005-P80-003	BEARING A, TAPER, 40X80X17 (NTN)	002 ('98)
7	91005-P80-E31	BEARING, BALL, 40X80X18/19.5 (NTN)	002 ('98-'00)
8	41441-PL3-B00	SHIM A, 80MM (1.0)	001 ('98-'00)
8	41442-PL3-B00	SHIM B, 80MM (1.1)	001 ('98-'00)
8	41443-PL3-B00	SHIM C, 80MM (1.2)	001 ('98-'00)
8	41444-PL3-B00	SHIM D, 80MM (1.3)	001 ('98-'00)
8	41445-PL3-B00	SHIM E, 80MM (1.4)	001 ('98-'00)
8	41446-PL3-B00	SHIM F, 80MM (1.5)	001 ('98-'00)
8	41447-PL3-B00	SHIM G, 80MM (1.6)	001 ('98-'00)
8	41448-PL3-B00	SHIM H, 80MM (1.7)	001 ('98-'00)
8	41449-PL3-B00	SHIM J, 80MM (1.8)	001 ('98-'00)
8	41450-PL3-B00	SHIM K, 80MM (1.05)	001 ('98-'00)
8	41451-PL3-B00	SHIM L, 80MM (1.15)	001 ('98-'00)
8	41452-PL3-B00	SHIM M, 80MM (1.25)	001 ('98-'00)
8	41453-PL3-B00	SHIM N, 80MM (1.35)	001 ('98-'00)


8	41454-PL3-B00	SHIM P, 80MM (1.45)	001	('98-'00)
8	41455-PL3-B00	SHIM Q, 80MM (1.55)	001	('98-'00)
8	41456-PL3-B00	SHIM R, 80MM (1.65)	001	('98-'00)
8	41457-PL3-B00	SHIM S, 80MM (1.75)	001	('98-'00)

Block B-1 AIR CLEANER

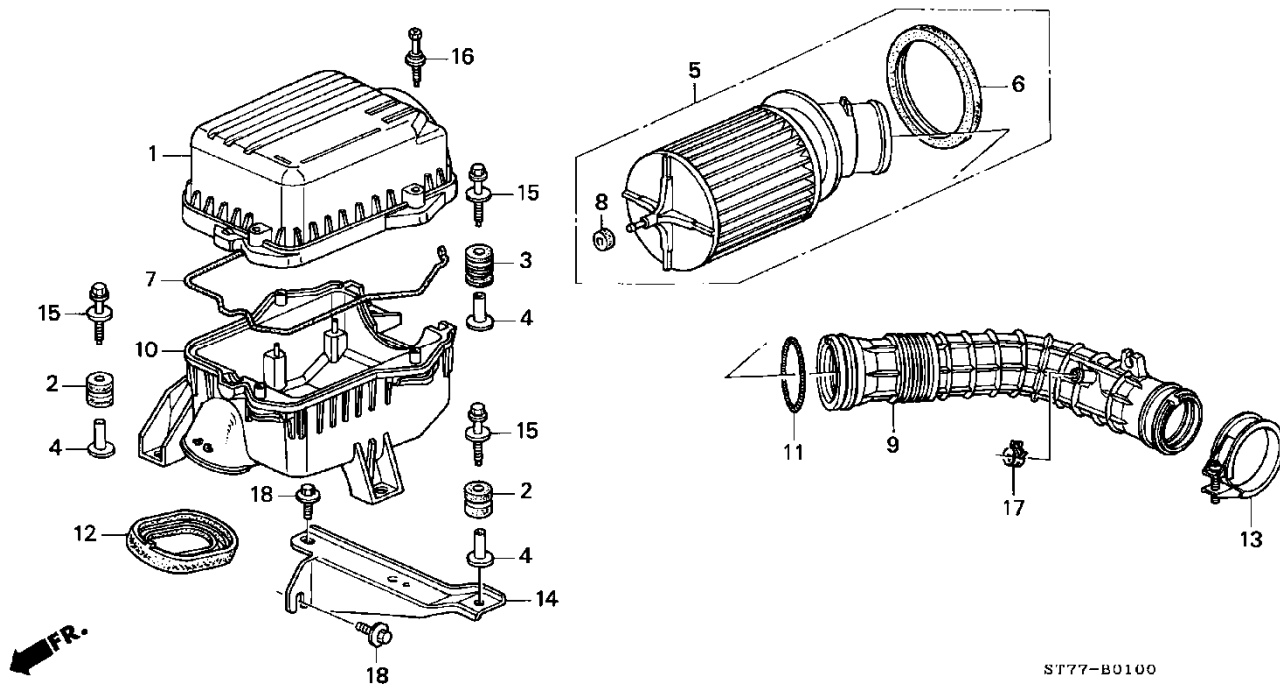


Refnr	Part Number	Part Description	Unit Qty
1	17210-P72-000	COVER COMP., AIR CLEANER	001
2	17212-PN3-000	RUBBER, AIR CLEANER MOUNTING	002
3	17212-P07-000	RUBBER, AIR CLEANER MOUNTING	001
4	17216-PN3-000	COLLAR, AIR CLEANER MOUNTING	003
5	17220-P72-000	ELEMENT ASSY., AIR CLEANER	001
6	17221-P72-300	RUBBER, ELEMENT CUSHION	001
7	17222-P72-000	RUBBER, AIR CLEANER SEAL	001
8	17223-P72-300	RUBBER, CLEANER ELEMENT MOUNTING	001
9	17228-P73-000	TUBE, AIR FLOW	001
10	17241-P72-000	CASE COMP., AIR CLEANER	001
11	17244-P72-000	SPRING, AIR FLOW TUBE	001
12	17249-P72-000	RUBBER, AIR INTAKE SEAL	001
13	17315-PR7-A01	CLAMP, AIR FLOW TUBE	001
14	60616-ST7-000ZZ	STAY, AIR CLEANER	001
15	90001-P0A-000	BOLT-WASHER, SPECIAL, 6X35	003
16	90091-P36-000	BOLT-WASHER, 5X28	003
17	91405-PG7-003	CLIP, HOSE (D13)	001
18	93405-06016-08	BOLT-WASHER, 6X16	002

Block B-1-5 RESONATOR CHAMBER

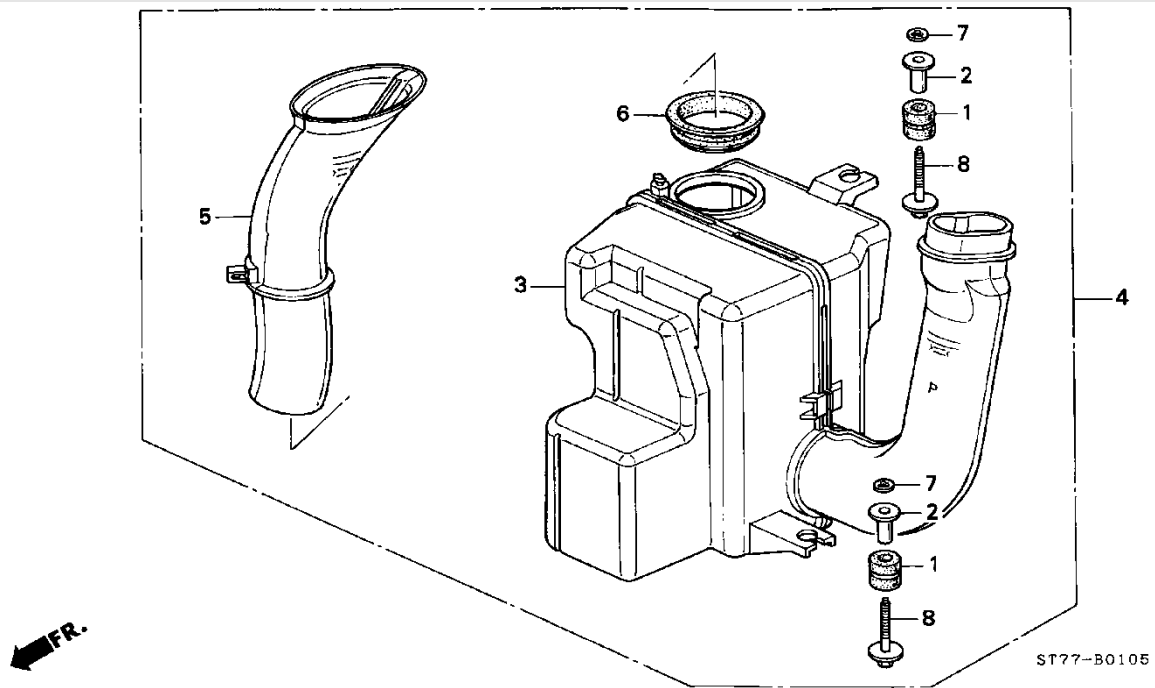

Refnr	Part Number	Part Description	Unit Qty
1	17212-PN3-000	RUBBER, AIR CLEANER MOUNTING	002
2	17216-PN3-000	COLLAR, AIR CLEANER MOUNTING	002
3	17230-P73-000	CHAMBER COMP., RESONATOR	001
4	17250-P73-000	TUBE ASSY., AIR IN.	001
5	17252-P73-000	TUBE B, AIR INTAKE	001
6	17253-P72-000	RUBBER, INTAKE SEAL	001
7	75353-671-000	LOCK, SCREW	002
8	90001-P0A-000	BOLT-WASHER, SPECIAL, 6X35	002


Block B-1-10 PURGE CONTROL SOLENOID VALVE (KG)

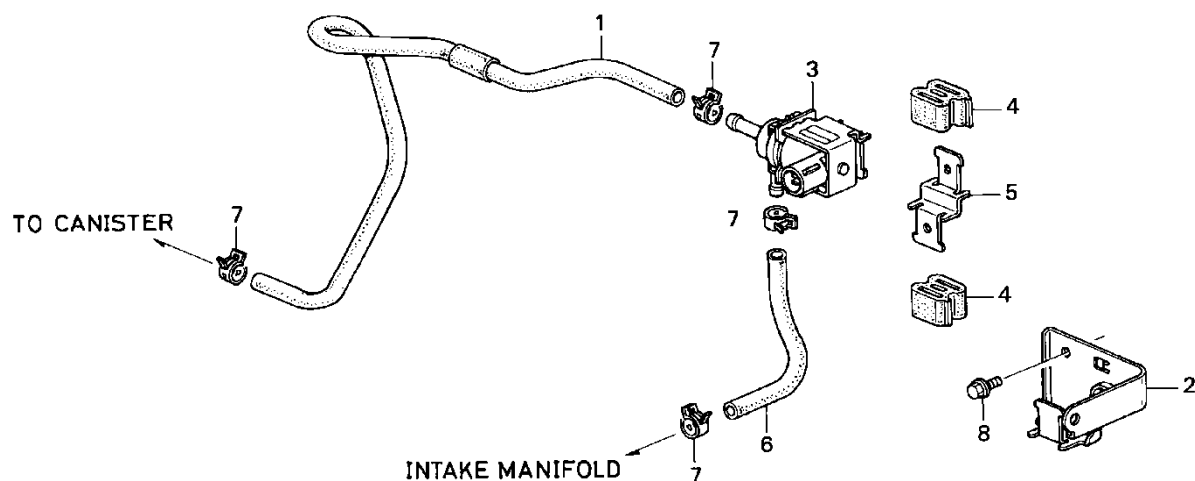

ST77-B0110

Refnr	Part Number	Part Description	Unit Qty
1	17725-ST7-G00	HOSE, FUEL PURGE	001
2	36161-P73-A00	BRACKET, DEVICE	001
3	36162-P73-A01	VALVE, PURGE CONTROL SOLENOID	001
4	36166-P0A-A01	RUBBER, MOUNTING	002
5	36211-P73-A01	STAY, PURGE CONTROL SOLENOID	001
6	36165-P73-A00	HOSE, PURGE	001
7	95002-41250-04	CLAMP, TUBE (D12.5)	004
8	95701-06012-08	BOLT, FLANGE, 6X12	001


Block B-1-11 PURGE CONTROL SOLENOID VALVE (KE)

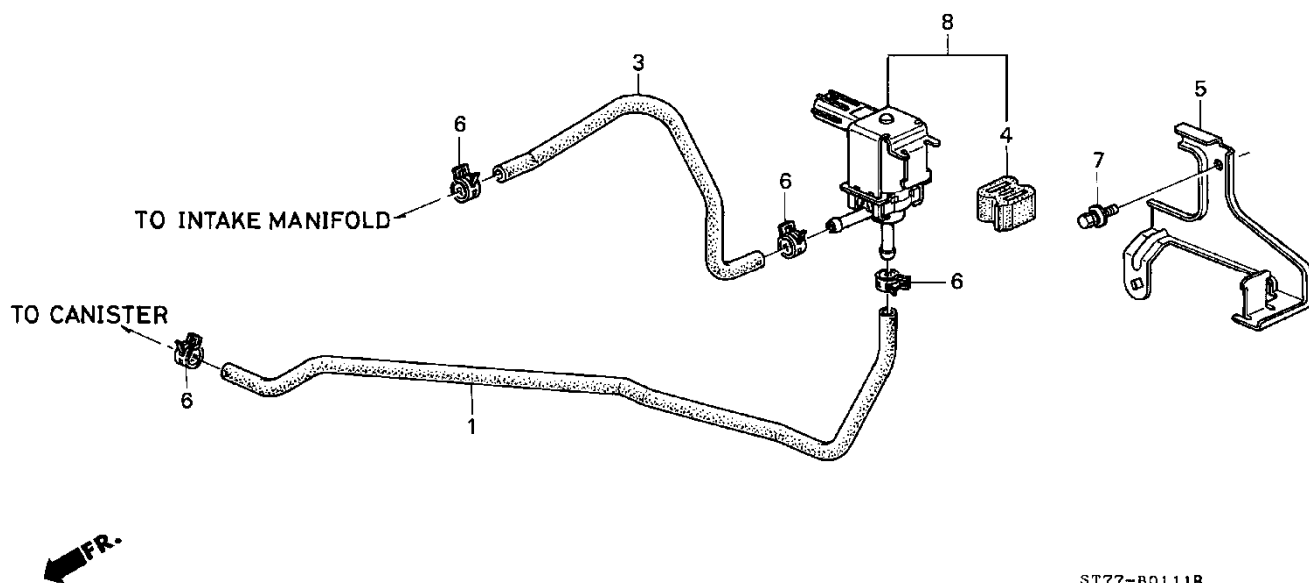

ST77-B0111B

Refnr	Part Number	Part Description	Unit Qty
1	17725-ST7-E00	HOSE, FUEL PURGE	001
3	36165-P73-E00	HOSE, PURGE	001
4	36166-P0A-A01	RUBBER, MOUNTING	001
5	36213-P3F-T01	STAY, PURGE CUT CONTROL	001
6	95002-41250-04	CLAMP, TUBE (D12.5)	004
7	95701-06012-08	BOLT, FLANGE, 6X12	001
8	36160-P8C-A01	VALVE ASSY., PURGE CONTROL SOLENOID	001


Block B-2 EXHAUST PIPE

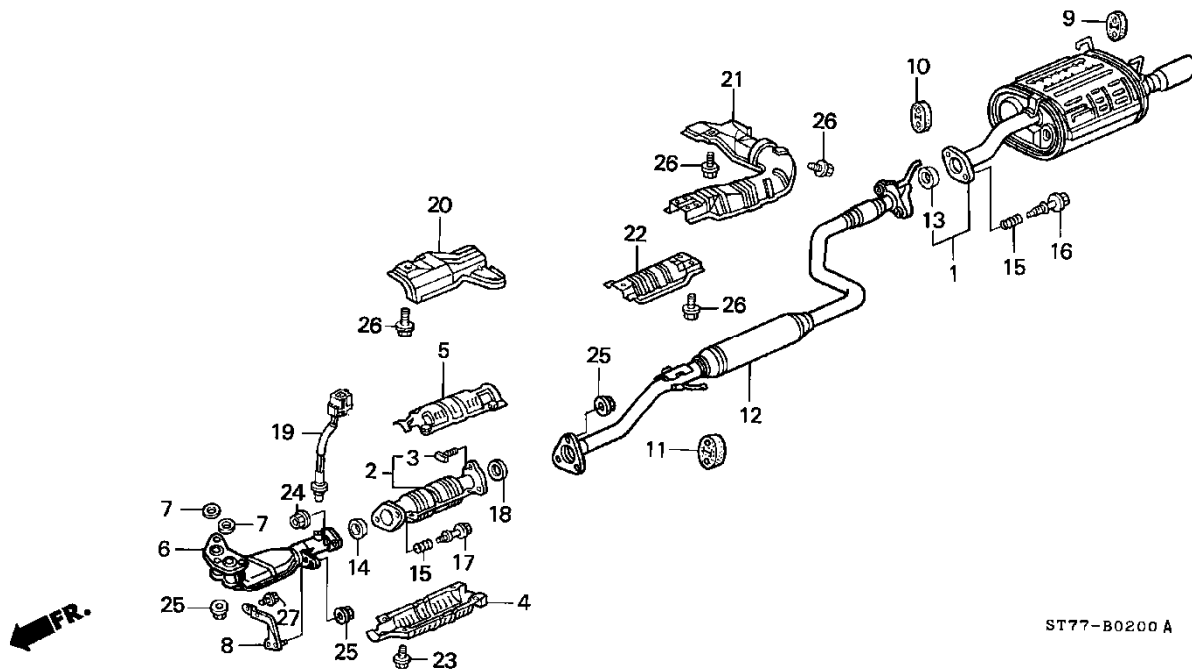

ST77-B0200 A

Refnr	Part Number	Part Description	Unit Qty
1	18030-ST7-Z61	SILENCER SET, EX.	001
2	18160-P73-G00	CONVERTER COMP. (ANE SC7)	001
3	18176-P08-003	BOLT, CONVERTER	003
4	18181-PR4-A01	COVER, LOWER	001
5	18182-PR4-A01	COVER, UPPER	001
6	18210-ST7-G61	PIPE A, EX.	001
7	18212-SB2-961	GASKET, EX. PIPE (ISHINO)	002
8	18213-ST7-A60	STAY, EX. MOUNTING	001
9	18215-SA0-000	RUBBER, SILENCER MOUNTING (74X45X22)	002
10	18215-SV4-A70	RUBBER, EX. MOUNTING	001
11	18215-671-000	RUBBER, SILENCER MOUNTING (74X53X22)	002
12	18220-ST7-R60	PIPE B, EX.	001
13	18229-SH3-X30	GASKET, EX. FLEXIBLE (50.8MM-64MM)	001
14	18229-S04-X12	GASKET, EX. FLEXIBLE (50.8MM-64MM)	001
15	18230-SV4-000	SPRING, FLEXIBLE JOINT	004
16	18231-SR3-A22	BOLT B, FLEXIBLE JOINT	002
17	18231-SR3-J01	BOLT A, FLEXIBLE JOINT	002
18	18393-SH3-S00	GASKET, PRE-CHAMBER (52.5MM-53.5MM)	001
19	36531-P73-G01	SENSOR, OXYGEN	001
20	74601-SR3-A00	PLATE, FLOOR HEAT BAFFLE	001
21	74651-SR3-000	PLATE, FUEL TANK BAFFLE	001
22	74653-SR3-000	SENSOR ASSY., VENT PRESSURE	001
23	90023-PK1-000	BOLT, FLANGE, 6X10	004
24	90115-659-003	NUT, SELF-LOCK, 8MM	002
25	90212-SA5-003	NUT, SELF-LOCK, 10MM	008
26	93405-06012-08	BOLT-WASHER, 6X12	009
27	95801-10020-08	BOLT, FLANGE, 10X20	001


Block B-3 FUEL TANK

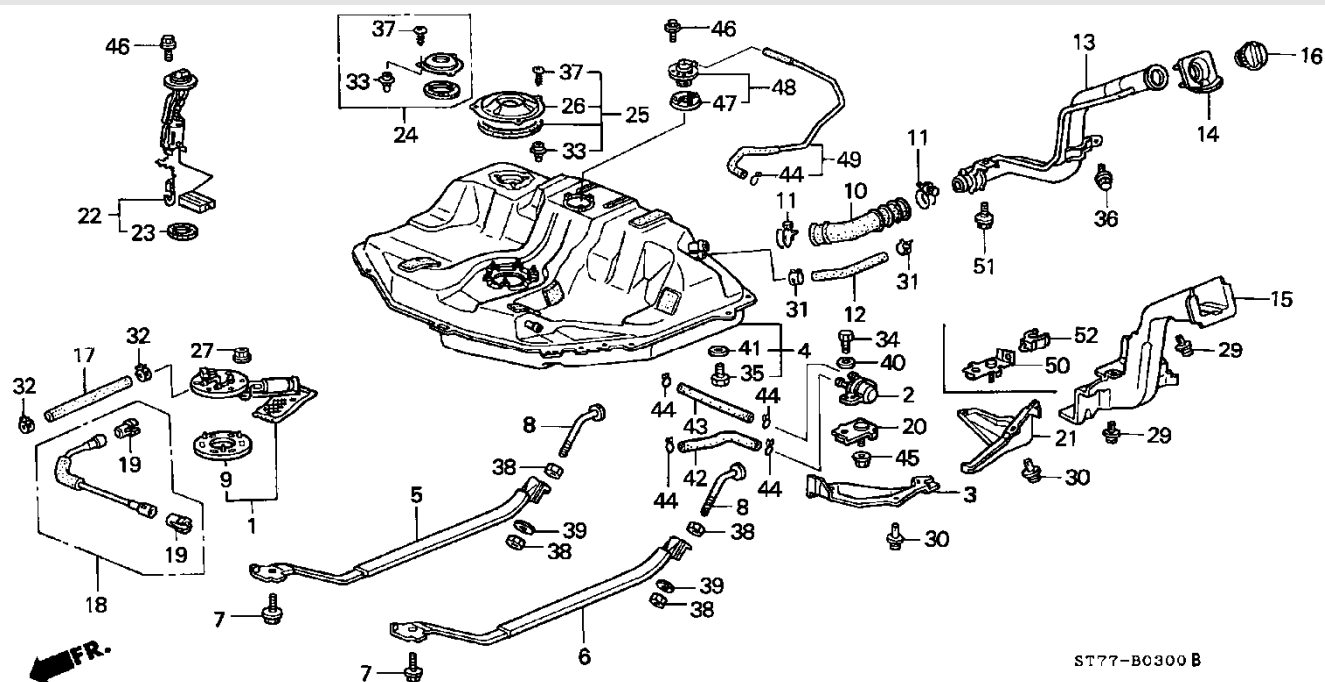

Refnr	Part Number	Part Description	Unit Qty
1	17040-ST7-A33	PUMP SET, FUEL	001 ('98-'99 (LH) / ('00)
1	17040-ST7-933	PUMP SET, FUEL (TOYO)	001 ('98-'99) (RH)
2	17371-S04-003	VALVE, TWO WAY (TOYO)	001
3	17372-SR3-010	COVER, TWO WAY VALVE	001
4	17500-ST7-R02	TANK COMP., FUEL	001 (-'98)
4	17500-ST7-R03	TANK COMP., FUEL	001 ('98-'99)
4	17500-ST7-R04	TANK COMP., FUEL	001 ('00)
5	17521-SR3-000	BAND ASSY., R. FUEL TANK MOUNTING	001
6	17522-SR3-000	BAND ASSY., L. FUEL TANK MOUNTING	001
7	17525-SM4-000	BOLT-WASHER, 10X35	002
8	17525-SR3-000	BOLT, FUEL TANK MOUNTING	002
9	17574-SE0-000	PACKING, BASE	001
10	17651-ST7-000	TUBE, FILLER NECK	001 ('98-'99)
10	17651-ST7-G00	TUBE, FILLER NECK	001 ('00)
11	17652-SA5-000	CLIP, FILLER TUBE	002
12	17653-SR7-000	TUBE, BREATHER	001 ('98-'99)
12	17653-SR7-G00	TUBE, BREATHER	001 ('00)
13	17660-ST7-G01	PIPE COMP., FUEL FILLER	001
14	17662-S04-003	PACKING, FUEL FILLER (WITH CLIP)	001
15	17668-ST7-Z00	COVER, FUEL FILLER PIPE	001
16	17670-SM1-A03	CAP COMP., FUEL FILLER (STANT)	001
17	17704-SR3-930	HOSE, FUEL PIPE RETURN	001
18	17710-SR3-A31	TUBE COMP., FUEL JOINT (TOKAI)	001
19	17711-ST0-003	RETAINER (YELLOW) (TOKAI)	002
20	17726-SR3-930	BRACKET, TWO WAY VALVE	001 ('98-'99)
21	17733-SR3-020	PROTECTOR, FUEL FILLER PIPE	001
22	37800-ST7-A01	METER UNIT, FUEL	001
23	37801-ST7-A01	PACKING, BASE	001
24	74660-SH3-003	CAP ASSY., FLOOR MAINTENANCE HOLE	001
25	74660-SH7-013	CAP ASSY., FLOOR MAINTENANCE HOLE	001
26	74661-SH7-023	CAP, FLOOR MAINTENANCE HOLE	001
27	90301-SE0-J00	NUT, FLANGE, 6MM	006
29	90657-SA5-003	CLIP, SIDE APRON MOLDING	004
30	90657-SH3-013	CLIP, TWO WAY VALVE COVER	006
31	90700-SB0-003	CLIP, AIR BLEED TUBE	002
32	91406-SL4-931	CLAMP, FUEL HOSE (D10.5)	002
33	91601-SH3-013	GROMMET, SCREW, 5MM (BLACK)	006
34	92301-05012-0A	BOLT, RECESSED, 5X12	001
35	92800-12000	BOLT, DRAIN PLUG, 12MM	001
36	93405-06016-04	BOLT-WASHER, 6X16	001
37	93901-25220	SCREW, TAPPING, 5X12	006
38	94001-08080-0S	NUT, HEX., 8MM	004
39	94101-08800	WASHER, PLAIN, 8MM	002
40	94103-05800	WASHER, PLAIN, 5MM	001

41	94109-12000	WASHER, DRAIN PLUG, 12MM	001
42	95001-55150-60	TUBE, FUEL, 5.5X150 (95001-55001-60M)	001
43	95001-55190-60	TUBE, FUEL, 5.5X190 (95001-55001-60M)	001 ('98-'99)
44	95002-02104	CLIP, TUBE (B10)	004 ('98-'99)
44	95002-02104	CLIP, TUBE (B10)	003 ('00)
45	94050-06080	NUT, FLANGE, 6MM	001
46	90101-S84-000	BOLT-WASHER, 5X10	003 ('98-'99)
46	90101-S84-000	BOLT-WASHER, 5X10	006 ('00)
47	17551-S84-A01	PACKING	001 ('00)
48	17570-S04-G01	VALVE, FUEL CUT	001 ('00)
49	17710-ST7-G01	TUBE COMP., VENT	001 ('00)
50	17726-ST7-G00	BRACKET, TWO WAY VALVE	001 ('00)
51	93405-06016-04	BOLT-WASHER, 6X16	001 ('98-'99)
51	90150-S04-003	BOLT, EARTH, 6X16	001 ('00)
52	91594-SR3-911	CLAMP, PURGE HOSE	001 ('00)


Block B-4 FUEL PIPE

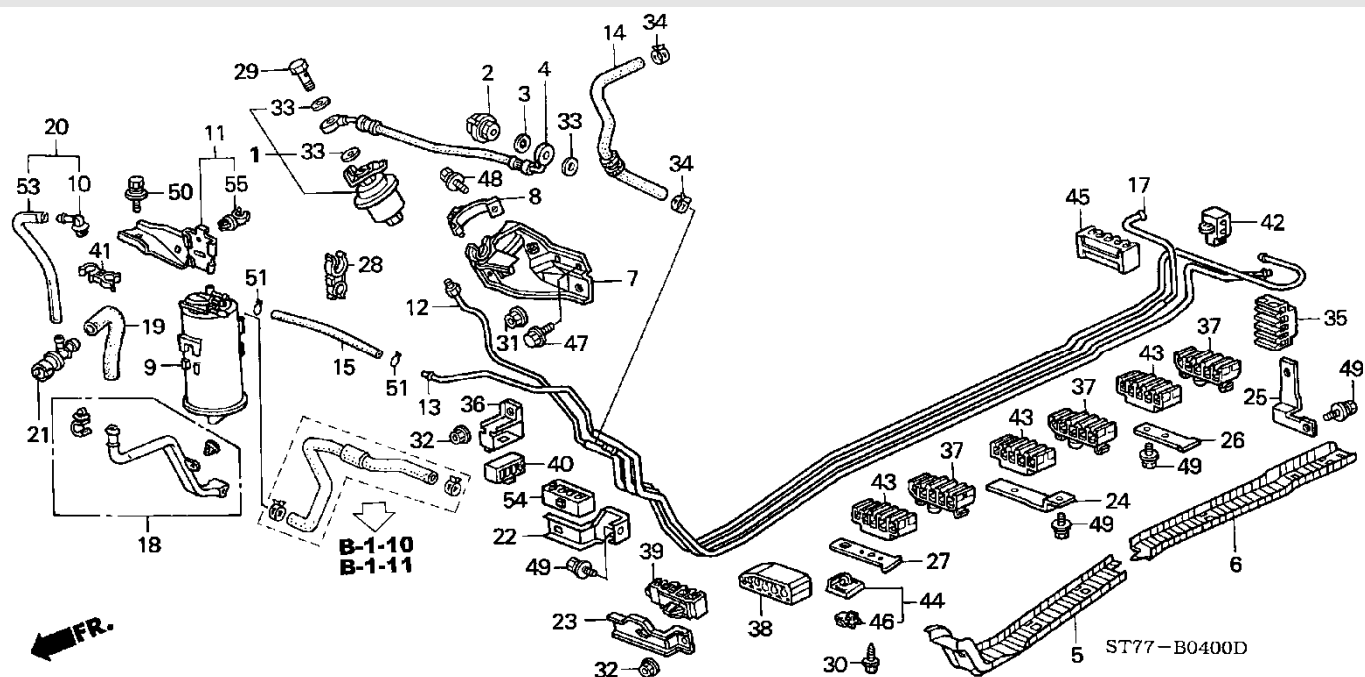


Refnr	Part Number	Part Description	Unit Qty
1	16010-ST5-933	STRAINER SET, FUEL (TOYO ROKI)	001
2	16680-PE7-661	DAMPER ASSY., PULSATION	001
3	16705-PD1-003	GASKET, SILENCER	001
4	16722-P75-A01	HOSE COMP., FUEL FEED	001
5	16913-SR3-000	COVER, FR. FUEL PIPE	001
6	16914-SR3-000	COVER, RR. FUEL PIPE	001
7	16918-ST7-930	STAY, FUEL STRAINER	001
8	16919-ST7-930	BAND, FUEL STRAINER	001
9	17300-ST7-G31	CANISTER ASSY.	001
10	17306-ST7-003	JOINT, CANISTER	001
11	17358-ST7-932	BRACKET, CANISTER	001
12	17700-SR3-N30	PIPE COMP., FUEL FEED	001
13	17720-ST7-930	PIPE COMP., VENT	001
14	17723-ST7-J01	HOSE, PRESSURE REGULATOR RETURN	001
15	17724-ST7-930	TUBE, FUEL VENT	001
17	17740-ST7-A30	PIPE COMP., FUEL RETURN	001
18	17742-SR3-023	PIPE, CANISTER DRAIN JOINT	001
19	17743-SR3-A00	TUBE, CANISTER DRAIN	001
20	17744-ST7-933	TUBE, DRAIN (SUB)	001
21	17745-ST0-003	JOINT, CANISTER DRAIN	001
22	17761-SR3-010	STAY A, FUEL PIPE	001
23	17762-SR3-J00	STAY B, FUEL PIPE	001
24	17763-SR3-000	STAY C, FUEL PIPE	001
25	17764-ST7-L00	STAY D, FUEL PIPE	001
26	17765-SM4-000	STAY E, FUEL PIPE	001
27	17765-ST7-000	STAY F, FUEL PIPE	001
28	36027-P01-G01	CLAMP, TUBE (7.5MM-11.5MM)	001 (RH)
29	90021-P0A-003	BOLT, SEALING, 12MM	001
30	90164-S04-000	SCREW, TAPPING, 6X20	001
31	90301-SP0-003	NUT, PAINT CUTTING, 6MM	001
32	90361-SV4-003	NUT, PAINT CUTTING, 6MM	002
33	90428-PD6-003	WASHER, SEALING, 12MM	003
34	91406-SL4-931	CLAMP, FUEL HOSE (D10.5)	002
35	91590-SR3-J31	CLAMP J, FUEL PIPE	001
36	91591-SR3-010	CLIP A, BRAKE	001
37	91592-SR3-J32	CLAMP H, FUEL PIPE (SANOU)	003
38	91593-SR3-J31	CLAMP G, FUEL PIPE	001
39	91594-SR3-J32	CLAMP F, FUEL PIPE (SANOU)	001
40	91595-ST7-E01	CLIP A, FUEL PIPE	001
41	91595-ST7-003	CLIP, FUEL SUB TUBE	001
42	91597-SR3-003	CLAMP C, FUEL PIPE	001
43	91598-SR3-J32	CLAMP D, FUEL PIPE (SANOU)	003
44	91598-ST7-931	GROMMET, SCREW (6MM)	001
45	91599-SR3-J32	CLAMP E, FUEL PIPE	001

46	91599-S04-003	RETAINER, FUEL PIPE CLAMP	001
47	93403-06012-08	BOLT-WASHER, 6X12	002
48	93403-06016-08	BOLT-WASHER, 6X16	001
49	93405-06016-04	BOLT-WASHER, 6X16	004
50	93405-08016-08	BOLT-WASHER, 8X16	001
51	95002-02104	CLIP, TUBE (B10)	002
53	95003-23044-60	TUBE, VINYL, 8X12X440 (95003-23001-60M)	001
54	91596-SR3-J31	CLAMP B, FUEL PIPE	001
55	91598-ST7-003	CLAMP, SUB TUBE	001

Block B-5 RADIATOR (DENSO)

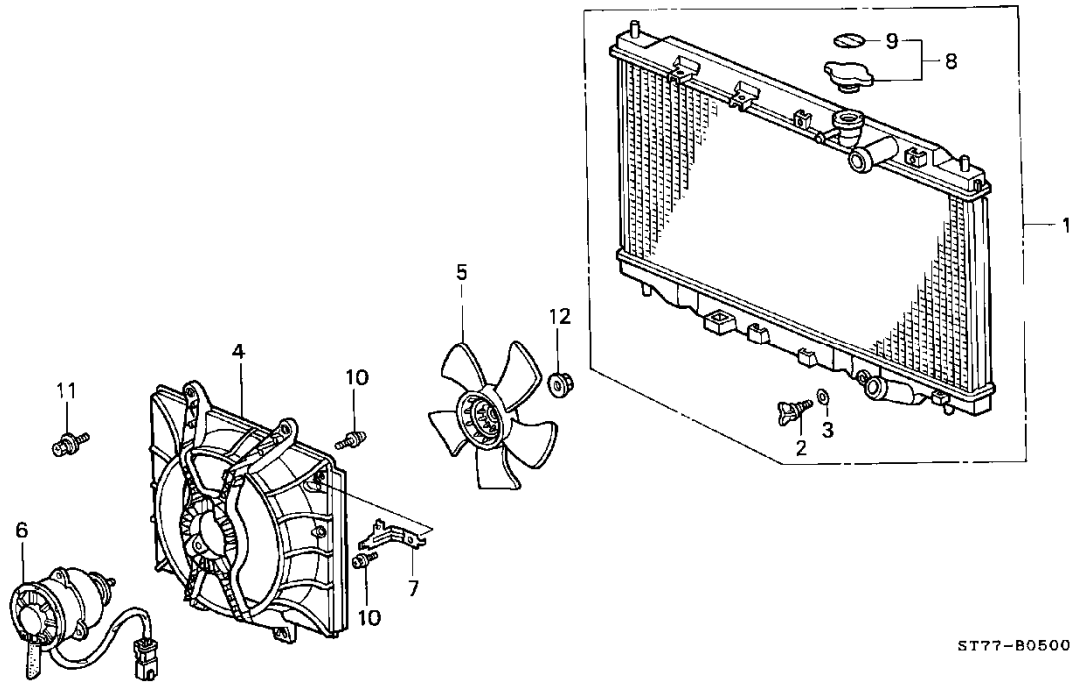


Refnr	Part Number	Part Description	Unit Qty
1	19010-P73-A03	RADIATOR COMP. (DENSO)	001
2	19011-PH1-621	BOLT, DRAIN (DENSO)	001
3	19012-671-300	PACKING, DRAIN (DENSO)	001
4	19015-P72-003	SHROUD COMP. (DENSO)	001
5	19020-PT0-003	FAN, COOLING (DENSO)	001
6	19030-P08-013	MOTOR, COOLING FAN (DENSO)	001
7	19033-P72-003	STAY, COUPLER	001
8	19045-P08-013	CAP COMP., RADIATOR (DENSO)	001 ('98)
8	19045-PAA-A01	CAP COMP., RADIATOR (DENSO)	001 ('99-'00)
9	19046-PV1-000	SEAL, CAP	001 ('98)
9	19046-PAA-A10	LABEL, RADIATOR CAP (VALEO)	001 ('99)
9	19046-PT5-P00	SEAL, CAP (PORTUGAL)	(1) ('99) (LH)
9	19046-PAA-A00	LABEL, RADIATOR CAP	001 ('00)
10	90041-P08-003	SCREW-WASHER, 4X11	004
11	90042-PH2-003	BOLT-WASHER, 6X16 (DENSO)	004
12	90043-PD2-003	NUT, HEX., 5MM (DENSO)	001

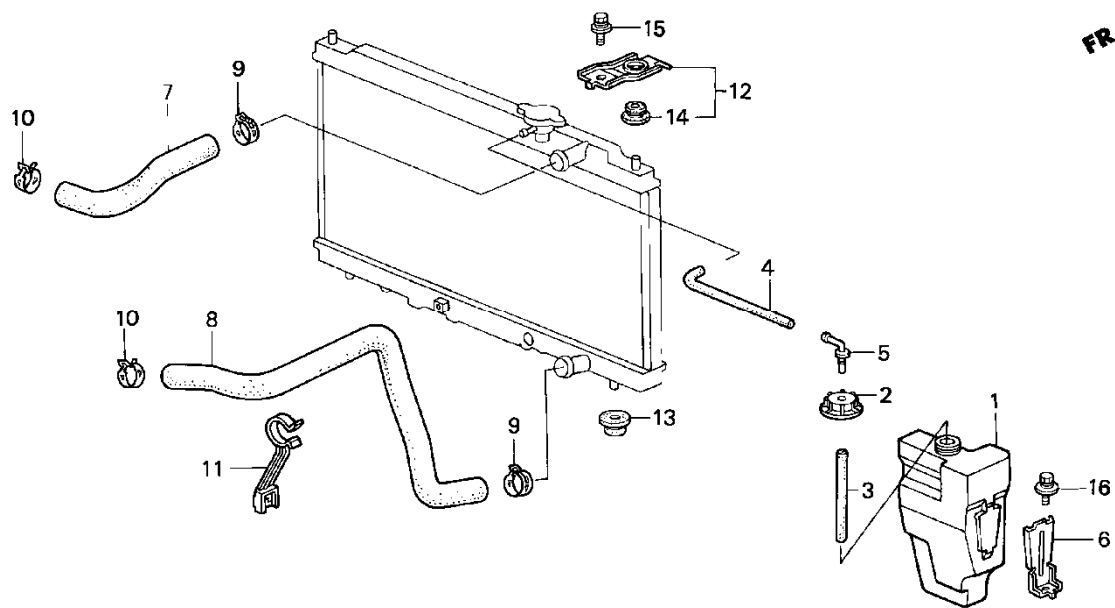

ST77-B0510


Refnr	Part Number	Part Description	Unit Qty
1	19101-P73-G00	TANK, RESERVE	001
2	19102-PM5-A00	CAP, RESERVE TANK	001
3	19103-PT0-000	HOSE, RESERVE TANK	001
4	19104-P08-000	TUBE, RESERVE TANK	001
5	19106-PA0-020	JOINT, RESERVE TANK	001
6	19115-P73-G00	BRACKET, RESERVE TANK	001
7	19501-P73-010	HOSE, WATER UPPER	001
8	19502-P72-000	HOSE, WATER LOWER	001
9	19511-PR3-003	CLIP, WATER HOSE (CHUO HATSUJO)	002
10	19511-P30-003	CLIP, WATER HOSE (CHUO HATSUJO)	002
11	19519-P54-003	CLAMP, WATER HOSE	001
12	74171-SK7-000	BRACKET, RADIATOR MOUNT UPPER	002
13	74172-SM4-000	CUSHION, RADIATOR MOUNTING LOWER	002
14	74173-SJ4-000	CUSHION, RADIATOR MOUNTING UPPER	002
15	93405-06016-04	BOLT-WASHER, 6X16	002
16	93405-06016-08	BOLT-WASHER, 6X16	001

Block B-6 BATTERY (LH)

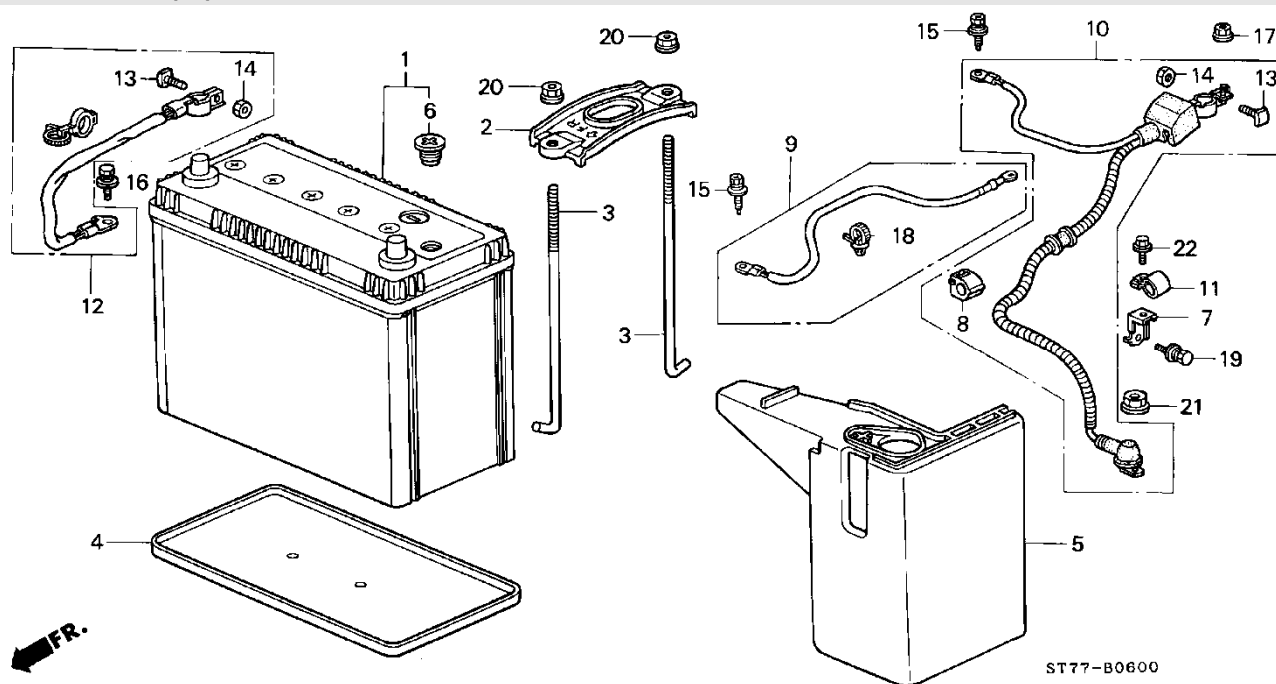


Refnr	Part Number	Part Description	Unit Qty
1	31500-SR3-G04	BATTERY ASSY. (55B24L<S>-MF) (YUASA)	001
1	31500-SR3-G51	BATTERY ASSY. (55B24L<S>-MF) (PANASONIC)	001
1	31500-SR3-G72	BATTERY ASSY. (55B24L<S>-MF) (YUASA)	001 ('00)
2	31512-SR3-000	PLATE, BATTERY SETTING	001
3	31513-SR3-000	BOLT, BATTERY SETTING	002
4	31521-SR3-000	BOX ASSY., BATTERY	001
5	31531-SR3-A00	COVER ASSY., BATTERY	001
6	31542-SA5-664	PLUG, VENT (MF) (YUASA)	006
6	31542-SA5-665	PLUG, VENT (MF) (PANASONIC)	006
6	31542-S04-E71	PLUG, VENT (MF) (YUASA)	006 ('00)
7	32115-P01-000	STAY, ENGINE WIRE HARNESS CLAMP	001
8	32116-P64-003	HOLDER, CORRUGATED (DARK BLUE) (13MM)	001
9	32230-ST7-A00	CORD, ABS FUSE BOX	001
10	32410-ST7-A22	CABLE ASSY., STARTER	001
11	32416-SR3-A00	CLAMP C, STARTER CABLE	001
12	32600-S04-A02	CABLE ASSY., BATTERY EARTH	001
13	32601-SK7-900	BOLT, BATTERY TERMINAL	002
14	32602-SK7-900	NUT, BATTERY TERMINAL	002
15	90130-SR3-003	BOLT, 5X13	002
16	90153-SE0-003	BOLT, EARTH, 6X12	001
17	90337-SJ4-003	NUT, A.L.B.	001
18	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	002
19	93403-06012-08	BOLT-WASHER, 6X12	001
20	94050-06080	NUT, FLANGE, 6MM	002
21	94070-08080	NUT-WASHER, 8MM	001
22	95701-06012-08	BOLT, FLANGE, 6X12	001

Block B-6-1 BATTERY (RH)

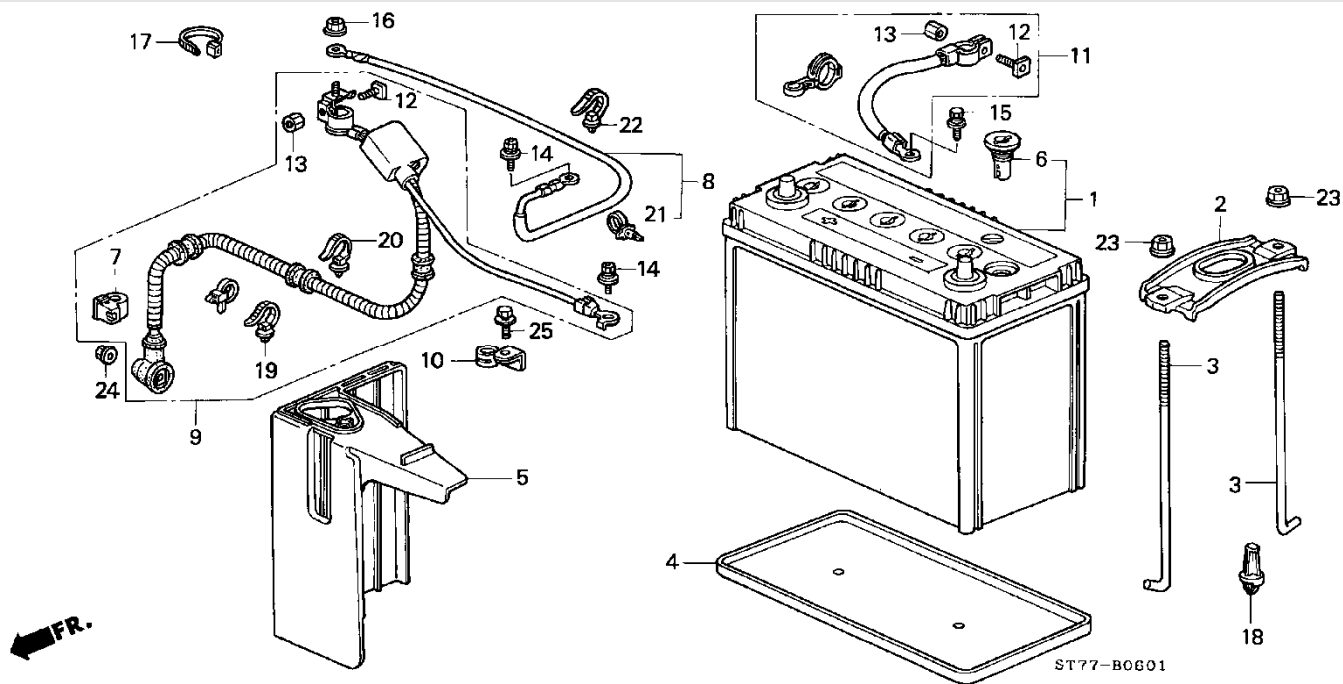

Refnr	Part Number	Part Description	Unit Qty
1	31500-SH3-G12	BATTERY ASSY. (55B24R<S>-MF) (YUASA)	001
1	31500-SH3-G51	BATTERY ASSY. (55B24R<S>-MF) (PANASONIC)	001
2	31512-SR3-000	PLATE, BATTERY SETTING	001
3	31513-SR3-000	BOLT, BATTERY SETTING	002
4	31521-SR3-000	BOX ASSY., BATTERY	001
5	31531-ST7-000	COVER ASSY., BATTERY	001
6	31542-SA5-664	PLUG, VENT (MF) (YUASA)	006
6	31542-SA5-665	PLUG, VENT (MF) (PANASONIC)	006
6	31542-S04-E71	PLUG, VENT (MF) (YUASA)	006 ('00)
7	32116-P64-003	HOLDER, CORRUGATED (DARK BLUE) (13MM)	001
8	32230-ST7-960	CORD, ABS FUSE BOX	001
9	32410-ST7-E10	CABLE ASSY., STARTER	001
10	32416-SR3-000	CLAMP C, STARTER CABLE	001
11	32600-S04-E02	CABLE ASSY., BATTERY EARTH	001
12	32601-SK7-900	BOLT, BATTERY TERMINAL	002
13	32602-SK7-900	NUT, BATTERY TERMINAL	002
14	90130-SR3-003	BOLT, 5X13	002
15	90153-SE0-003	BOLT, EARTH, 6X12	001
16	90337-SJ4-003	NUT, A.L.B.	001
17	90656-PB1-003	BAND, OIL HOSE	001
19	91540-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM)	001
20	91551-SW5-003	CLIP, HARNESS BAND (BROWN) (151MM)	001
21	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	001
22	91570-SH3-003	BAND, WIRE HARNESS (NATURAL)	001
23	94050-06080	NUT, FLANGE, 6MM	002
24	94070-08080	NUT-WASHER, 8MM	001
25	95701-06012-08	BOLT, FLANGE, 6X12	001


Block B-7 WIRE HARNESS (LH)

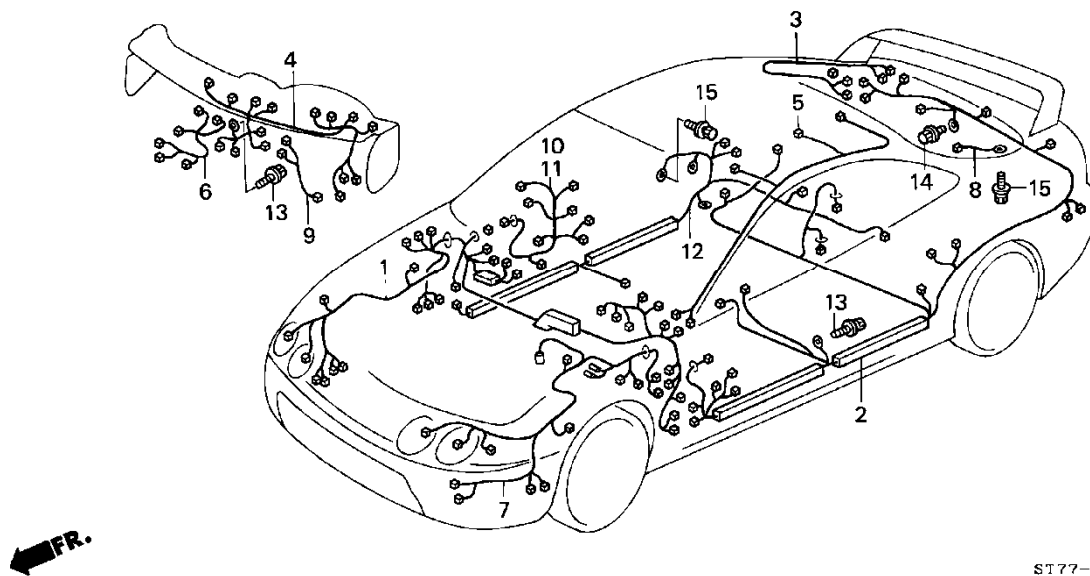

ST77-B0700

Refnr	Part Number	Part Description	Unit Qty
1	32100-ST7-G00	HARNESS, CABIN WIRE	001 ('98-'99) (SRS) (ABS)
1	32100-ST7-G01	HARNESS, CABIN WIRE	001 ('00) (SRS) (ABS)
1	32100-ST7-G10	HARNESS, CABIN WIRE	001 ('98-'99) (ABS)
1	32100-ST7-G11	HARNESS, CABIN WIRE	001 ('00) (ABS)
2	32108-ST7-G00	HARNESS, RR. WIRE	001 ('98-'99)
2	32108-ST7-G01	HARNESS, RR. WIRE	001 ('00)
3	32109-ST7-010	CORD, TAILGATE	001 ('98-'99)
3	32109-ST7-020	CORD, TAILGATE	001 ('00)
4	32117-ST7-G00	HARNESS, INSTRUMENT WIRE	001 ('98-'99)
4	32117-ST7-G01	HARNESS, INSTRUMENT WIRE	001 ('00)
5	32155-ST7-A00	CORD ASSY., INTERIOR	001
6	32157-ST7-020	SUB CORD A, HEATER	001
7	32200-ST7-G00	HARNESS, ENGINE ROOM WIRE	001 ('98-'99)
7	32200-ST7-G01	HARNESS, ENGINE ROOM WIRE	001 ('00)
8	32202-ST7-010	CORD, RR. DEFROSTER	001
9	32257-ST7-010	SUB CORD B, HEATER	001
10	32751-ST7-G00	HARNESS, DOOR WIRE (DRIVER SIDE)	001 ('98-'99)
10	32751-ST7-G00	HARNESS, DOOR WIRE (DRIVER SIDE)	001 ('00)
11	32752-ST7-920	HARNESS, DOOR WIRE (PASSENGER SIDE)	001 ('98-'99)
11	32752-ST7-920	HARNESS, DOOR WIRE (PASSENGER SIDE)	001 ('00)
12	32790-ST7-A11	SUB CORD, ABS	001 ('98-'99)
12	32790-ST7-A11	SUB CORD, ABS	001 ('00)
13	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM) (ZN)	N
14	90149-SE0-003	BOLT, EARTH, 6X16	N
15	90153-SE0-003	BOLT, EARTH, 6X12	N


Block B-7-1 WIRE HARNESS (RH)

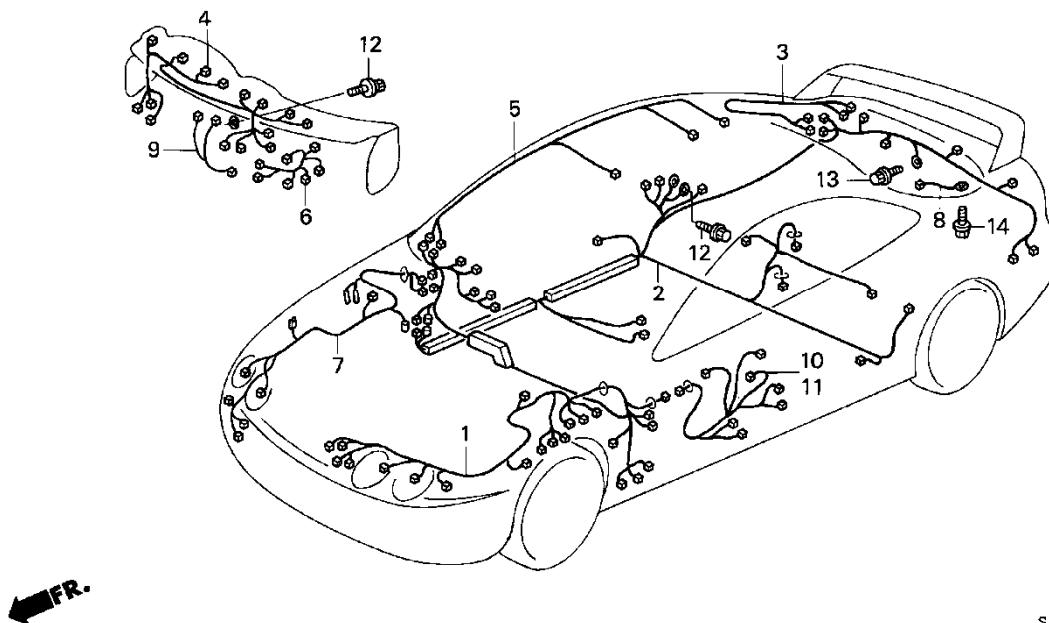

ST77-B0701


Refnr	Part Number	Part Description	Unit Qty
1	32100-ST7-E00	HARNESS, CABIN WIRE	001 ('98-'99)
1	32100-ST7-E01	HARNESS, CABIN WIRE	001 ('00)
2	32108-ST7-E00	HARNESS, RR. WIRE	001 ('98-'99)
2	32108-ST7-E01	HARNESS, RR. WIRE	001 ('00)
3	32109-ST7-010	CORD, TAILGATE	001 ('98-'99)
3	32109-ST7-012	CORD, TAILGATE	001 ('00)
4	32117-ST7-E00	HARNESS, INSTRUMENT WIRE	001 (SRS) (ABS)
4	32117-ST7-E10	HARNESS, INSTRUMENT WIRE	001 (ABS)
5	32155-ST7-000	CORD ASSY., INTERIOR	001
6	32157-ST7-900	SUB CORD A, HEATER	001
7	32200-ST7-E00	HARNESS, ENGINE ROOM WIRE	001 ('98-'99)
7	32200-ST7-E01	HARNESS, ENGINE ROOM WIRE	001 ('00)
8	32202-ST7-010	CORD, RR. DEFROSTER	001
9	32257-ST7-010	SUB CORD B, HEATER	001
10	32751-ST7-930	HARNESS, DOOR WIRE (DRIVER SIDE)	001 ('98-'99)
10	32751-ST7-931	HARNESS, DOOR WIRE (DRIVER SIDE)	001 ('00)
11	32752-ST7-920	HARNESS, DOOR WIRE (PASSENGER SIDE)	001 ('98-'99)
11	32752-ST7-921	HARNESS, DOOR WIRE (PASSENGER SIDE)	001 ('00)
12	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM) (ZN)	N
13	90149-SE0-003	BOLT, EARTH, 6X16	N
14	90153-SE0-003	BOLT, EARTH, 6X12	N

Block B-7-10 HARNESS BAND/BRACKET

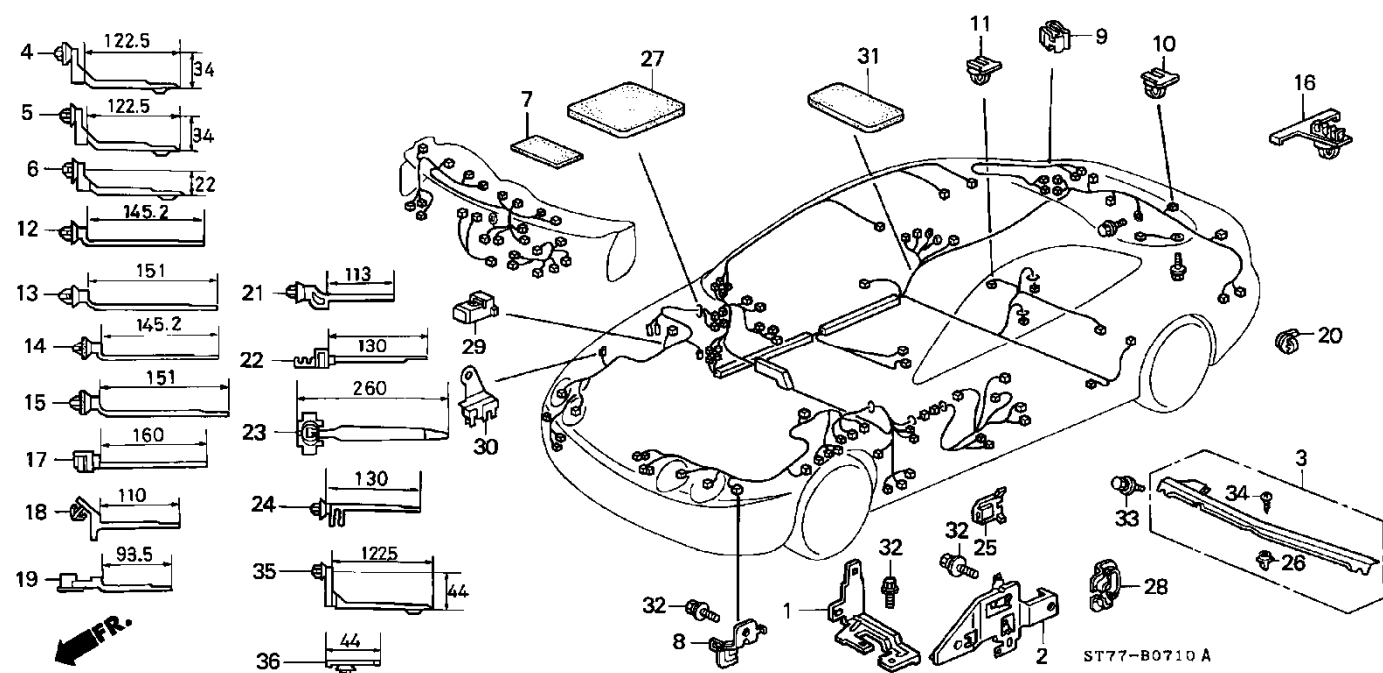


Refnr	Part Number	Part Description	Unit	Qty
1	32113-SR3-A00	STAY, L. COUPLER	001	(LH)
2	32113-SR3-000	STAY, L. COUPLER	001	(RH)
3	32118-ST7-000	PROTECTOR ASSY., RR. HARNESS	001	
4	32132-SD5-003	BAND, HARNESS (20) (WITH SEAL) (122.5MM)(BLACK)	001	(LH)
4	32132-SD5-003	BAND, HARNESS (20) (WITH SEAL) (122.5MM)(BLACK)	003	('98-'99) (RH)
4	32132-SD5-003	BAND, HARNESS (20) (WITH SEAL) (122.5MM)(BLACK)	002	('00) (RH)
5	32132-SM4-003	BAND, WIRE HARNESS OFFSET (20) (BLACK) (122.5MM)	N	
6	32134-SM4-003	BAND, HARNESS OFFSET (10) (BROWN)(122.5MM)	N	
7	72327-SD5-000	SEAL B, FR. DOOR HOLE (30X50)	002	
8	72327-SD5-000	BRACKET, WIRE HARNESS & COUPLER HOLDER	001	(RH)
9	90660-SB2-000	CLIP, CORD	007	
10	91533-S04-003	CLIP, COUPLER (NATURAL)	007	(LH) (ABS) / (RH)
10	91533-S04-003	CLIP, COUPLER (NATURAL)	008	(LH) (SRS) (ABS)
11	91534-S03-003	CLIP, COUPLER (NATURAL) (SEAL)	002	
12	91540-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM)	N	
13	91540-S30-003	CLIP, HARNESS BAND (NATURAL) (151.5MM)	N	
14	91545-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM) (WITH SEAL)	006	('98-'99)
14	91545-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM) (WITH SEAL)	007	('00)
15	91545-S30-003	CLIP, HARNESS BAND (NATURAL) (151.5MM) (WITH SEAL)	001	(LH)
16	91547-SF1-003	CLIP, OFFSET, 20MM (BLACK)	002	(RH)
17	91547-SH3-003	CLIP, BAND (NATURAL)(160MM)	003	
18	91550-ST0-003	CLIP, WIRE HARNESS (NATURAL) (110MM)	003	
19	91552-SS0-003	CLIP, WIRE HARNESS (M5) (BROWN)	002	
20	91557-SR3-003	CLIP, WIRE HARNESS PROTECTOR (RED)	008	(LH)
20	91557-SR3-003	CLIP, WIRE HARNESS PROTECTOR (RED)	004	(RH)
21	91560-SR3-003	BAND, HARNESS (NATURAL)(113MM)	001	
22	91568-SK7-003	CLIP, HARNESS BAND (130MM)	002	
23	91570-SH3-003	BAND, WIRE HARNESS (NATURAL)	N	
24	91571-S10-003	CLIP, WIRE HARNESS (NATURAL) (130MM)	N	
25	91572-SR3-003	CLIP, PROTECTOR	002	
26	91601-SH3-013	GROMMET, SCREW, 5MM (BLACK)	001	
27	91616-SR3-000	SEAL, FR. INNER LOWER (110X110) (BLACK)	001	
28	91626-SR3-003	RING, WIRE HARNESS	002	
29	91637-SF1-003	CAP (090 2P)	001	
30	91763-SH3-003	BAR, JOINT (6P)	002	(LH)
31	91902-SB2-003	CUSHION, WIRE HARNESS (50X100)	N	
32	93403-06012-08	BOLT-WASHER, 6X12	N	
33	93405-06016-08	BOLT-WASHER, 6X16	N	
34	93901-25220	SCREW, TAPPING, 5X12	001	
35	32133-SM4-003	BAND, HARNESS OFFSET (30) (YELLOW)(122.5MM)	001	('00)

Block B-8 HEADLIGHT/FRONT COMBINATION LIGHT

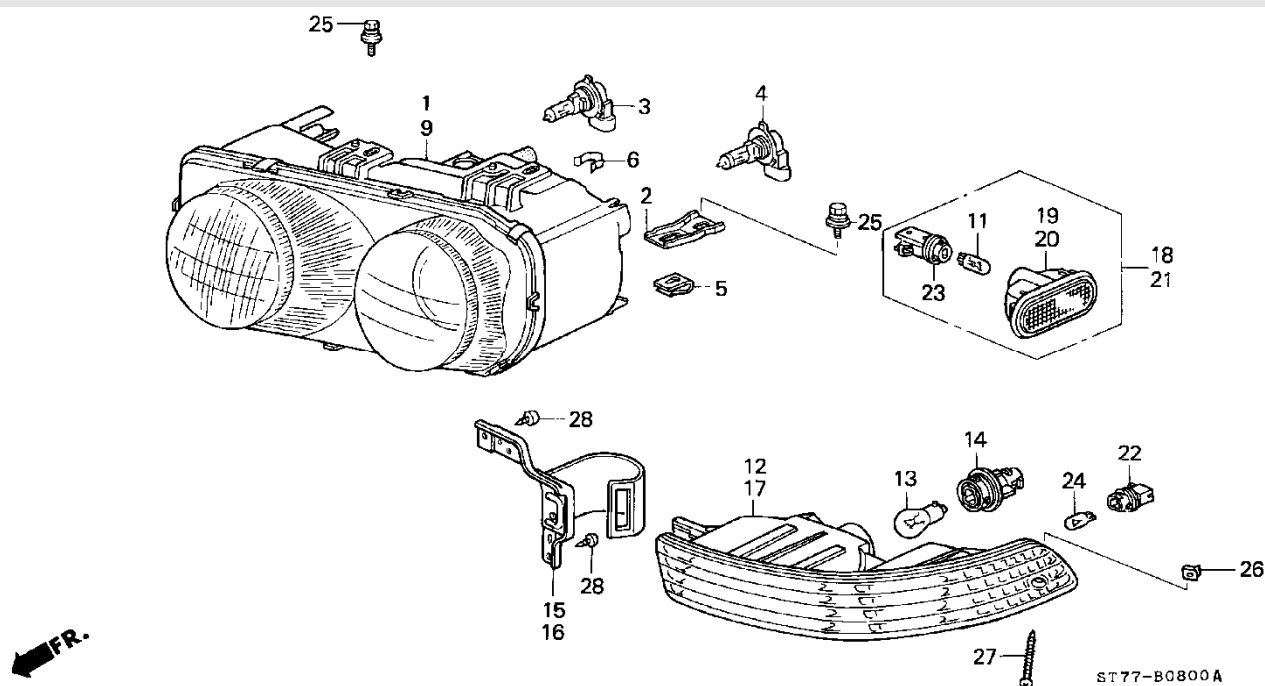


Refnr	Part Number	Part Description	Unit Qty
1	33101-ST7-E01	HEADLIGHT UNIT, R.	001 (RH)
1	33101-ST7-G01	HEADLIGHT UNIT, R.	001 (LH)
2	33102-ST7-000	STAY, BRACKET	004
3	33103-SL5-A02	BULB, HEADLIGHT (HB3) (12V 60W) (KOITO)	002
4	33104-SL5-A02	BULB, HEADLIGHT (HB4) (12V 51W) (KOITO)	002
5	33104-ST7-000	NUT, SPECIAL	004
6	33105-ST7-000	CLIP	004
9	33151-ST7-E01	HEADLIGHT UNIT, L.	001 (RH)
9	33151-ST7-G01	HEADLIGHT UNIT, L.	001 (LH)
11	33301-SA0-741	BULB (12V 5W) (STANLEY)	002
12	33301-ST7-G01	LAMP UNIT, R. TURN	001
13	33301-ST7-J01	BULB, FR. TURN (12V 21W) (S25) (AMBER) (KOITO)	002
14	33303-ST7-J01	SOCKET COMP. (S25)	002
15	33310-ST7-010	BRACKET, R. FR. COMBINATION LIGHT	001
16	33315-ST7-010	BRACKET, L. FR. COMBINATION LIGHT	001
17	33351-ST7-G01	LAMP UNIT, L. TURN	001
18	33800-SR3-G01	LIGHT ASSY., R. SIDE TURN	001
19	33801-SR3-G01	HOUSING COMP., R.	001
20	33802-SR3-G01	HOUSING COMP., L.	001
21	33850-SR3-G01	LIGHT ASSY., L. SIDE TURN	001
22	34301-SL5-A02	SOCKET COMP.	002
23	34304-SH3-A01	SOCKET COMP.	002
24	34908-SB6-741	BULB (12V 5W)	002
25	90146-SA7-000	BOLT-WASHER, 6X16 (DACRO COATING)	008
26	90303-SA5-003	NUT, FR. COMBINATION LIGHT	002
27	93901-248J0	SCREW, TAPPING, 4X35 (STENLESS)	002
28	93913-144J0	SCREW, TAPPING, 4X16 (PO)	008

Block B-9 TAILLIGHT

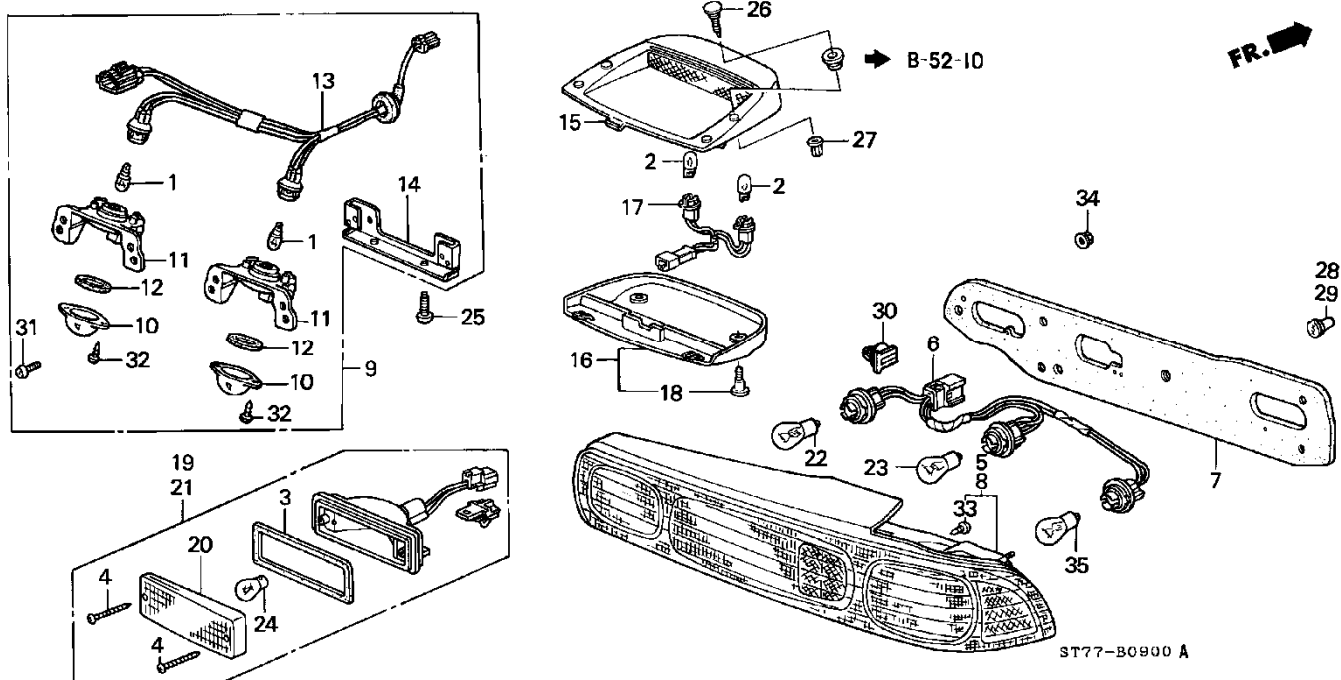


Refnr	Part Number	Part Description	Unit Qty
1	33301-SA0-741	BULB (12V 5W) (STANLEY)	002
2	33303-S30-003	BULB (T20W 12V 21W)	002
3	33303-692-003	PACKING (STANLEY)	001
4	33304-SF4-003	SCREW, TAPPING, 4X45	002
5	33501-ST7-E01	LAMP UNIT, R.	001
6	33502-ST7-J11	SOCKET COMP.	002
7	33503-ST7-A01	GASKET, BASE	002
8	33551-ST7-E01	LAMP UNIT, L.	001
9	34100-ST7-G01	LIGHT ASSY., LICENSE	001
10	34101-SH3-G01	LENS	002
11	34102-SH3-A01	HOUSING	002
12	34103-SH3-A01	PACKING	002
13	34105-ST7-G01	CORD COMP.	001
14	34106-SP0-A01	STAY	002
15	34271-ST7-G01ZA	LAMP UNIT *NH167L*	001
16	34272-ST7-A01	COVER	001
17	34273-ST7-G01	CORD COMP.	001
18	34274-SK8-A01	NUT, SPECIAL	002
19	34400-SV2-G01	LIGHT ASSY., R. RR. FOG	001 (RH)
20	34401-SH3-G01	LENS	001
21	34450-SV2-G01	LIGHT ASSY., L. RR. FOG	001 (LH)
22	34903-SB6-741	BULB (12V 21W)	002
23	34906-SB6-741	BULB (12V 21/5W)	002
24	34908-634-611	BULB (12V 21W) (ECE) (STANLEY)	001
25	90113-SP0-003	SCREW, PAN, 5X12	004
26	90125-ST7-000	SCREW, SPECIAL, 5MM	002
27	90321-ST7-003	NUT, SPECIAL, 5MM	002
28	90650-SL9-003	GROMMET, R. RR. COMBINATION (WHITE)	001
29	90655-SL9-003	GROMMET, L. RR. COMBINATION (GRAY)	001
30	91565-SD5-003	CLIP, COUPLER (NATURAL)	001
31	93500-05010-0A	SCREW, PAN, 5X10	004
32	93901-34320	SCREW, TAPPING, 4X12	004
33	93903-34320	SCREW, TAPPING, 4X12	002
34	94050-05080	NUT, FLANGE, 5MM	012
35	33301-ST7-J01	BULB, FR. TURN (12V 21W) (S25) (AMBER) (KOITO)	002

Block B-10 INTERIOR LIGHT

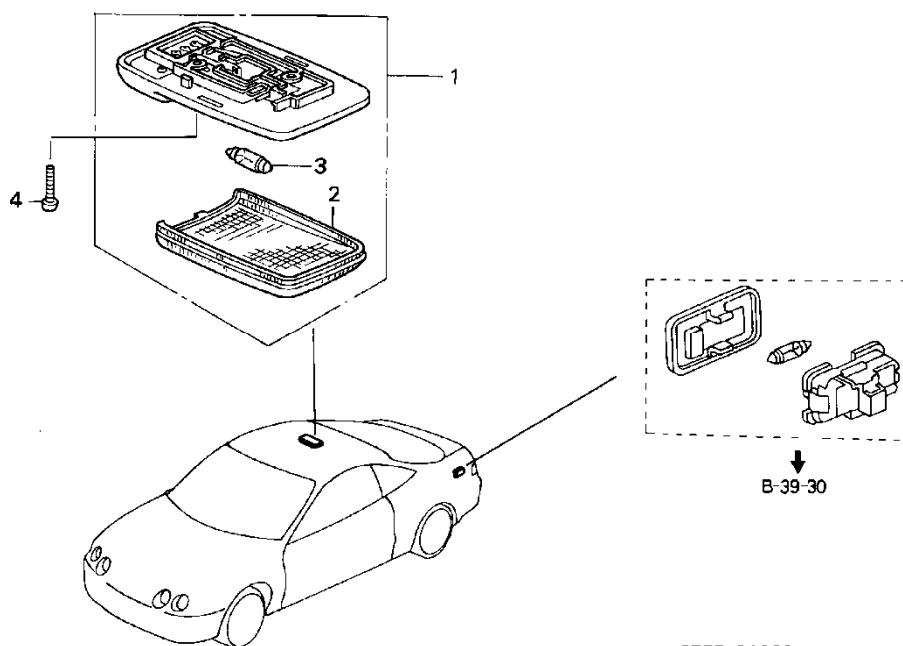


Refnr	Part Number	Part Description	Unit Qty
1	34250-SK7-013ZA	LIGHT ASSY., INTERIOR (IMASEN) *NH180L*	001
2	34251-SK7-013	LENS (IMASEN)	001
3	34295-538-003	BULB (12V 5W) (DAIICHI)	001
4	35409-SD2-003	SCREW, EARTH, 4X12 (ZN)	001

Block B-11 COMBINATION SWITCH (LH)

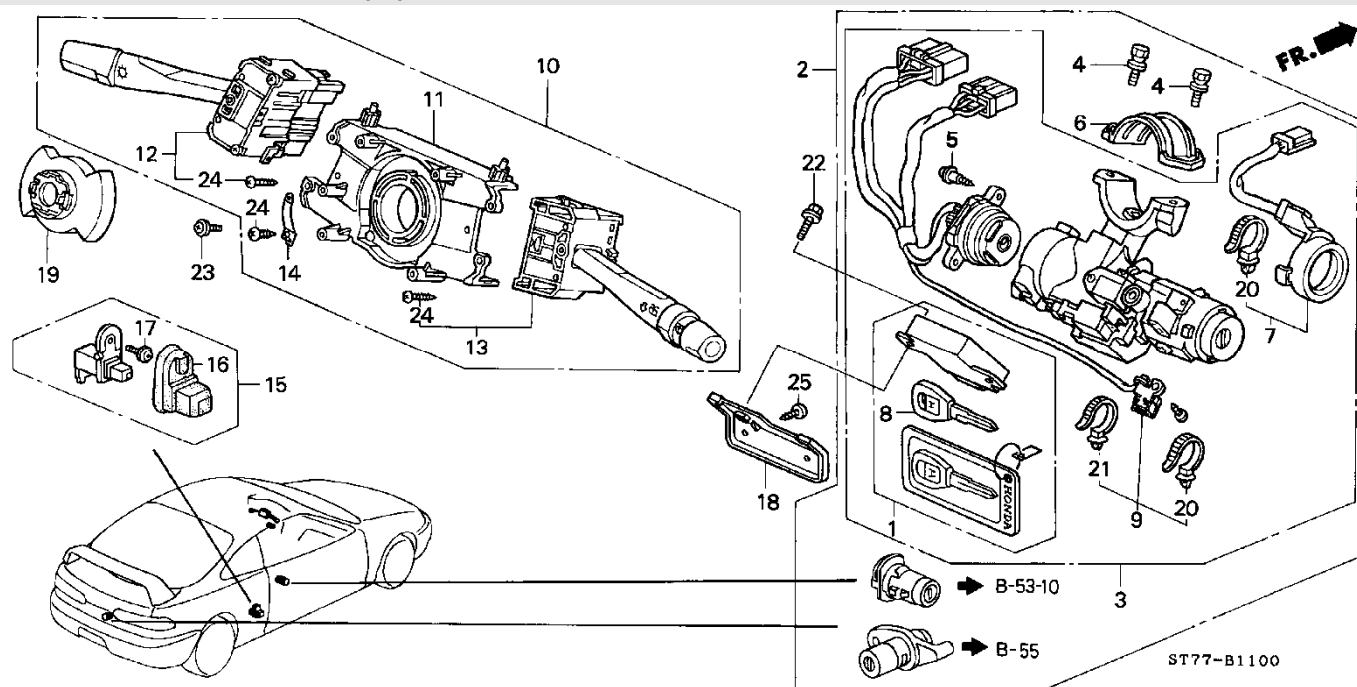


Refnr	Part Number	Part Description	Unit	Qty
1	04809-S04-G02	KEY & UNIT ASSY., IMMOBILISER (SERVICE)	001	('98-'99)
1	04809-S04-G04	KEY & UNIT ASSY., IMMOBILISER (SERVICE)	001	('00)
2	06350-ST7-E00	CYLINDER SET, KEY (SERVICE)	001	('98-'99)
2	06350-ST7-E02	CYLINDER SET, KEY (SERVICE)	001	('00)
3	35100-ST7-E01	LOCK ASSY., STEERING	001	('00)
3	35100-ST7-E02	LOCK ASSY., STEERING	001	('00)
4	35102-SV4-003	BOLT, BREAK HEAD	002	
5	35103-S04-003	SCREW, RECESSED	002	
6	35108-S04-003	HOLDER, COLUMN	001	
7	35109-ST7-Q41	ANTENNA COMP., IMMOBILIZER	001	
8	35113-S04-G02	KEY, BLANK (MAIN) (BLACK) (IMMOBILISER)	001	('98-'99)
8	35113-S04-G03	KEY, BLANK (MAIN) (BLACK) (IMMOBILISER)	001	('00)
9	35130-S02-E01	SWITCH COMP., STEERING	001	
10	35250-SR3-G32	SWITCH ASSY., COMBINATION	001	('98-'99) (SRS) (ABS)
11	35251-SR3-A81	BODY, SWITCH	001	(SRS) (ABS)
11	35251-SR3-003	BODY, SWITCH	001	(ABS)
12	35255-SR3-G02	SWITCH ASSY., LIGHTING (B)	001	
13	35256-SR3-G11	SWITCH ASSY., WIPER (G)	001	
14	35259-SR3-A02	SHOE, HORN	001	(ABS)
15	35400-SL4-013	SWITCH ASSY., DOOR	002	
16	35401-SL4-003	COVER, DOOR SWITCH	002	
17	35409-692-013	SCREW, FLANGE, 4X12	002	
18	39731-ST7-G00	BRACKET, IMMOBILIZATION	001	
19	53271-SR3-000	CAM, TURN SIGNAL SWITCH CANCEL	001	
20	91551-SW5-003	CLIP, HARNESS BAND (BROWN) (151MM)	002	
21	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	003	
22	93401-06012-08	BOLT-WASHER, 6X12	002	
23	93892-05012-08	SCREW-WASHER, 5X12	003	
24	93901-32420	SCREW, TAPPING, 3X16	004	(SRS) (ABS)
24	93901-32420	SCREW, TAPPING, 3X16	005	(ABS)
25	93913-14280	SCREW, TAPPING, 4X12 (PO)	002	

Block B-11-1 COMBINATION SWITCH (RH)

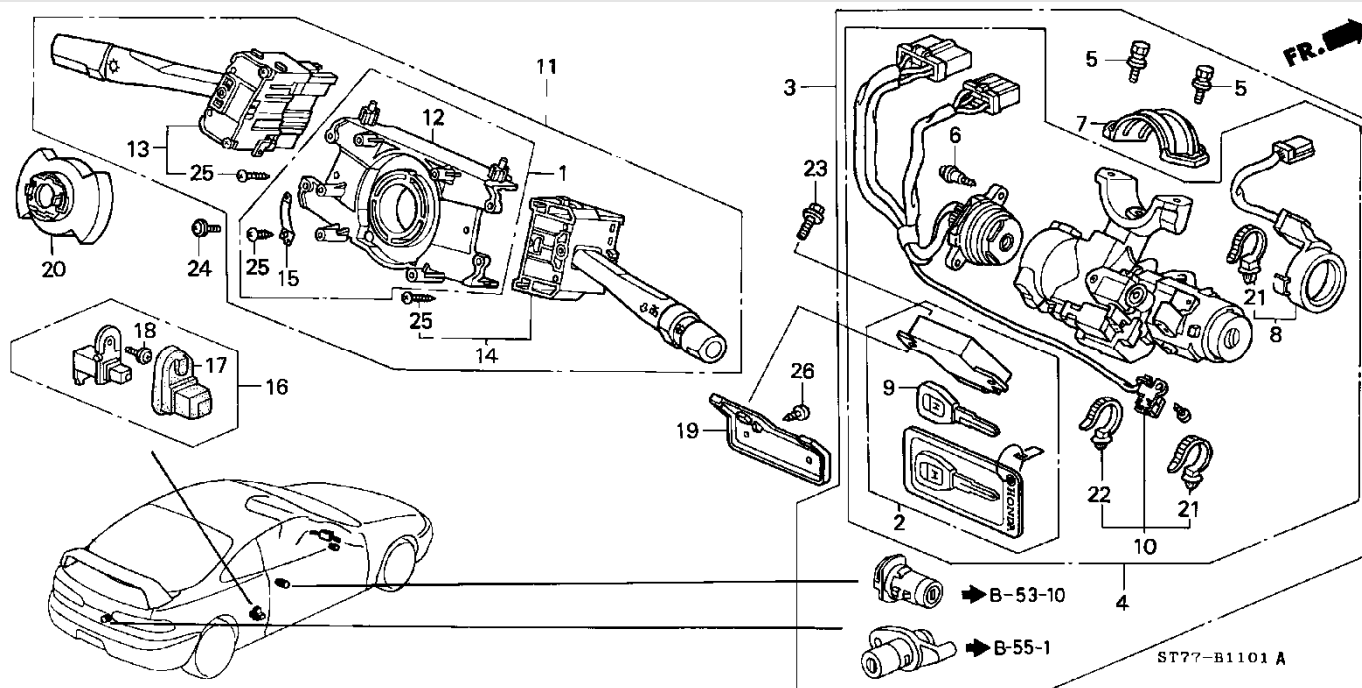


Refnr	Part Number	Part Description	Unit Qty
1	04352-SR3-000	SHOE SET, HORN (SERVICE)	001
2	04809-S04-G02	KEY & UNIT ASSY., IMMOBILISER (SERVICE)	001 ('98-'99)
2	04809-S04-G04	KEY & UNIT ASSY., IMMOBILISER (SERVICE)	001 ('00)
3	06350-ST7-E00	CYLINDER SET, KEY (SERVICE)	001 ('98-'99)
3	06350-ST7-E02	CYLINDER SET, KEY (SERVICE)	001 ('00)
4	35100-ST7-E01	LOCK ASSY., STEERING	001 ('00)
4	35100-ST7-E02	LOCK ASSY., STEERING	001 ('00)
5	35102-SV4-003	BOLT, BREAK HEAD	002
6	35103-S04-003	SCREW, RECESSED	002
7	35108-S04-003	HOLDER, COLUMN	001
8	35109-ST7-Q41	ANTENNA COMP., IMMOBILIZER	001
9	35113-S04-G02	KEY, BLANK (MAIN) (BLACK) (IMMOBILISER)	001 ('98-'99)
9	35113-S04-G03	KEY, BLANK (MAIN) (BLACK) (IMMOBILISER)	001 ('00)
10	35130-S02-E01	SWITCH COMP., STEERING	001
11	35250-SR3-G32	SWITCH ASSY., COMBINATION	001 ('98-'99) (SRS) (ABS)
12	35251-SR3-003	BODY, SWITCH	001 (ABS)
12	35251-SR3-A81	BODY, SWITCH	001 (SRS) (ABS)
13	35255-SR3-G02	SWITCH ASSY., LIGHTING (B)	001
14	35256-SR3-G11	SWITCH ASSY., WIPER (G)	001
15	35259-SR3-013	SHOE, HORN	001 (ABS)
16	35400-SL4-013	SWITCH ASSY., DOOR	002
17	35401-SL4-003	COVER, DOOR SWITCH	002
18	35409-692-013	SCREW, FLANGE, 4X12	002
19	39731-S04-G00	BRACKET, IMMOBILIZATION	001
20	53271-SR3-000	CAM, TURN SIGNAL SWITCH CANCEL	001
21	91551-SW5-003	CLIP, HARNESS BAND (BROWN) (151MM)	002
22	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	001
23	93401-06012-08	BOLT-WASHER, 6X12	002
24	93892-05012-08	SCREW-WASHER, 5X12	003
25	93901-32420	SCREW, TAPPING, 3X16	004 (SRS) (ABS)
25	93901-32420	SCREW, TAPPING, 3X16	005 (ABS)
26	93913-14280	SCREW, TAPPING, 4X12 (PO)	002

Block B-11-10 SWITCH (LH)

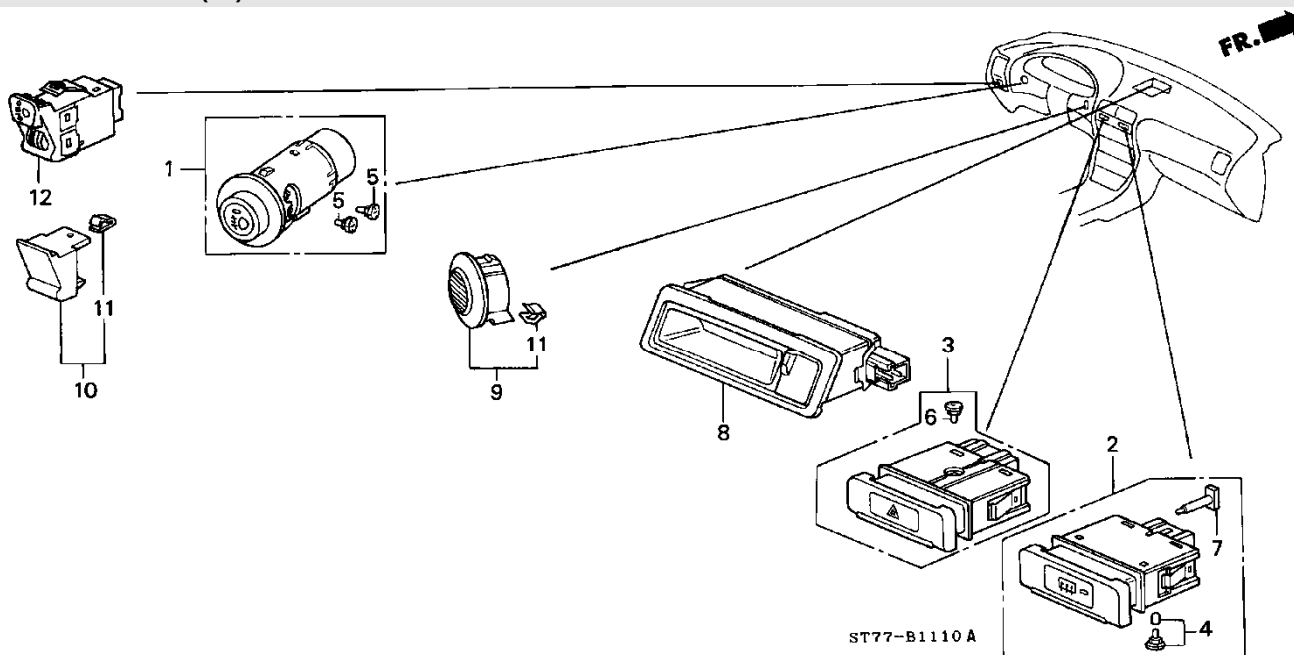


Refnr	Part Number	Part Description	Unit Qty
1	35170-ST7-G01	SWITCH ASSY., RR. FOG	001
2	35500-ST7-G01	SWITCH ASSY., RR. DEFOGGER	001
3	35510-ST7-003	SWITCH ASSY., HAZARD	001
4	35850-ST7-Z01	BULB COMP. (14V 60MA)	001
5	35851-SB2-003	BULB, NEO WEDGE (14V 65MA)	002
6	35851-SM4-003	BULB, NEO WEDGE (14V 60MA) (TEC)	001
7	35881-S84-T01	BULB (14V 60MA)	001
8	39700-ST7-Z01	CLOCK ASSY., DIGITAL	001
9	77266-ST7-003ZA	LID ASSY., VISOR SWITCH *NH1L*	001
10	77268-ST7-000ZA	LID, SWITCH HOLE (SUNROOF) *NH167L*	001
11	90666-SD4-003	CLIP, FITTING	002
12	35820-ST7-G01	SWITCH ASSY., HEADLIGHT ADJUSTER	001

Block B-11-11 SWITCH (RH)

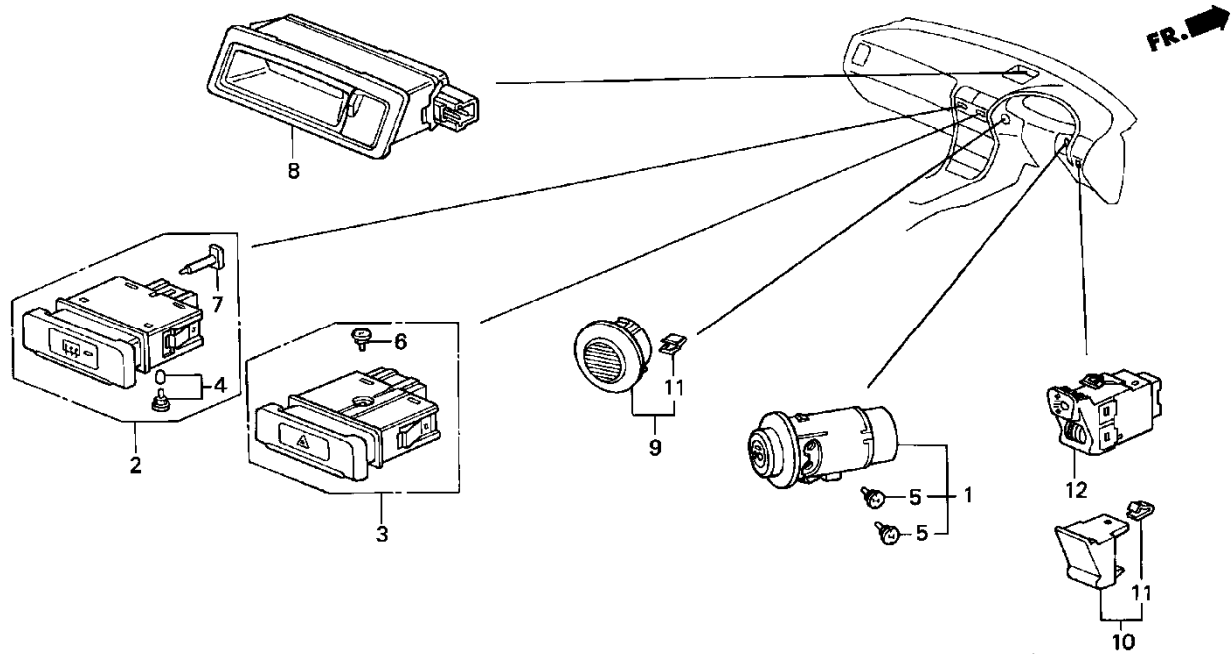


Refnr	Part Number	Part Description	Unit Qty
1	35170-ST7-G01	SWITCH ASSY., RR. FOG	001
2	35500-ST7-G01	SWITCH ASSY., RR. DEFOGGER	001
3	35510-ST7-003	SWITCH ASSY., HAZARD	001
4	35850-ST7-Z01	BULB COMP. (14V 60MA)	001
5	35851-SB2-003	BULB, NEO WEDGE (14V 65MA)	002
6	35851-SM4-003	BULB, NEO WEDGE (14V 60MA) (TEC)	001
7	35881-S84-T01	BULB (14V 60MA)	001
8	39700-ST7-Z01	CLOCK ASSY., DIGITAL	001
9	77266-ST7-003ZA	LID ASSY., VISOR SWITCH *NH1L*	001
10	77268-ST7-000ZA	LID, SWITCH HOLE (SUNROOF) *NH167L*	001
11	90666-SD4-003	CLIP, FITTING	002
12	35820-ST7-G01	SWITCH ASSY., HEADLIGHT ADJUSTER	001

Block B-12-10 COMBINATION METER COMPONENTS

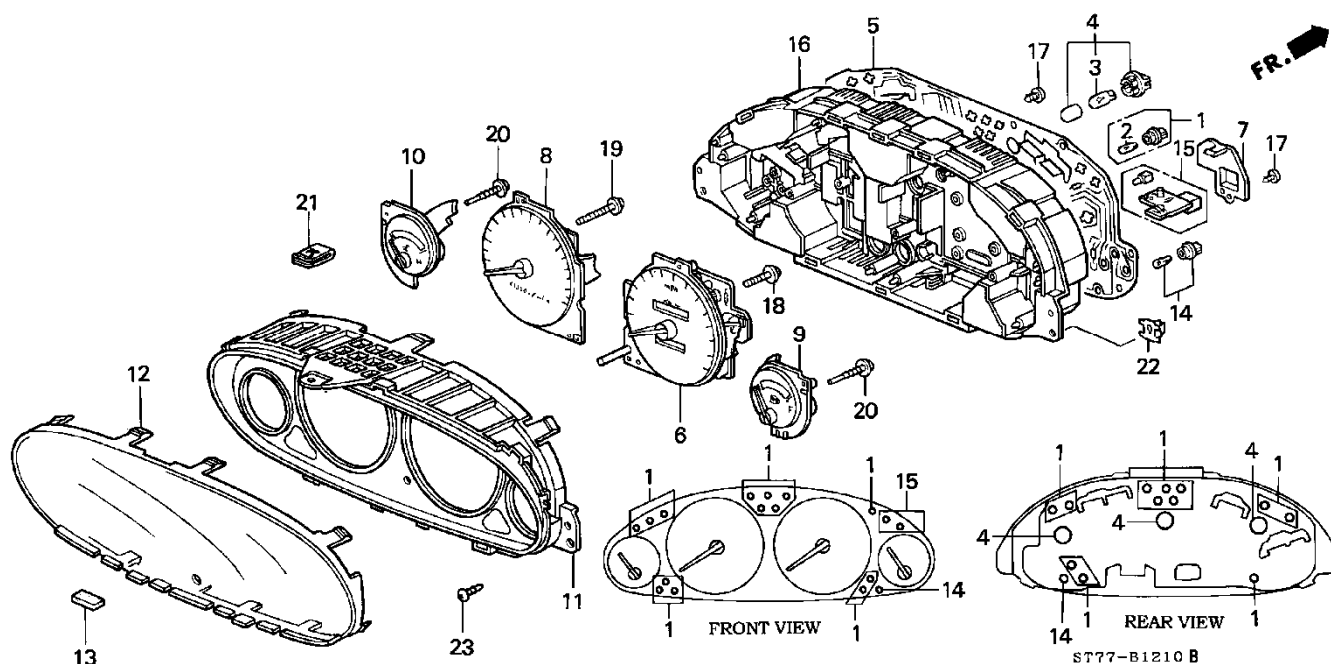


Refnr	Part Number	Part Description	Unit Qty
1	35505-SA5-004	BULB & SOCKET (14V 1.4W) (DENSO) (BASE:BLACK)	011
2	35506-SA5-004	BULB (14V 1.4W) (DENSO)	011
3	37237-SA5-004	BULB (14V 3.4W) (DENSO)	003
4	37102-SA5-004	SOCKET ASSY., BULB (14V 3.4W) (DENSO)	003
5	78108-ST7-G01	PANEL, PRINT	001
6	78115-ST7-E01	SPEEDOMETER ASSY.	001 (RH)
6	78115-ST7-G01	SPEEDOMETER ASSY.	001 (LH)
7	78116-ST7-N01	COVER	001
8	78125-ST7-Z01	TACHOMETER ASSY.	001
9	78130-ST7-Z01	METER ASSY., FUEL	001
10	78135-ST7-Z01	METER ASSY., TEMPERATURE	001
11	78155-ST7-G01	VISOR ASSY., METER	001 (SRS) (ABS)
11	78155-ST7-G11	VISOR ASSY., METER	001 (ABS)
12	78156-ST7-702	LENS, METER	001
13	78175-SE3-004	GROMMET (DENSO)	002
14	37103-SR3-004	SOCKET ASSY., BULB (BASE:GRAY)	001
15	78190-ST7-N01	INDICATOR ASSY., SRS (ABS)	001 (SRS) (ABS)
15	78190-ST7-N21	INDICATOR ASSY., ABS	001 (ABS)
16	78235-ST7-A11	CASE ASSY., METER	001
17	90131-ST7-003	SCREW, TAPPING	003
18	90132-SR3-004	SCREW-WASHER, 3X15	004
19	90132-ST7-003	SCREW, WAVE WASHER	003
20	90137-ST7-003	SCREW, TAPPING	006
21	90302-SA4-003	NUT, SPRING, 4MM	001
22	91640-SM4-003	GROMMET, SCREW, 4MM	002
23	93913-14420	SCREW, TAPPING, 4X16 (PO)	003

Block B-13 CONTROL UNIT (ENGINE ROOM)(LH)

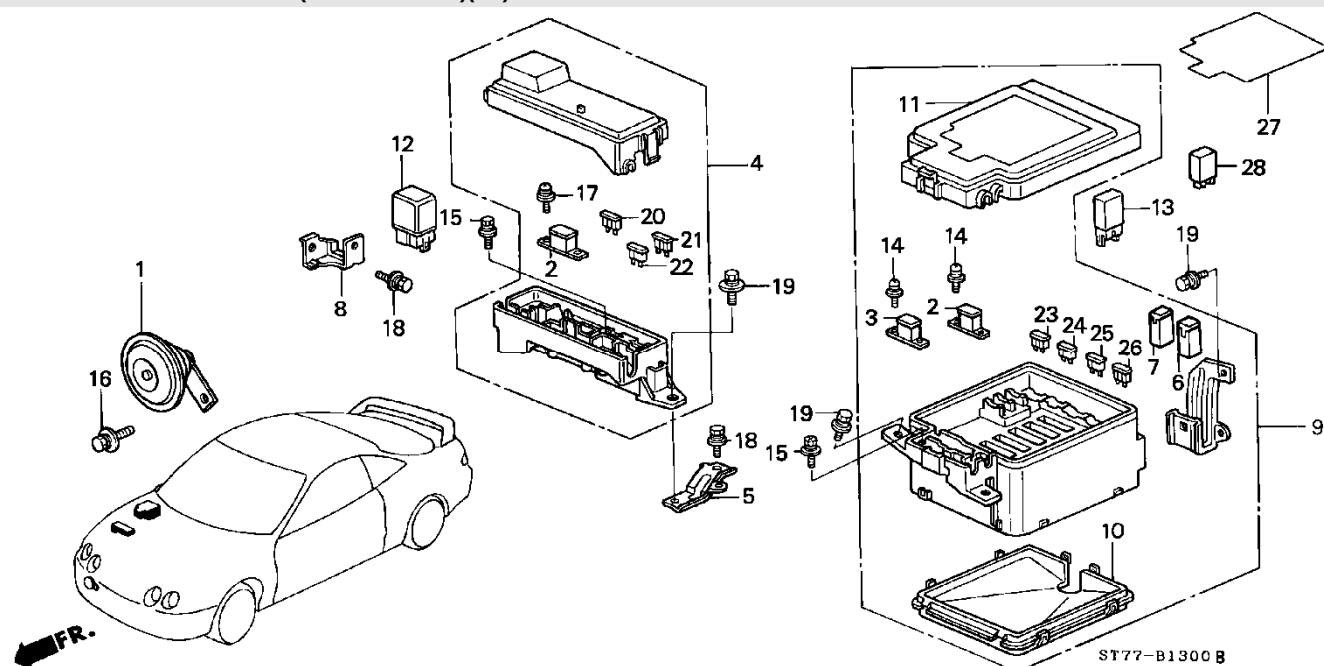

Refnr	Part Number	Part Description	Unit Qty
1	38150-ST7-G01	HORN ASSY., HIGH (MITSUBA)	001
2	38212-SM4-003	FUSE, BLOCK (40A)	002
3	38218-SM4-003	FUSE, BLOCK (100A)	001
4	38230-ST5-003	BOX ASSY., ABS FUSE	001
5	38231-ST7-A00	BRACKET A, ABS FUSE BOX	001
6	38231-S04-003	FUSE, BLOCK (30A)	001
7	38231-S04-961	FUSE, BLOCK (40A)	005
8	38232-ST7-A00	BRACKET B, ABS FUSE BOX	001
9	38250-ST7-G01	BOX ASSY., MAIN FUSE	001
10	38252-S01-003	COVER, LOWER	001
11	38254-ST7-G01	COVER, UPPER	001
12	39792-SP0-014	RELAY ASSY., POWER (4P) (MITSUBA) (12V NO)	001
13	39794-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7250)	001
13	39794-SL0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2225) (BLACK)	001
14	90129-SP0-000	SCREW-WASHER, 5X12	004
15	90130-SR3-003	BOLT, 5X13	003
16	90150-S84-003	BOLT, EARTH, 8X16	001
17	90153-SA5-900	SCREW-WASHER, 5X9	002
18	93403-06012-08	BOLT-WASHER, 6X12	002
19	93405-06016-08	BOLT-WASHER, 6X16	004
20	98200-31000	FUSE, BLADE (10A)	001
21	98200-31500	FUSE, BLADE (15A)	001
22	98200-32000	FUSE, BLADE (20A)	001
23	98200-40750	FUSE, MINI (7.5A)	002
24	98200-41000	FUSE, MINI (10A)	001
25	98200-41500	FUSE, MINI (15A)	002
26	98200-42000	FUSE, MINI (20A)	003
27	38205-ST7-P10	LABEL, FUSE (PORTUGAL)	(1) ('99) (LH)
28	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	001
28	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	001


Block B-13-1 CONTROL UNIT (ENGINE ROOM)(RH)

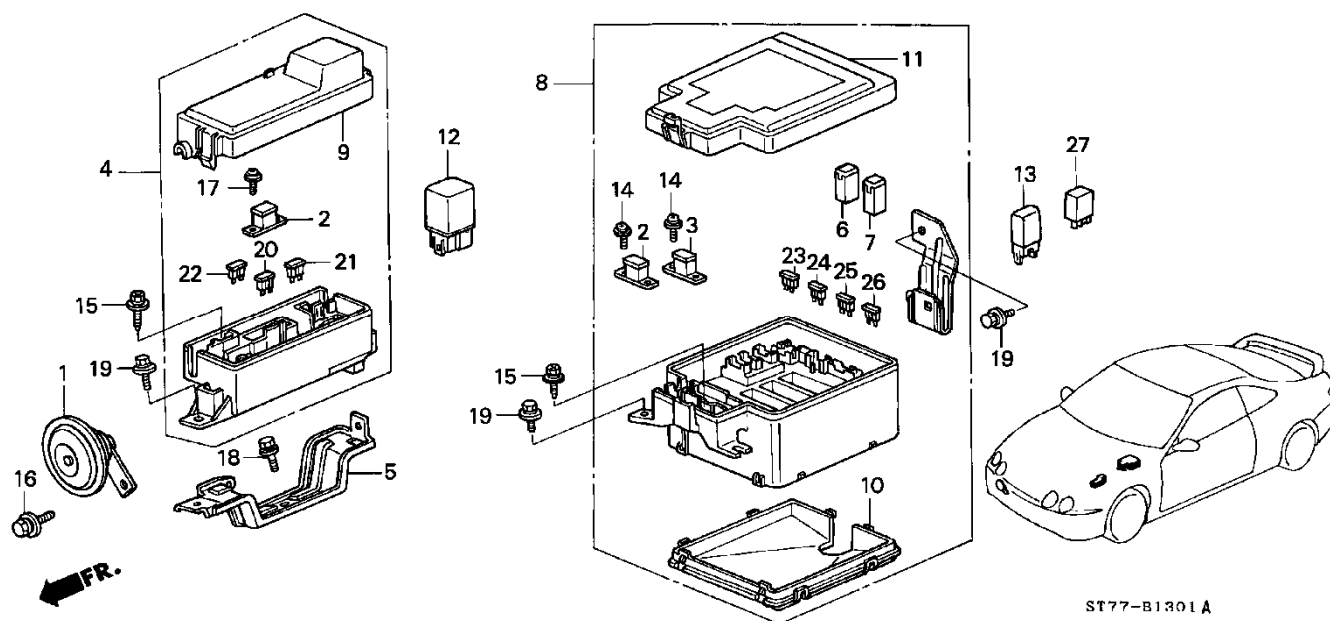

ST77-B1301A


Refnr	Part Number	Part Description	Unit Qty
1	38150-ST7-G01	HORN ASSY., HIGH (MITSUBA)	001
2	38212-SM4-003	FUSE, BLOCK (40A)	002
3	38218-SM4-003	FUSE, BLOCK (100A)	001
4	38230-ST7-003	BOX ASSY., ABS FUSE	001
5	38231-ST7-000	BRACKET A, ABS FUSE BOX	001
6	38231-S04-003	FUSE, BLOCK (30A)	001
7	38231-S04-961	FUSE, BLOCK (40A)	005
8	38250-ST7-E01	BOX ASSY., MAIN FUSE	001
9	38251-ST7-003	COVER, UPPER	001
10	38252-S01-003	COVER, LOWER	001
11	38254-ST7-E01	COVER, UPPER	001
12	39792-SP0-014	RELAY ASSY., POWER (4P) (MITSUBA) (12V NO)	001
13	39794-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7250)	001
13	39794-SL0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2225) (BLACK)	001
14	90129-SP0-000	SCREW-WASHER, 5X12	004
15	90130-SR3-003	BOLT, 5X13	003
16	90150-S84-003	BOLT, EARTH, 8X16	001
17	90153-SA5-900	SCREW-WASHER, 5X9	002
18	93403-06012-08	BOLT-WASHER, 6X12	001
19	93405-06016-08	BOLT-WASHER, 6X16	004
20	98200-31000	FUSE, BLADE (10A)	001
21	98200-31500	FUSE, BLADE (15A)	001
22	98200-32000	FUSE, BLADE (20A)	001
23	98200-40750	FUSE, MINI (7.5A)	002
24	98200-41000	FUSE, MINI (10A)	001
25	98200-41500	FUSE, MINI (15A)	002
26	98200-42000	FUSE, MINI (20A)	003
27	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	001
27	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	001

Block B-13-10 CONTROL UNIT (CABIN)(LH)

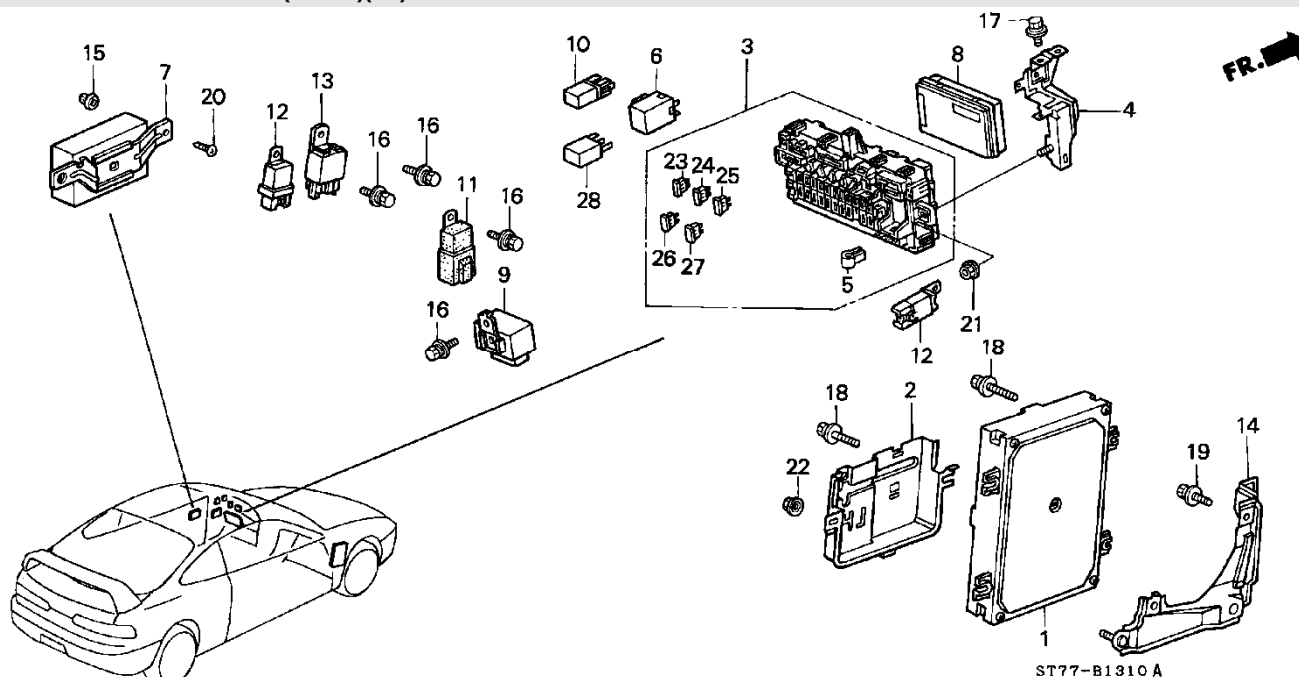


Refnr	Part Number	Part Description	Unit Qty
1	37820-P73-G01	CONTROL MODULE, ENGINE	001
2	37821-P72-A00	COVER, ELECTRONIC CONTROL UNIT HARNESS	001
3	38200-ST7-G01	BOX ASSY., JOINT	001
4	38203-ST7-A01	BRACKET, L. FUSE BOX	001
5	38235-S04-003	PULLER, MINI FUSE (SUMITOMO)	001
6	38300-SE3-013	RELAY ASSY., TURN SIGNAL & HAZARD (FR-3309) (MITSUBA)	001
7	38380-SR3-003	CONTROL UNIT, AUTO DOOR LOCK (MITSUBA)	001
8	38600-S04-G01	CONTROL UNIT, INTEGRATED	001
9	39400-S10-003	RELAY ASSY., MAIN (MITSUBA)	001
10	39794-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7250)	001
10	39794-SL0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2225) (BLACK)	001
11	39795-SB2-003	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
12	39797-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7330)	001
12	39797-SE0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
13	39797-SE3-003	RELAY ASSY., POWER (4P) (DENSO) (056700-85700)	001
14	64133-SR3-A00ZZ	BRACKET, ELECTRONIC CONTROL UNIT	001
15	90670-SG0-003	GROMMET, SCREW, 4MM	002
16	93403-06012-08	BOLT-WASHER, 6X12	N
17	93403-06016-08	BOLT-WASHER, 6X16	002
18	93404-06020-08	BOLT-WASHER, 6X20	003
19	93405-06016-08	BOLT-WASHER, 6X16	003
20	93903-24420	SCREW, TAPPING, 4X16	002
21	94050-06080	NUT, FLANGE, 6MM	001
22	94071-06080	NUT-WASHER, 6MM	001
23	98200-40750	FUSE, MINI (7.5A)	010
24	98200-41000	FUSE, MINI (10A)	011
25	98200-41500	FUSE, MINI (15A)	003
26	98200-42000	FUSE, MINI (20A)	007
27	98200-43000	FUSE, MINI (30A)	001
28	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	001
28	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	001

Block B-13-11 CONTROL UNIT (CABIN)(RH)

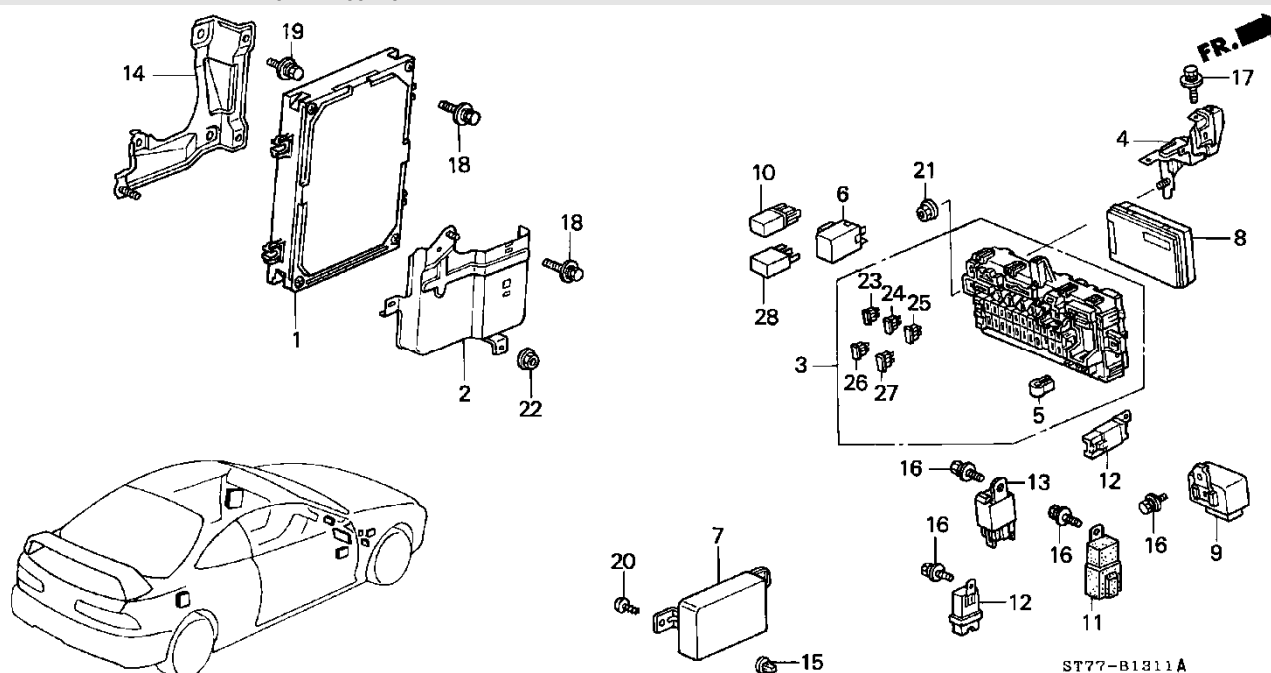


Refnr	Part Number	Part Description	Unit Qty
1	37820-P73-G01	CONTROL MODULE, ENGINE	001
2	37821-P72-Q00	COVER, ELECTRONIC CONTROL UNIT HARNESS	001
3	38200-ST7-G01	BOX ASSY., JOINT	001
4	38203-ST7-010	BRACKET, R. FUSE BOX	001
5	38235-S04-003	PULLER, MINI FUSE (SUMITOMO)	001
6	38300-SE3-013	RELAY ASSY., TURN SIGNAL & HAZARD (FR-3309) (MITSUBA)	001
7	38380-SR3-003	CONTROL UNIT, AUTO DOOR LOCK (MITSUBA)	001
8	38600-S04-G01	CONTROL UNIT, INTEGRATED	001
9	39400-S10-003	RELAY ASSY., MAIN (MITSUBA)	001
10	39794-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7250)	001
10	39794-SL0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2225) (BLACK)	001
11	39795-SB2-003	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
12	39797-SE0-003	RELAY ASSY., POWER (4P) (DENSO) (056700-7330)	001
12	39797-SE0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
13	39797-SE3-003	RELAY ASSY., POWER (4P) (DENSO) (056700-85700)	001
14	64133-SR3-000ZZ	BRACKET, ELECTRONIC CONTROL UNIT	001
15	90670-SG0-003	GROMMET, SCREW, 4MM	002
16	93403-06012-08	BOLT-WASHER, 6X12	N
17	93403-06016-08	BOLT-WASHER, 6X16	002
18	93404-06020-08	BOLT-WASHER, 6X20	003
19	93405-06016-08	BOLT-WASHER, 6X16	003
20	93903-24420	SCREW, TAPPING, 4X16	002
21	94050-06080	NUT, FLANGE, 6MM	001
22	94071-06080	NUT-WASHER, 6MM	001
23	98200-40750	FUSE, MINI (7.5A)	010
24	98200-41000	FUSE, MINI (10A)	011
25	98200-41500	FUSE, MINI (15A)	003
26	98200-42000	FUSE, MINI (20A)	007
27	98200-43000	FUSE, MINI (30A)	001
28	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	001
28	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	001

Block B-13-30 ABS UNIT (LH)

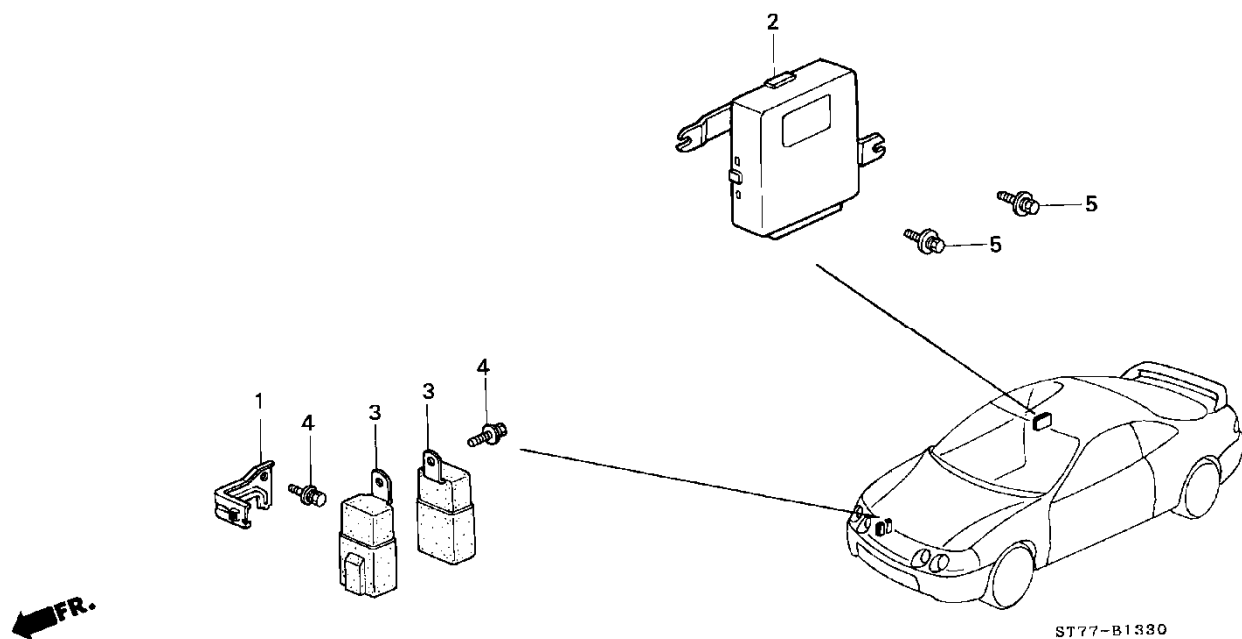


Refnr	Part Number	Part Description	Unit Qty
1	32233-ST7-000	BRACKET, ABS RELAY	001
2	39790-ST7-A31	ABS UNIT	001
3	39795-SB2-003	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	002
4	93403-06012-08	BOLT-WASHER, 6X12	002
5	93405-06016-08	BOLT-WASHER, 6X16	002

Block B-13-31 ABS UNIT (RH)

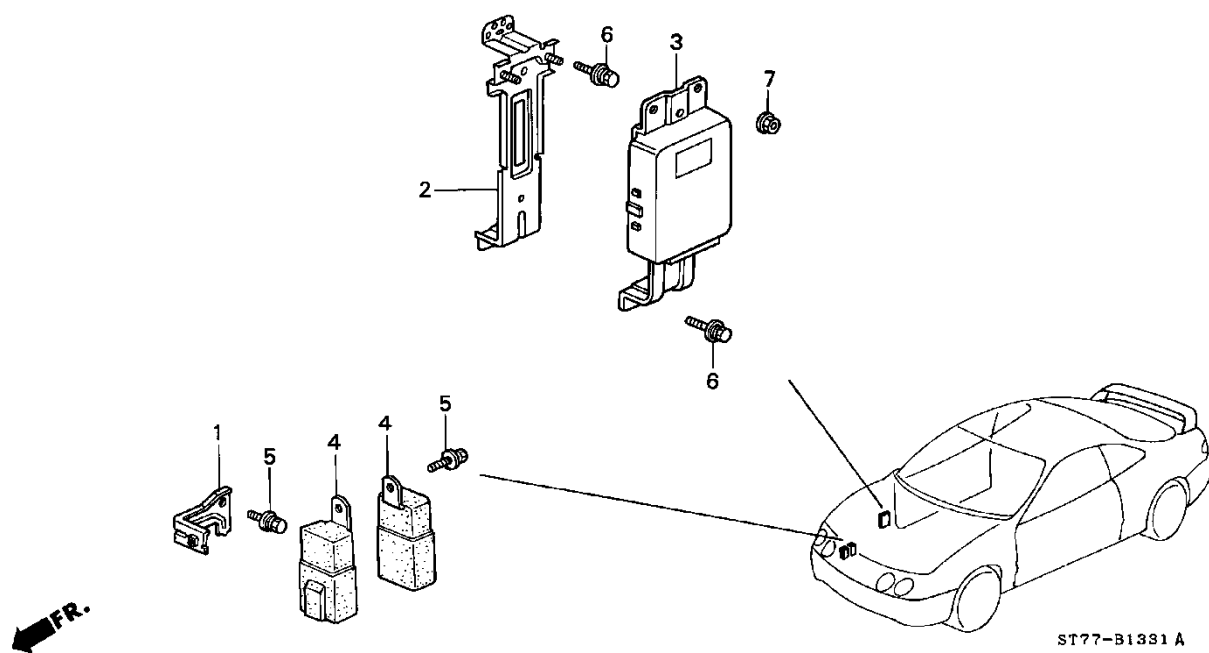

Refnr	Part Number	Part Description	Unit Qty
1	32233-ST7-000	BRACKET, ABS RELAY	001
2	38206-ST7-000	BRACKET, RELAY	001
3	39790-ST7-J11	ABS UNIT	001
4	39795-SB2-003	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	002
5	93403-06012-08	BOLT-WASHER, 6X12	002
6	93405-06016-08	BOLT-WASHER, 6X16	003
7	94050-06080	NUT, FLANGE, 6MM	002


Block B-13-40 SRS UNIT (LH)

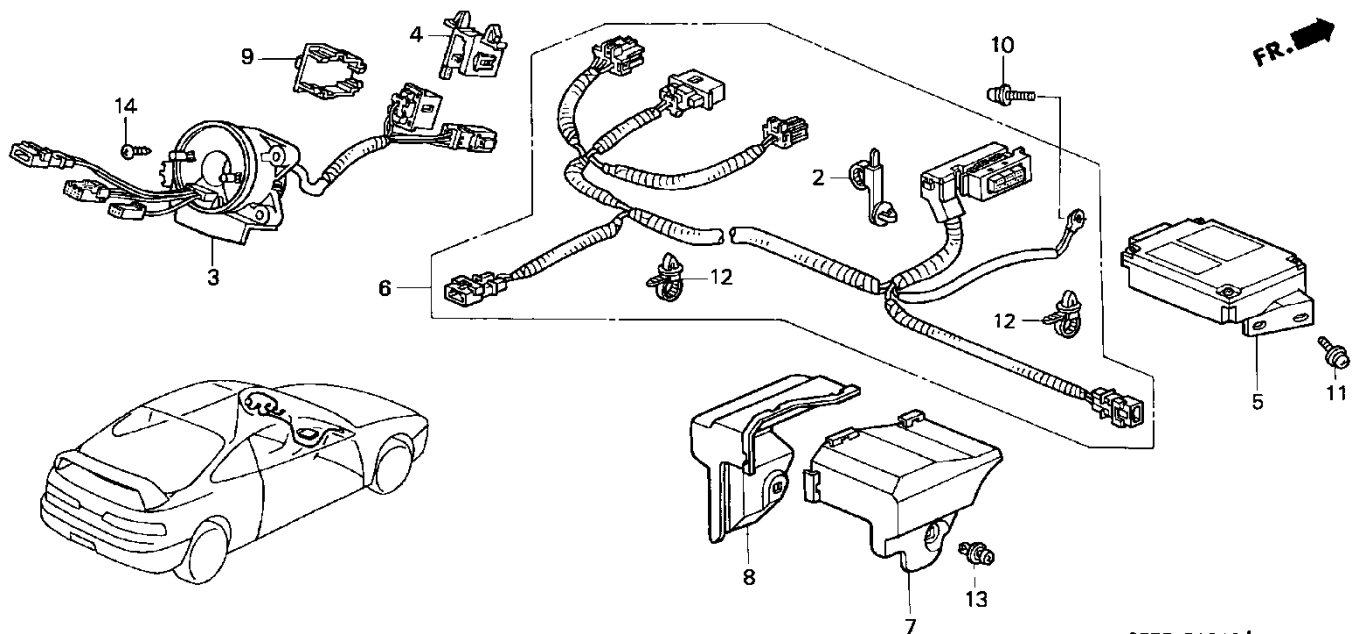

ST77-B1340 A

Refnr	Part Number	Part Description	Unit Qty
2	32132-SM4-003	BAND, WIRE HARNESS OFFSET (20) (BLACK) (122.5MM)	002
3	77900-S04-G01	REEL ASSY., CABLE (SUMITOMO)	001 ('98)
3	77900-S04-G05	REEL ASSY., CABLE (SUMITOMO)	001 ('99-'00)
4	77907-S04-003	HOLDER, CONNECTOR (2P)	001
5	77960-ST7-G01	SRS UNIT	001
6	77961-ST7-A91	HARNESS, MAIN	001
7	77963-SR3-L80	COVER, R. SRS UNIT	001
8	77964-SR3-L80	COVER, L. SRS UNIT	001
9	77982-S04-N81	HOLDER, COUPLER (2P)	001
10	90137-SR3-003	BOLT, TORX EARTH, 6X25	001 ('98)
10	90137-S84-A01	BOLT, TORX EARTH, 6X20	001 ('98-'00)
11	90137-S84-A01	BOLT, TORX EARTH, 6X20	004
12	91540-S30-003	CLIP, HARNESS BAND (NATURAL) (151.5MM)	005
13	91550-SH3-003ZG	CLIP, RR. PANEL LINING *NH120L*	002
14	93913-14480	SCREW, TAPPING, 4X16 (PO)	003


Block B-13-41 SRS UNIT (RH)

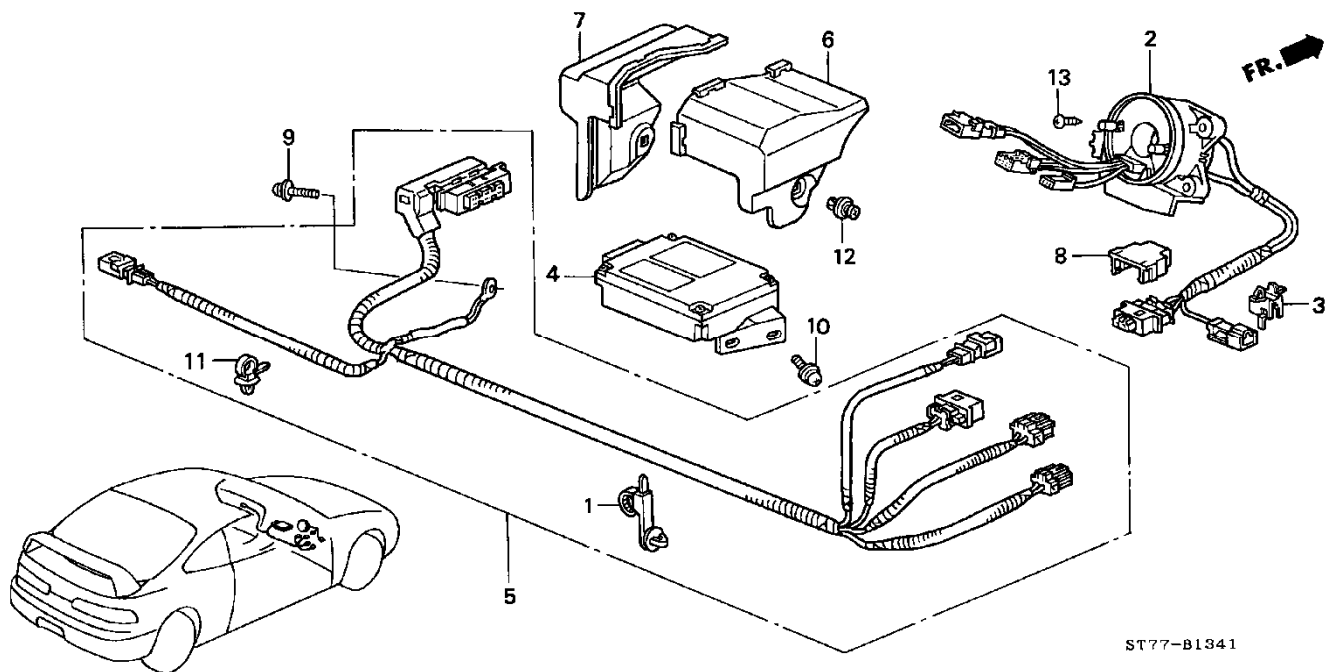

ST77-B1341


Refnr	Part Number	Part Description	Unit Qty
1	32132-SM4-003	BAND, WIRE HARNESS OFFSET (20) (BLACK) (122.5MM)	002
2	77900-S04-G01	REEL ASSY., CABLE (SUMITOMO)	001 ('98)
2	77900-S04-G05	REEL ASSY., CABLE (SUMITOMO)	001 ('99-'00)
3	77907-S04-003	HOLDER, CONNECTOR (2P)	001
4	77960-ST7-G01	SRS UNIT	001
5	77961-ST7-N91	HARNESS, MAIN	001
6	77963-SR3-L80	COVER, R. SRS UNIT	001
7	77964-SR3-L80	COVER, L. SRS UNIT	001
8	77982-S04-N81	HOLDER, COUPLER (2P)	001
9	90137-SR3-003	BOLT, TORX EARTH, 6X25	001 ('-98)
9	90137-S84-A01	BOLT, TORX EARTH, 6X20	001 ('98-'00)
10	90137-S84-A01	BOLT, TORX EARTH, 6X20	004
11	91540-S30-003	CLIP, HARNESS BAND (NATURAL) (151.5MM)	005
12	91550-SH3-003ZG	CLIP, RR. PANEL LINING *NH120L*	002
13	93913-14480	SCREW, TAPPING, 4X16 (PO)	003

Block B-14 FRONT WIPER (LH)

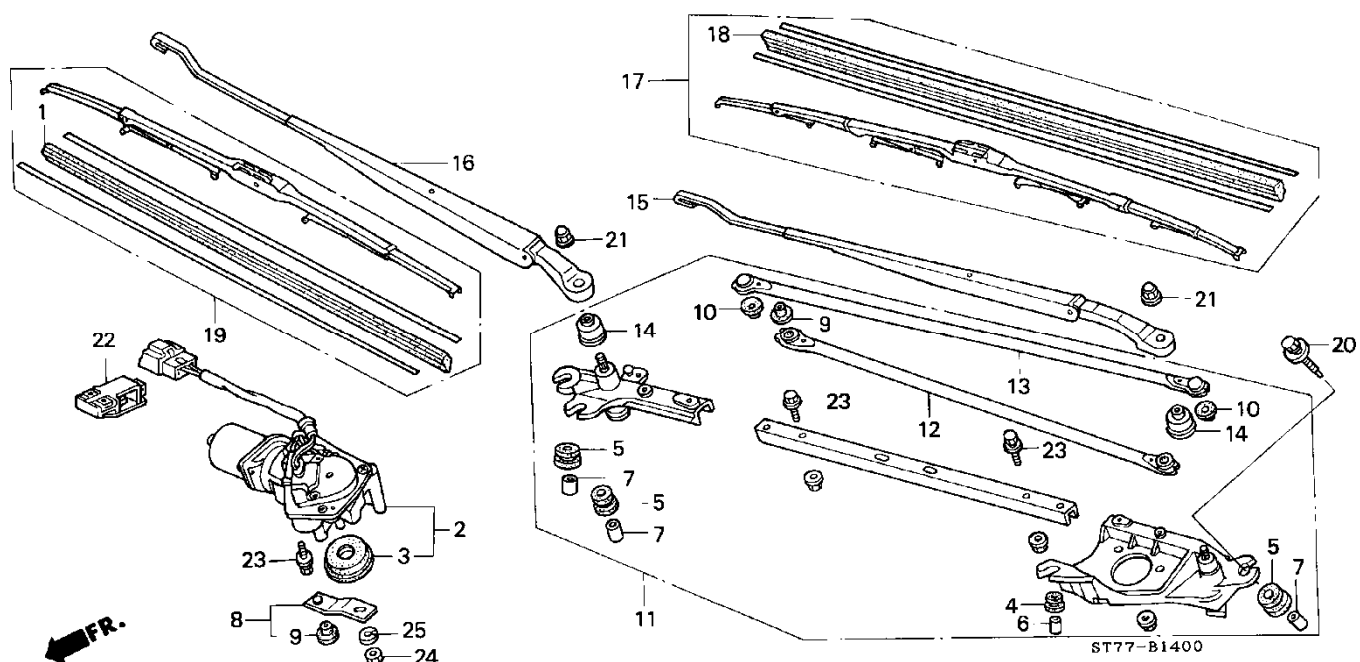

Refnr	Part Number	Part Description	Unit Qty
1	38472-SB2-003	RUBBER, BLADE (450MM) (PASSENGER SIDE)	001
2	76505-SR3-A01	MOTOR COMP., FR. WIPER	001
3	76515-SR3-003	SEAL A	001
4	76516-SE0-003	RUBBER, BRACKETLESS MOUNTING	001
5	76516-SR3-003	RUBBER, MOUNTING	003
6	76517-SE0-003	COLLAR, BRACKETLESS	001
7	76517-SM4-003	COLLAR	003
8	76520-SR3-A01	LINK UNIT A	001
9	76524-SD4-003	DUST SEAL	002
10	76524-SE0-013	DUST SEAL	002
11	76530-ST7-G01	LINK COMP., FR. WIPER	001
12	76540-SR3-003	ROD UNIT A	001
13	76550-SM4-003	ROD UNIT B	001
14	76561-SD4-003	CAP, PIVOT	002
15	76600-ST7-G01	ARM, WINDSHIELD WIPER (DRIVER SIDE)	001
16	76610-ST7-A01	ARM, WINDSHIELD WIPER (PASSENGER SIDE)	001
17	76620-SP0-G01	BLADE, WINDSHIELD WIPER (500MM) (DRIVER SIDE)	001
18	76622-SF4-003	RUBBER, BLADE (500MM) (DRIVER SIDE)	001
19	76630-SH3-G11	BLADE, WINDSHIELD WIPER (450MM) (PASSENGER SIDE)	001
20	90126-SR3-000	BOLT-WASHER, 6X32	004
21	90201-SK7-000	NUT, HEX. CAP, 10MM	002
22	91556-SR3-003	CLIP, COUPLER	001
23	93402-06014-08	BOLT-WASHER, 6X14	007
24	94002-08080-0S	NUT, HEX., 8MM	001
25	94111-08800	WASHER, SPRING, 8MM	001


Block B-14-1 FRONT WIPER (RH)

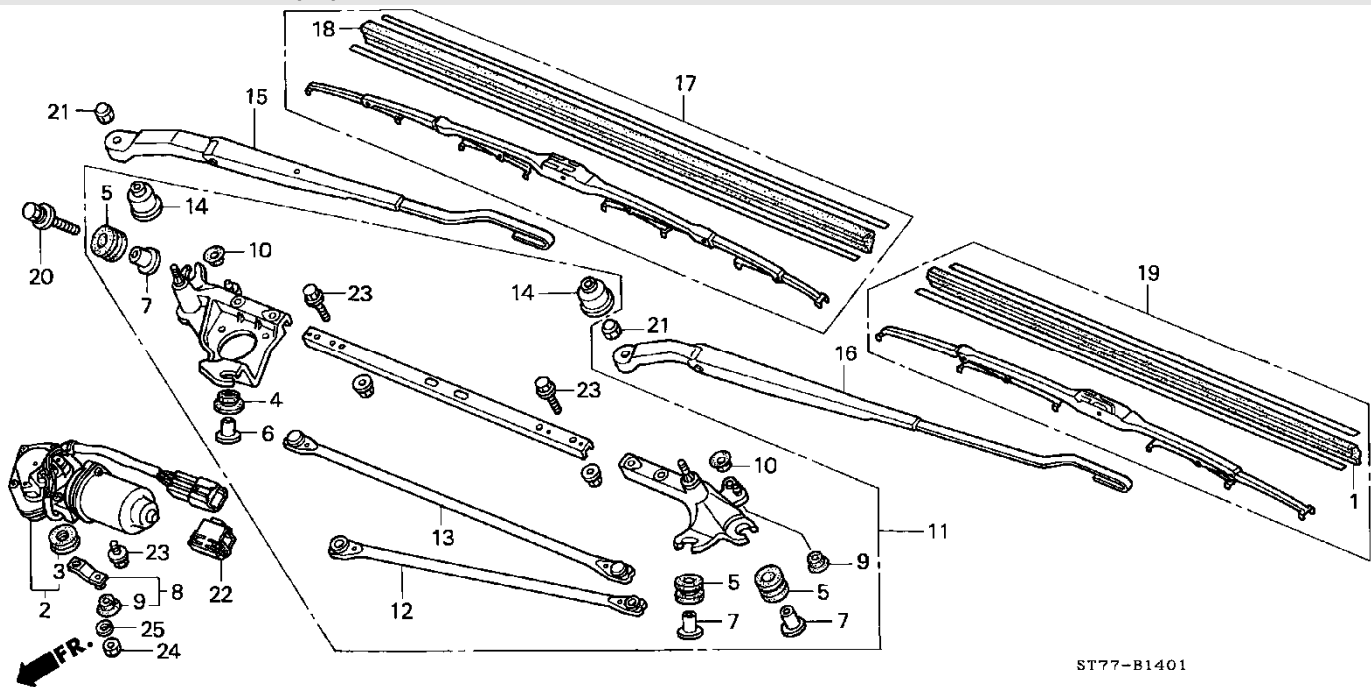

ST77-B1401


Refnr	Part Number	Part Description	Unit Qty
1	38472-SB2-003	RUBBER, BLADE (450MM) (PASSENGER SIDE)	001
2	76505-SR3-E01	MOTOR COMP., FR. WIPER (MITSUBA)	001
3	76515-SR3-003	SEAL A	001
4	76516-SE0-003	RUBBER, BRACKETLESS MOUNTING	001
5	76516-SR3-003	RUBBER, MOUNTING	003
6	76517-SE0-003	COLLAR, BRACKETLESS	001
7	76517-SM4-003	COLLAR	003
8	76520-SR3-003	LINK A ASSY., R.	001
9	76524-SD4-003	DUST SEAL	002
10	76524-SE0-013	DUST SEAL	002
11	76530-ST7-E01	LINK COMP., FR. WIPER	001
12	76540-SR3-003	ROD UNIT A	001
13	76550-SM4-003	ROD UNIT B	001
14	76561-SD4-003	CAP, PIVOT	002
15	76600-ST7-E01	ARM, WINDSHIELD WIPER (DRIVER SIDE)	001
16	76610-ST7-Q01	ARM, WINDSHIELD WIPER (PASSENGER SIDE)	001
17	76620-SP0-E01	BLADE, WINDSHIELD WIPER (500MM) (DRIVER SIDE)	001
18	76622-SF4-003	RUBBER, BLADE (500MM) (DRIVER SIDE)	001
19	76630-SH3-E11	BLADE, WINDSHIELD WIPER (450MM) (PASSENGER SIDE)	001
20	90126-SR3-000	BOLT-WASHER, 6X32	004
21	90201-SK7-000	NUT, HEX. CAP, 10MM	002
22	91556-SR3-003	CLIP, COUPLER	001
23	93402-06014-08	BOLT-WASHER, 6X14	007
24	94002-08080-0S	NUT, HEX., 8MM	001
25	94111-08800	WASHER, SPRING, 8MM	001

Block B-14-10 REAR WIPER

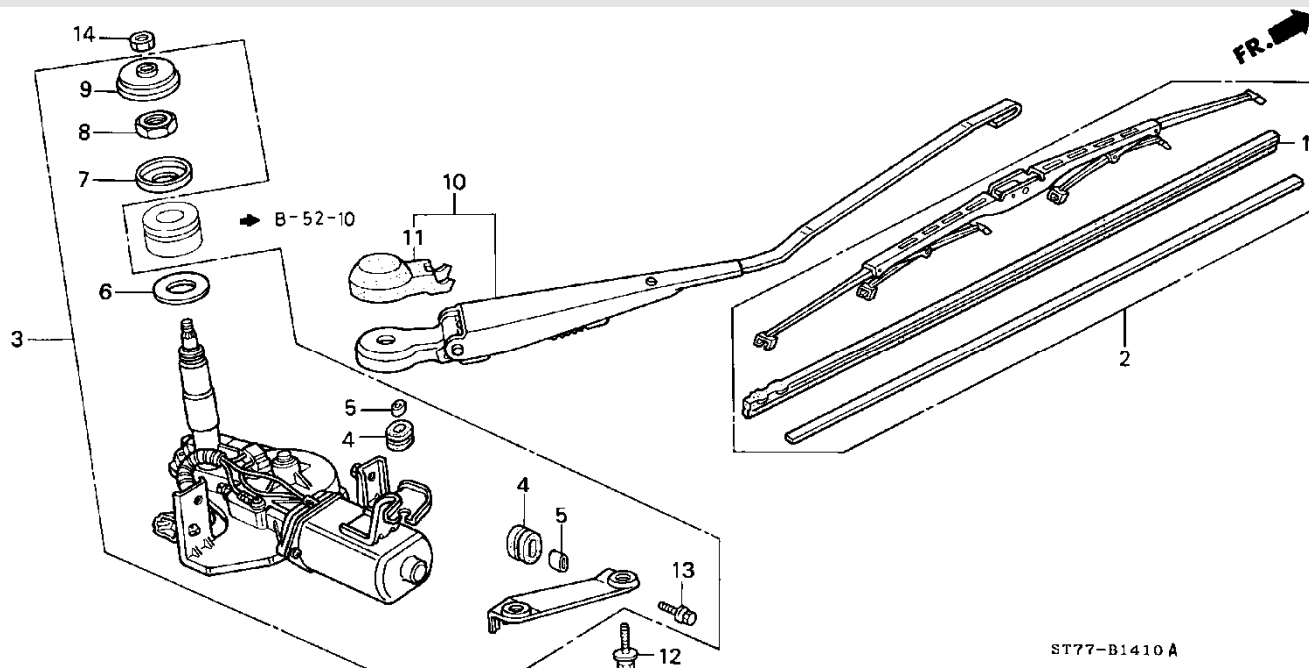


Refnr	Part Number	Part Description	Unit Qty
1	38472-SB3-003	RUBBER, BLADE (475MM)	001
2	76630-SH2-E11	BLADE, WINDSHIELD WIPER (475MM) (PASSENGER SIDE)	001
3	76700-SK7-A01	MOTOR ASSY., RR. WINDSHIELD WIPER	001
4	76701-SE1-003	RUBBER, MOUNTING	003
5	76702-SE1-003	COLLAR	003
6	76706-SK7-003	WASHER A, SPECIAL	001
7	76708-SK7-003	WASHER B, SPECIAL	001
8	76709-SE0-A01	NUT, SPECIAL, 18MM	001
9	76711-SK7-003	CAP, PIVOT	001
10	76720-SS0-E01	ARM, RR. WIPER	001
11	76722-SK7-003	COVER, ARM	001
12	90106-SE4-000	BOLT-WASHER, 6X18	002
13	92301-06020-0A	BOLT, RECESSED, 6X20	003
14	94002-08000-0S	NUT, HEX., 8MM	001

Block B-15 WINDSHIELD WASHER

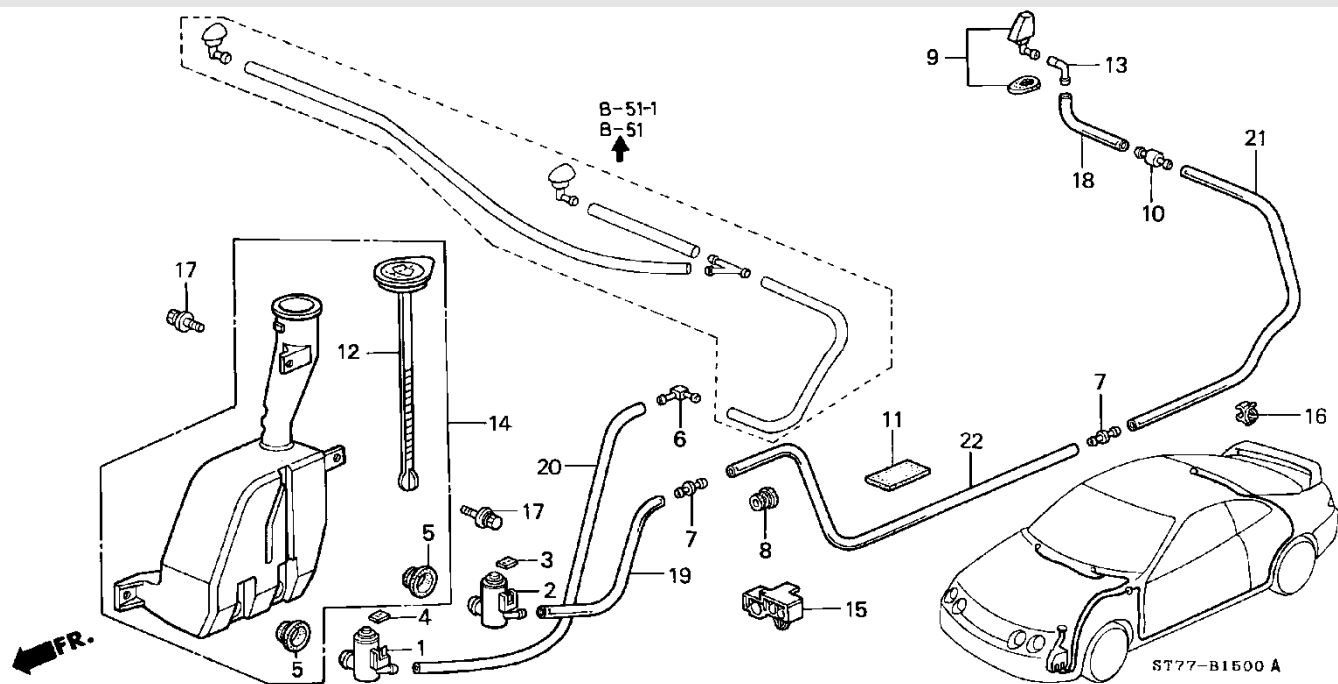

Refnr	Part Number	Part Description	Unit Qty
1	38512-SB0-922	MOTOR, WASHER (MITSUBA)	001
2	38512-SF0-013	MOTOR, WASHER (MITSUBA)	001
3	38516-SA0-671	PACKING (PARALLEL TYPE) (MITSUBA)	001
4	38516-SA5-671	PACKING (T-TYPE) (MITSUBA)	001
5	38519-SB0-003	BUSH, WASHER TANK (MITSUBA)	002
6	38562-SA0-003	JOINT L, WASHER TUBE (MITSUBA)	001
7	38562-663-920	JOINT B, WASHER TUBE (MITSUBA)	002
8	38564-SA7-013	GROMMET, WASHER TUBE (MITSUBA)	001
9	38570-SD2-962	NOZZLE, RR. WINDSHIELD WASHER (MITSUBA)	001
10	38571-SA5-621	VALVE, ONE WAY (MITSUBA)	001
11	66427-SA7-000	CUSHION, WIRE HARNESS (45X70) (GRAY)	007
12	76802-SV4-003	CAP UNIT, MOUTH	001
13	76813-SD5-003	ADAPTER, WASHER TUBE	001
14	76840-ST7-003	TANK SET, WASHER	001
15	91506-SR3-003	CLIP, TUBE WASHER (NATURAL)	001
16	91565-SK7-003	CLIP, WASHER TUBE	004
17	93405-06016-08	BOLT-WASHER, 6X16	003
18	95003-07010-31	TUBE, VINYL, 4X7X100 (95003-07001-60M)	001
19	95003-07092-31	TUBE, VINYL, 4X7X920 (95003-07001-60M)	001
20	95003-07092-70	TUBE, VINYL, 4X7X920 (95003-07001-70M)	001
21	95003-07195-31	TUBE, VINYL, 4X7X1950 (95003-07003-60M)	001
22	95003-07245-31	TUBE, VINYL, 4X7X2450 (95003-07003-60M)	001


Block B-16 RADIO ANTENNA/SPEAKER

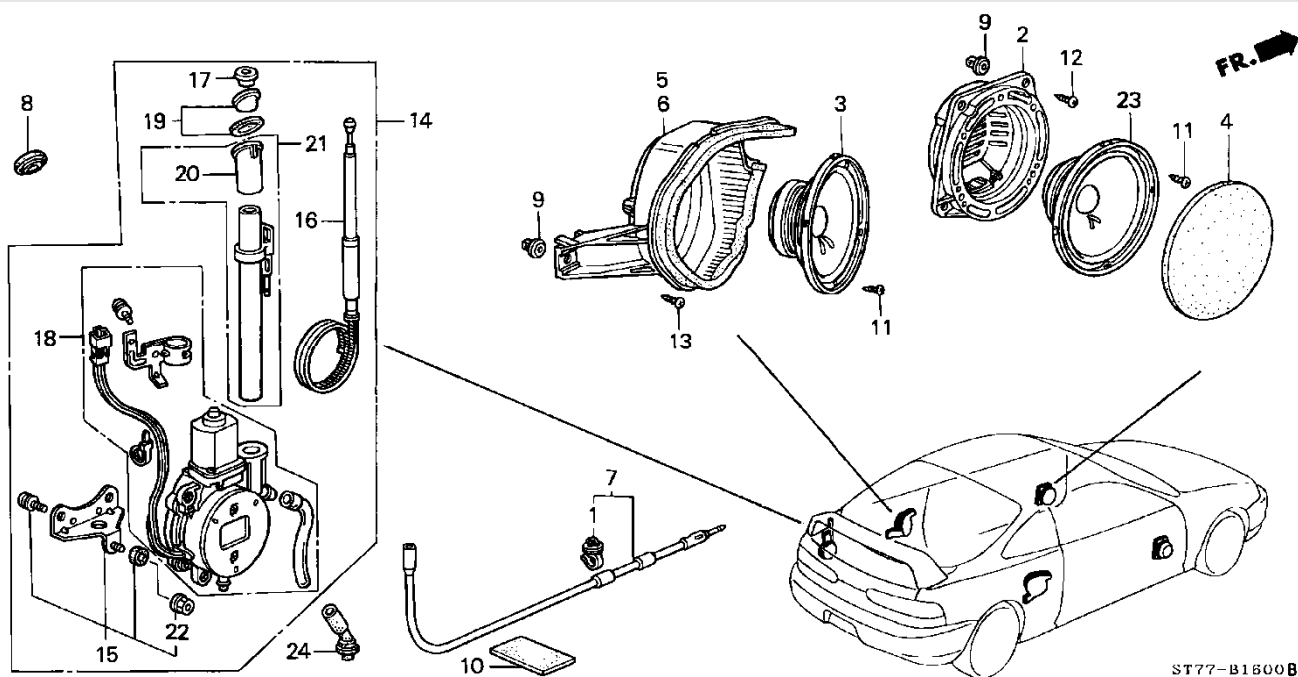

ST77-B1600B

Refnr	Part Number	Part Description	Unit Qty
1	32134-SM4-003	BAND, HARNESS OFFSET (10) (BROWN)(122.5MM)	001
2	39112-SH3-A01	BRACKET, FR. SPEAKER SEAL (160MM)	002
3	39120-S04-A01	SPEAKER ASSY. (160MM SINGLE) (PIONEER)	002 (RH)
3	39120-SV4-A01	SPEAKER ASSY. (6 1/2" SINGLE) (MATSUSHITA)	002 (LH)
4	39121-SB2-013	SEAL, SPEAKER HOLE	002 ('98-'99)
5	39124-ST7-A00	BRACKET, R. RR. SPEAKER	001 (RH)
5	39124-ST7-A10	BRACKET, R. RR. SPEAKER	001 (LH)
6	39126-ST7-A00	BRACKET, L. RR. SPEAKER	001 (RH)
6	39126-ST7-A10	BRACKET, L. RR. SPEAKER	001 (LH)
7	39159-ST7-003	SUB FEEDER, MOTOR ANTENNA	001
8	70576-688-000	GROMMET A, SIDE PANEL, 23MM	001 ('98)
9	90670-SG0-003	GROMMET, SCREW, 4MM	014
10	91902-SB2-003	CUSHION, WIRE HARNESS (50X100)	004 (LH)
10	91902-SB2-003	CUSHION, WIRE HARNESS (50X100)	006 (RH)
11	93903-14380	SCREW, TAPPING, 4X12	006 ('98-'99)
11	93903-14380	SCREW, TAPPING, 4X12	012 ('00)
12	93903-24420	SCREW, TAPPING, 4X16	008
13	93903-44480	SCREW, TAPPING, 4X16	006
14	39150-ST7-003	ANTENNA ASSY., MOTOR	001
15	39151-SM4-003	BRACKET, MOTOR ANTENNA	001
16	39152-SR4-003	MAST ASSY.	001
17	39154-SR4-013	NUT	001
18	39155-ST7-013	MOTOR ASSY.	001
19	39156-ST7-003	INSULATOR	001
20	39168-ST7-A01	CYLINDER	001
21	39179-ST7-A12	TUBE COMP.	001
22	94050-06080	NUT, FLANGE, 6MM	001
23	39120-S04-A01	SPEAKER ASSY. (160MM SINGLE) (PIONEER)	002 ('00)
24	39170-SJ4-000	VALVE, RR. MOTOR ANTENNA DRAIN	001


Block B-17 HEATER CONTROL

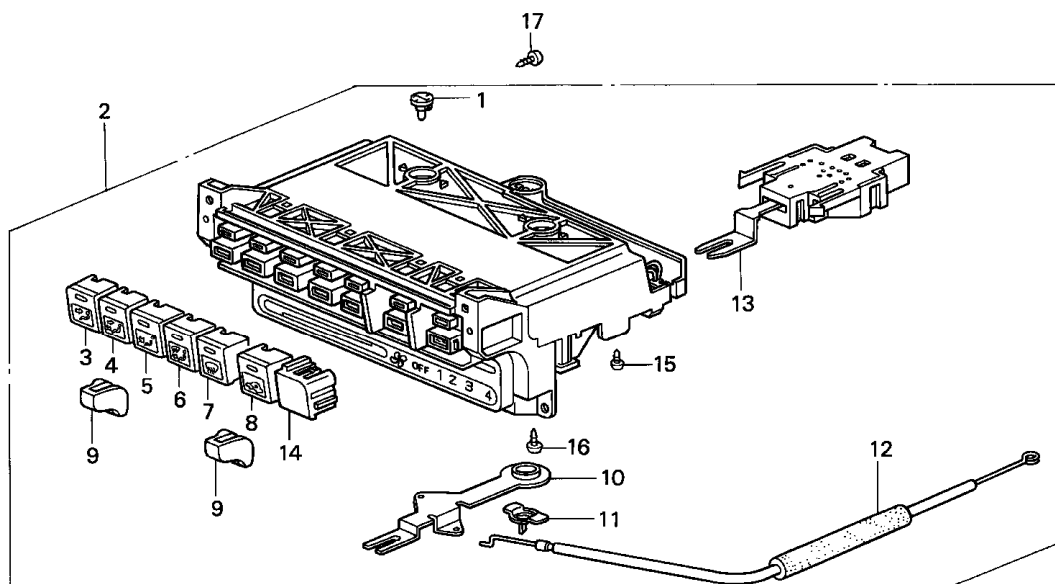

ST77-B1700

Refnr	Part Number	Part Description	Unit Qty
1	34354-SB0-003	BULB, NEO WEDGE (14V 100MA)	004
2	79500-ST7-A52	CONTROL ASSY., HEATER	001 (LH)
2	79500-ST7-J52	CONTROL ASSY., HEATER	001 (RH)
3	79501-ST7-J50	KNOB, VENTILATION SWITCH	001
4	79502-ST7-J50	KNOB, VENTILATION & HEATER	001
5	79503-ST7-J50	KNOB, HEATER SWITCH	001
6	79504-ST7-J50	KNOB, HEATER & DEFROSTER SWITCH	001
7	79505-ST7-J50	KNOB, DEFROSTER SWITCH	001
8	79506-ST7-J50	KNOB, RECIRCULATOR SWITCH	001
9	79507-ST7-000	KNOB, FAN & TEMPERATURE SWITCH	002
10	79512-SR3-003	LEVER	001
11	79529-SR3-003	STOPPER, CONTROL LEVER	001
12	79542-ST7-000	CABLE, TEMPERATURE CONTROL	001 (RH)
12	79542-ST7-A50	CABLE, TEMPERATURE CONTROL	001 (LH)
13	79570-ST7-003	SWITCH ASSY., HEATER FAN	001
14	79612-ST7-023	LID, AIR CONDITIONER SWITCH	001
15	93901-22220	SCREW, TAPPING, 3X10	007
16	93901-24320	SCREW, TAPPING, 4X12	006
17	93913-14420	SCREW, TAPPING, 4X16 (PO)	004


Block B-17-10 HEATER BLOWER (LH)

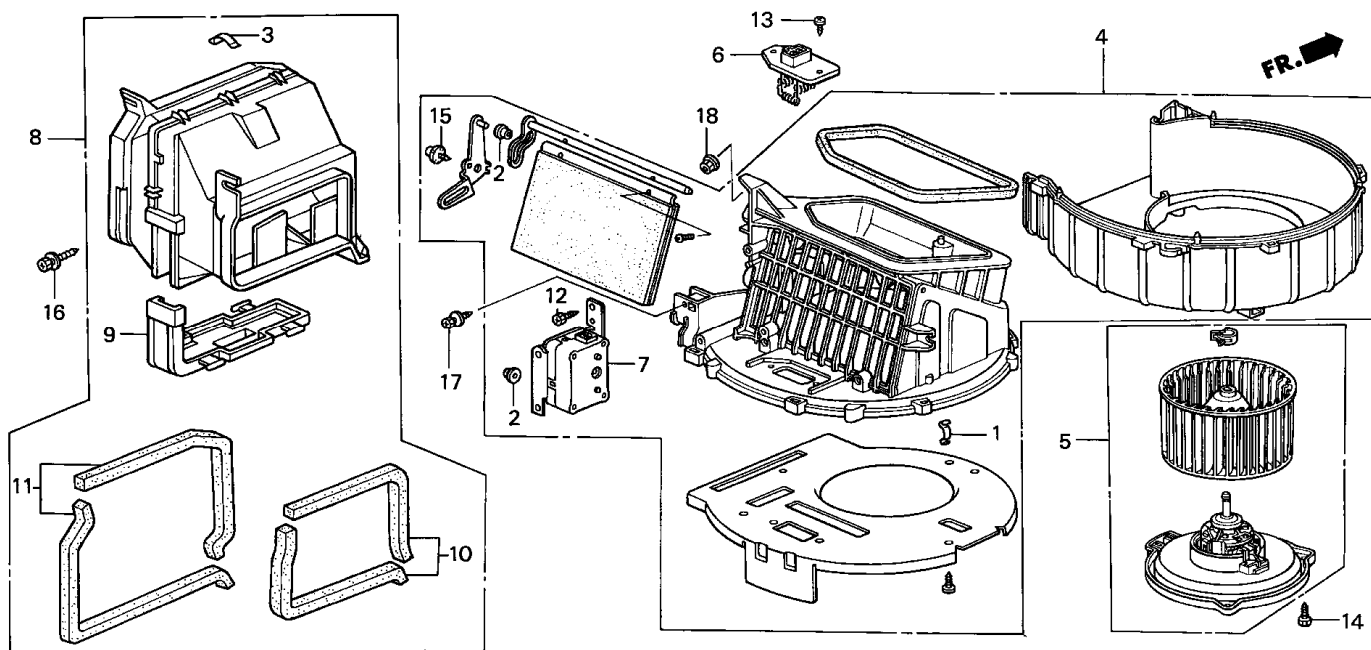

ST77-B1710 A


Refnr	Part Number	Part Description	Unit Qty
1	39246-671-003	CLAMP, CASE HOLD	006
2	79192-SR3-003	BUSH, LINK	002
3	79194-ST3-E01	CLIP, CASE	007
4	79305-SR3-A01	BLOWER SUB ASSY. (DENSO)	001
5	79310-SR3-A01	MOTOR ASSY., BLOWER (DENSO)	001
6	79330-SR3-A01	RESISTOR, BLOWER	001
7	79350-SR3-A01	MOTOR ASSY., FRESH & RECIRCULAR	001
8	79810-ST3-G01	DUCT, HEATER	001
9	79813-ST3-E01	COVER, DUCT	001
10	80286-ST3-S01	SEAL, DUCT (INLET)	001
11	80287-ST3-S01	SEAL, DUCT (OUTLET)	001
12	90121-SR3-003	SCREW, TAPPING, 5X12	002
13	90123-SR3-003	SCREW, TAPPING, 4X16	002
14	90132-SR3-003	SCREW, TAPPING, 5X16	003
15	90133-SR3-003	SCREW-WASHER, 4X16	001
16	90155-SE0-003	SCREW, TAPPING, 6X20	002
17	90156-SH3-000	BOLT-WASHER, 6X24	002
18	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	001

Block B-17-11 HEATER BLOWER (RH)

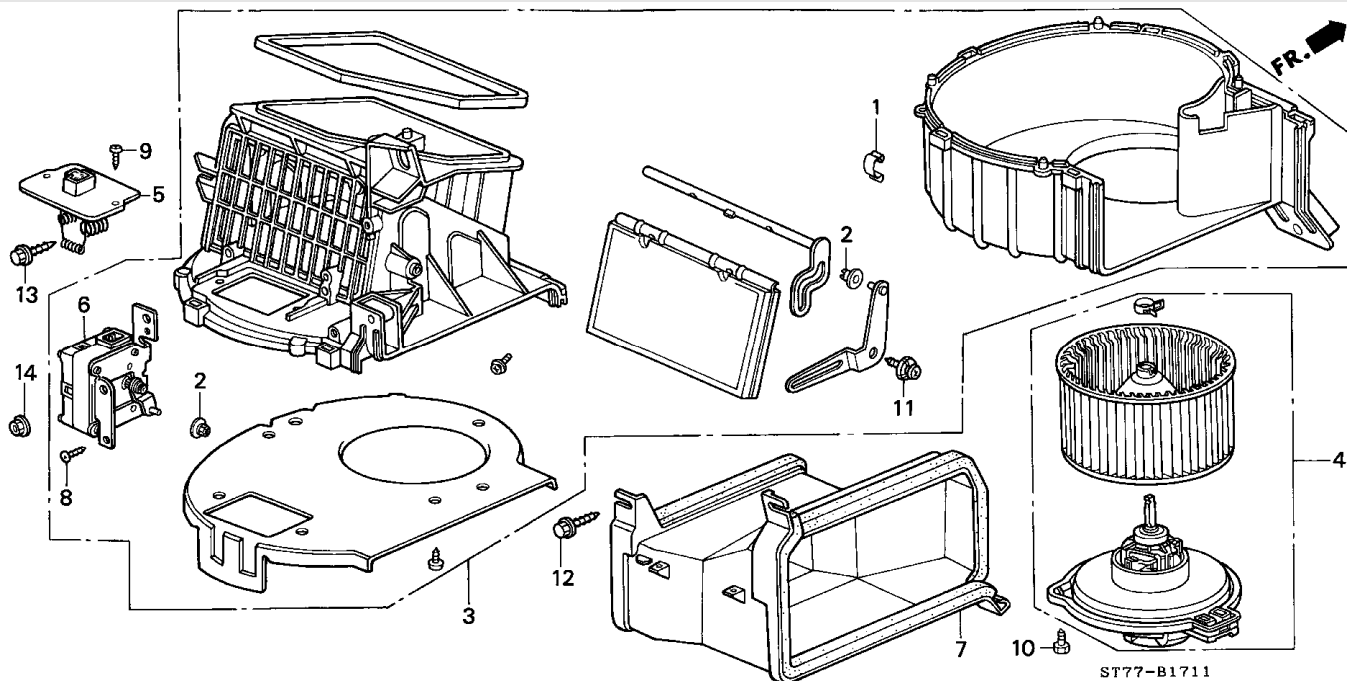


Refnr	Part Number	Part Description	Unit Qty
1	39246-671-003	CLAMP, CASE HOLD	006
2	79192-SR3-003	BUSH, LINK	002
3	79305-SR3-003	BLOWER SUB ASSY. (DENSO)	001
4	79310-SR3-003	MOTOR ASSY., BLOWER (DENSO)	001
5	79330-SR3-003	RESISTOR, BLOWER	001
6	79350-SR3-003	MOTOR ASSY., FRESH & RECIRCULAR	001
7	79810-SR3-003	DUCT, HEATER	001
8	90121-SR3-003	SCREW, TAPPING, 5X12	002
9	90123-SR3-003	SCREW, TAPPING, 4X16	002
10	90132-SR3-003	SCREW, TAPPING, 5X16	003
11	90133-SR3-003	SCREW-WASHER, 4X16	001
12	90155-SE0-003	SCREW, TAPPING, 6X20	002
13	90156-SH3-000	BOLT-WASHER, 6X24	002
14	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	001

Block B-17-20 HEATER UNIT (LH)

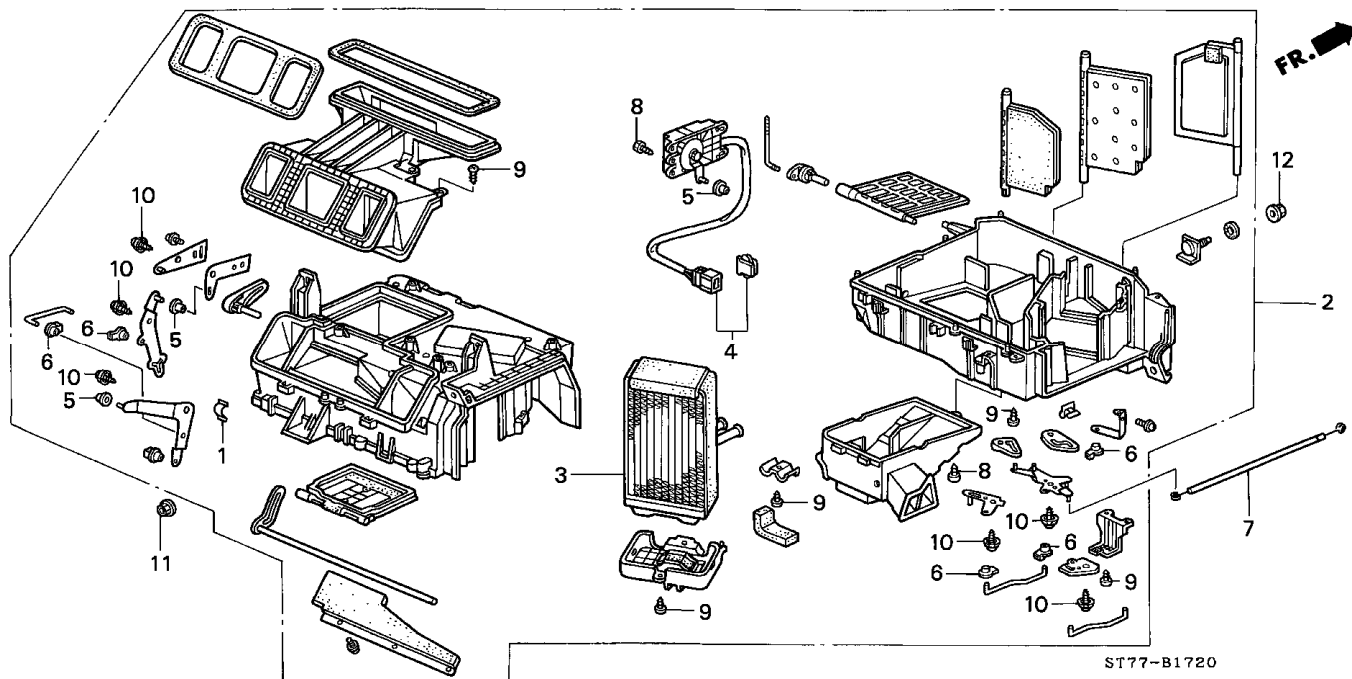


Refnr	Part Number	Part Description	Unit Qty
1	39246-671-003	CLAMP, CASE HOLD	008
2	79100-ST7-A01	HEATER UNIT	001
3	79110-SR3-A01	CORE COMP., HEATER	001
4	79140-ST7-A02	MOTOR ASSY., MODE	001
5	79192-SR3-003	BUSH, LINK	003
6	79195-SF1-003	HOLDER, ROD	005
7	79544-ST7-A00	CABLE, WATER VALVE CONTROL	001
8	90121-SR3-003	SCREW, TAPPING, 5X12	003
9	90122-SR3-003	SCREW, TAPPING, 5X12	009
10	90133-SR3-003	SCREW-WASHER, 4X16	006
11	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	002
12	94050-08080	NUT, FLANGE, 8MM	001

Block B-17-21 HEATER UNIT (RH)

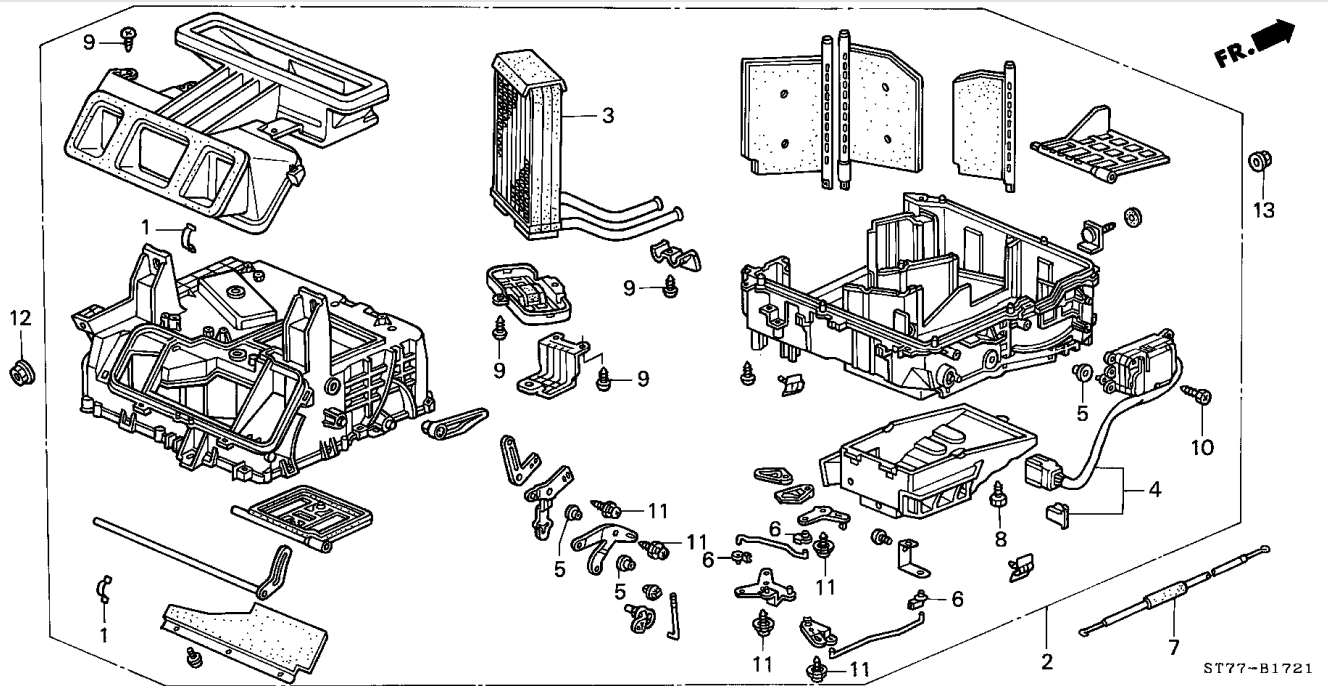


Refnr	Part Number	Part Description	Unit Qty
1	39246-671-003	CLAMP, CASE HOLD	008
2	79100-ST7-003	HEATER UNIT	001
3	79110-SR3-003	CORE COMP., HEATER	001
4	79140-ST7-003	MOTOR ASSY., MODE	001
5	79192-SR3-003	BUSH, LINK	003
6	79195-SF1-003	HOLDER, ROD	003
7	79544-ST7-000	CABLE, WATER VALVE CONTROL	001
8	90121-SR3-003	SCREW, TAPPING, 5X12	001
9	90122-SR3-003	SCREW, TAPPING, 5X12	009
10	90125-SR3-003	SCREW, TAPPING, 5X15	002
11	90133-SR3-003	SCREW-WASHER, 4X16	005
12	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	002
13	94050-08080	NUT, FLANGE, 8MM	001

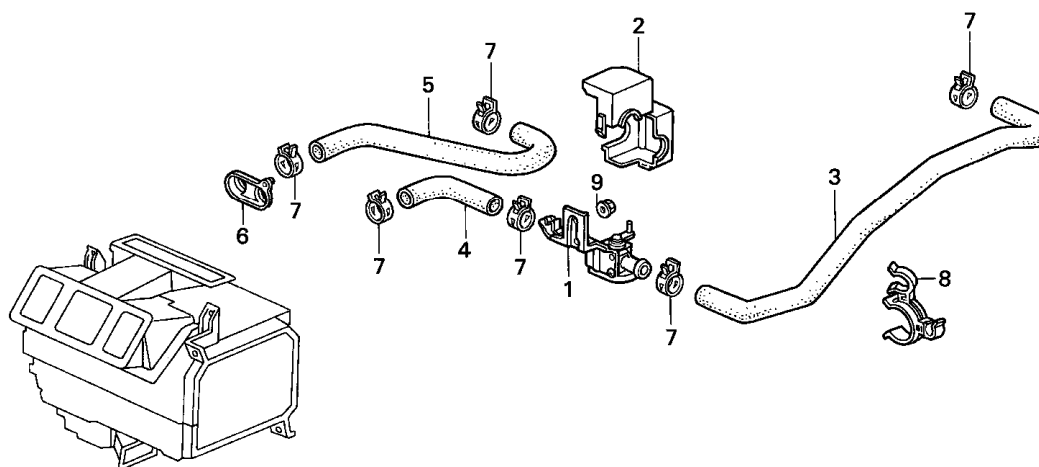

ST77-B1730

Refnr	Part Number	Part Description	Unit Qty
1	79710-ST7-003	VALVE ASSY., WATER	001 (RH)
1	79710-ST7-A01	VALVE ASSY., WATER	001 (LH)
2	79715-ST7-000	COVER, WATER VALVE	001
3	79721-ST7-000	HOSE A, WATER IN.	001
4	79722-ST7-000	HOSE B, WATER IN.	001
5	79725-SR3-J30	HOSE, WATER OUTLET	001
6	79731-SR3-000	GROMMET, HEATER PIPE	001
7	91405-PK1-003	CLIP, WATER HOSE, 24MM	006
8	91553-SK7-003	CLAMP, 24X39	001
9	90361-SV4-003	NUT, PAINT CUTTING, 6MM	001


Block B-18 TIRE/WHEEL DISK

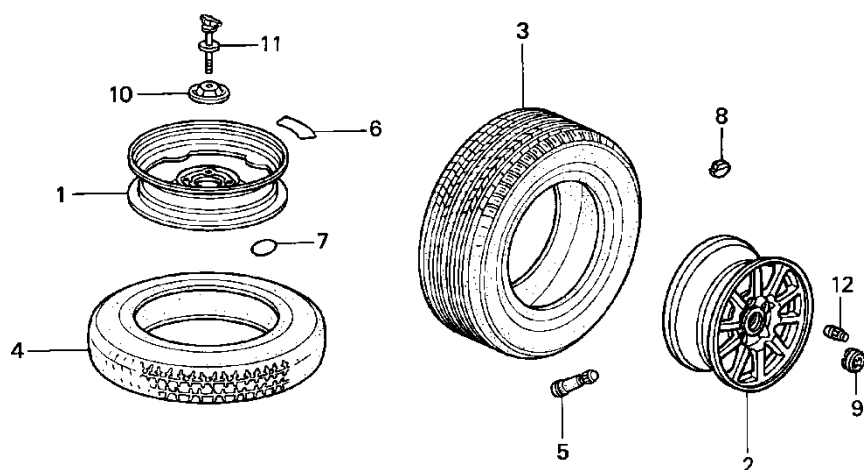

ST77-B1800

Refnr	Part Number	Part Description	Unit Qty
1	42700-SX0-N01	DISK, WHEEL (15X4T) (CHUO)	001
2	42700-S03-Z01	DISK, ALUMINIUM WHEEL (15X6JJ) (ENKEI) (CHAMPIONSHIP WHITE)	004
2	42700-ST7-G11	DISK, ALUMINIUM WHEEL (15X6JJ) (ENKEI) (KAISER SILVER ME.)	004 ('99-'00)
3	42751-ST7-G01	TIRE, 195/55R15 85W (BRIDGESTONE)	004
4	42751-S04-943	TIRE (T135/70D15 99M) (BRIDGESTONE)	001
4	42751-S04-944	TIRE (T135/70D15 99M) (DUNLOP)	001
5	42753-SH3-003	VALVE, RIM (US PACIFIC)	005
5	42753-671-003	VALVE, RIM (TAIHEIYO)	005 ('99)
5	42753-SE0-A02	VALVE, RIM (SCHRADER)	005 ('99)
5	42753-SR1-003	VALVE, RIM (US PACIFIC)	005 ('99)
6	42767-SB0-600	PLATE, SPARE TIRE CAUTION (T-TYPE) (ENGLISH)	001
6	42767-SR3-P10	PLATE, SPARE TIRE CAUTION (T-TYPE) (PORTUGAL)	(1) ('99) (LH)
7	42767-SH3-E00	PLATE, SPARE TIRE CAUTION (T-TYPE)	001
8	44721-SF1-A01	WEIGHT, BALANCE (10G) (YAMATE)	N
8	44722-SF1-A01	WEIGHT, BALANCE (20G) (YAMATE)	N
8	44723-SF1-A01	WEIGHT, BALANCE (30G) (YAMATE)	N
8	44724-SF1-A01	WEIGHT, BALANCE (40G) (YAMATE)	N
8	44726-SF1-A01	WEIGHT, BALANCE (5G) (YAMATE)	N
8	44727-SF1-A01	WEIGHT, BALANCE (15G) (YAMATE)	N
8	44728-SF1-A01	WEIGHT, BALANCE (25G) (YAMATE)	N
8	44729-SF1-A01	WEIGHT, BALANCE (35G) (YAMATE)	N
8	44730-SF1-A01	WEIGHT, BALANCE (45G) (YAMATE)	N
8	44721-SM1-A01	WEIGHT, BALANCE (10G) (B.T.C.)	N ('99)
8	44722-SM1-A01	WEIGHT, BALANCE (20G) (B.T.C.)	N ('99)
8	44723-SM1-A01	WEIGHT, BALANCE (30G) (B.T.C.)	N ('99)
8	44724-SM1-A01	WEIGHT, BALANCE (40G) (B.T.C.)	N ('99)
8	44726-SM1-A01	WEIGHT, BALANCE (5G) (B.T.C.)	N ('99)
8	44727-SM1-A01	WEIGHT, BALANCE (15G) (B.T.C.)	N ('99)
8	44728-SM1-A01	WEIGHT, BALANCE (25G) (B.T.C.)	N ('99)
8	44729-SM1-A01	WEIGHT, BALANCE (35G) (B.T.C.)	N ('99)
8	44730-SM1-A01	WEIGHT, BALANCE (45G) (B.T.C.)	N ('99)
9	44732-SL0-J70	CAP ASSY., ALUMINIUM WHEEL CENTER (CHAMPIONSHIP WHITE)	004
9	44732-ST7-Z20ZB	CAP ASSY., ALUMINIUM WHEEL CENTER *NH546M*	004 ('99-'00)
10	83850-SH3-000	PLATE, ANCHOR BOLT	001
11	83853-SA7-980	BOLT, ANCHOR (79MM)	001
12	90304-SA5-013	NUT, WHEEL (CHROME PLATED) (FUSE RASHI)	020


Block B-19-10 REAR BRAKE

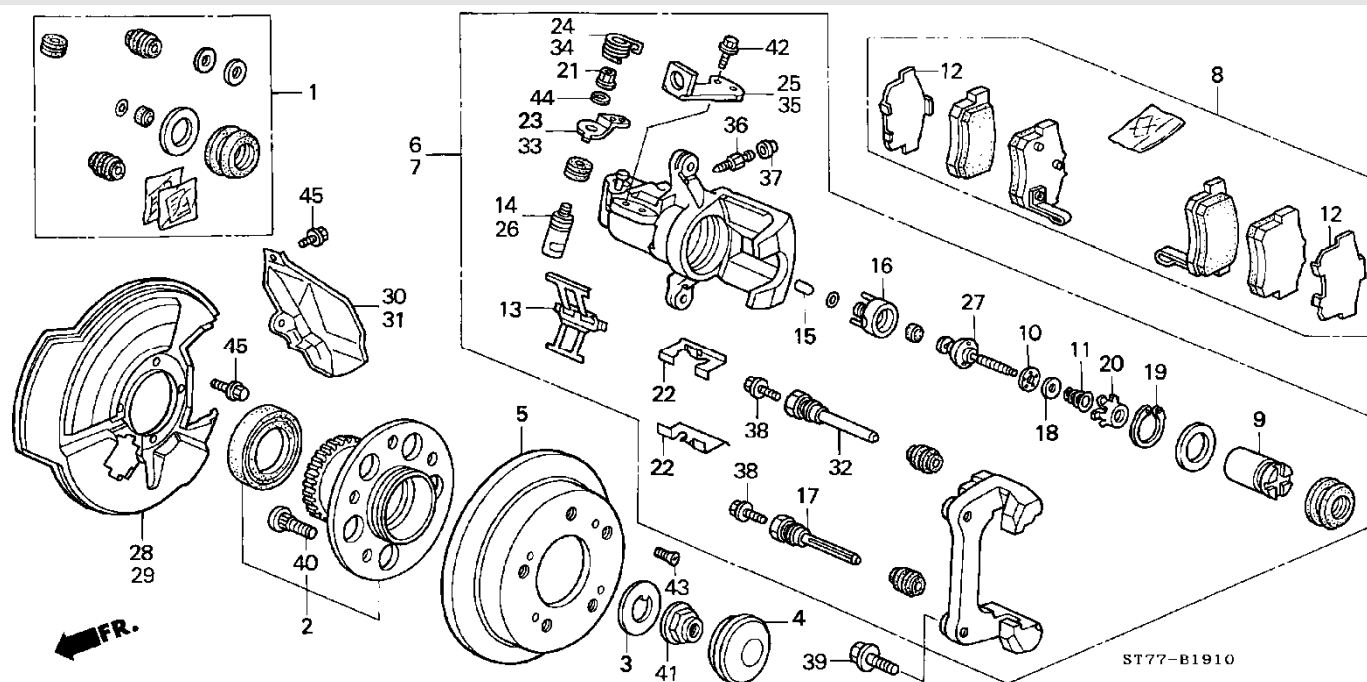

Refnr	Part Number	Part Description	Unit Qty
1	01473-SV4-000	CALIPER SET, RR.	002
2	42200-ST7-R51	BEARING ASSY., RR. HUB UNIT	002 ('00)
2	42200-S03-C51	BEARING ASSY., RR. HUB UNIT	002 ('00)
3	42324-SB2-020	WASHER, HUB UNIT	002
4	42326-ST7-Z00	CAP, HUB UNIT	002
5	42510-ST7-R00	DISK, RR. BRAKE	002
6	43018-S03-Z02	CALIPER SUB ASSY., R. RR.	001
7	43019-S03-Z02	CALIPER SUB ASSY., L. RR.	001
8	43022-SV4-G21	PAD SET, RR.	001 ('98)
8	43022-SV4-G22	PAD SET, RR.	001 ('99-'00)
9	43215-SM4-951	PISTON ASSY.	002
10	43223-SD2-932	BEARING A	002
11	43224-SD2-931	SPRING B, ADJUSTING	002
12	43224-SP0-003	SHIM, BRAKE PAD OUTER	002
13	43227-SG0-013	SPRING, PAD	002
14	43228-SD2-933	SHAFT A (LEFT HAND SIDE)	001
15	43229-SD2-931	ROD	002
16	43233-S84-A51	PISTON COMP., SLEEVE	002 ('00)
16	43233-S5A-J01	PISTON COMP., SLEEVE	002 ('00)
17	43235-S84-A51	PIN A	002
18	43236-S04-003	SPACER	002
19	43238-SF1-003	RING, RETAINING	002
20	43241-SF1-003	GUIDE, SPRING	002
21	43243-SD2-931	NUT, PARKING	002
22	43244-SG0-003	RETAINER	004
23	43245-SH3-931	LEVER, R.	001
24	43246-SD2-931	SPRING, R. RETURN (LEFT HAND SIDE)	001
25	43247-S03-Z01	ARM, R.	001
26	43248-SD2-933	SHAFT B (RIGHT HAND SIDE)	001
27	43249-S04-003	BOLT, ADJUSTER	002
28	43253-ST3-950	GUARD, R. RR. SPLASH	001
29	43254-ST3-950	GUARD, L. RR. SPLASH	001
30	43255-ST7-R00	PROTECTOR, R. RR. CALIPER	001
31	43256-ST7-R00	PROTECTOR, L. RR. CALIPER	001
32	43262-S84-A51	PIN B	002
33	43265-SH3-931	LEVER, L.	001
34	43266-SD2-931	SPRING, L. RETURN (RIGHT HAND SIDE)	001
35	43267-S03-Z01	ARM, L.	001
36	43352-SM4-951	SCREW, BLEEDER	002
37	43353-SD5-003	CAP, BLEEDER SCREW	002
38	45240-SC2-003	BOLT, FLANGE, 8X22	004
39	90103-SN7-003	BOLT, FLANGE, 10X25	004
40	90113-SA0-006	BOLT, WHEEL (SAGA)	010
40	90113-SA0-025	BOLT, WHEEL (NAGOYA RASHI)	010


41	90305-692-010	NUT, SPINDLE (22MM)	002
42	93402-10025-08	BOLT-WASHER, 10X25	002
43	93600-06014-0H	SCREW, FLAT, 6X14	004
44	94111-10800	WASHER, SPRING, 10MM	002
45	95801-06012-08	BOLT, FLANGE, 6X12	012

Block B-21 FRONT DRIVESHAFT/ HALF SHAFT ('98-'99)

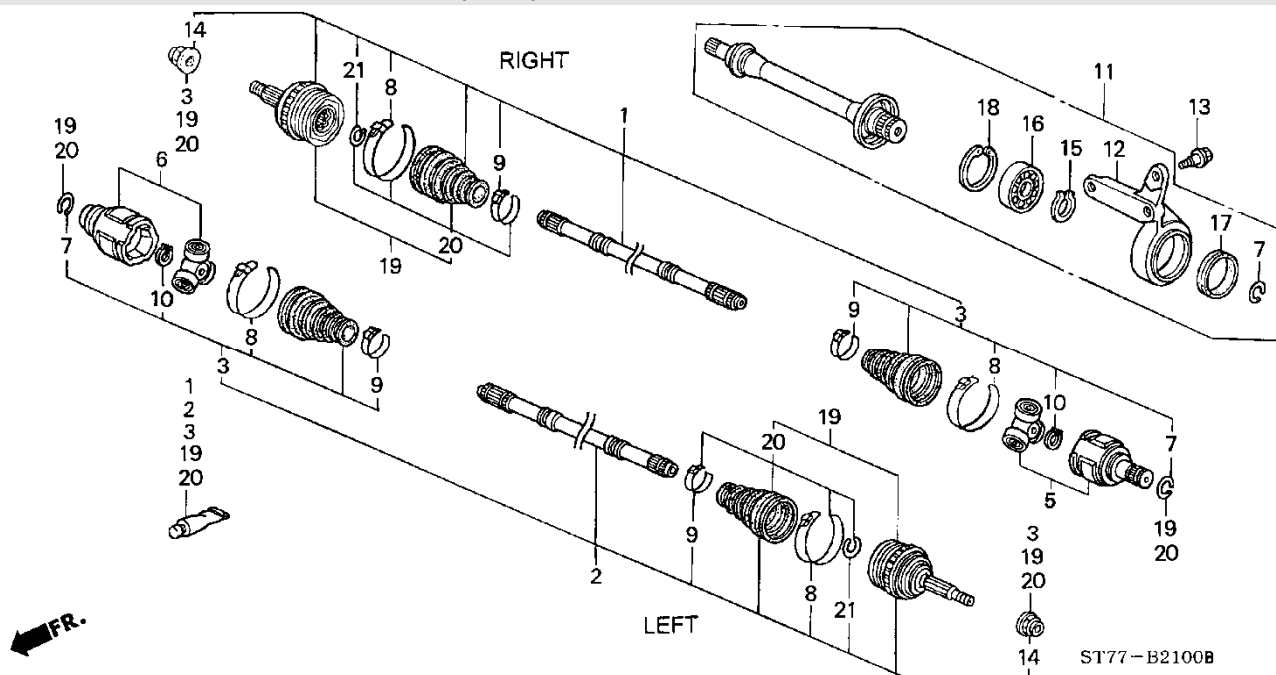

Refnr	Part Number	Part Description	Unit Qty
1	44010-ST7-J71	DRIVESHAFT SET, R.	001
2	44011-ST7-J71	DRIVESHAFT SET, L.	001
3	44017-ST7-R50	BOOT SET, INBOARD	002
5	44310-SH3-J00	JOINT COMP., INBOARD	001
6	44310-ST7-900	JOINT COMP., INBOARD	001
7	44319-S0A-300	SET RING, 28X2.0	002
8	44327-SV4-305	BAND, JOINT BOOT (DOUBLE ROLLED BAND)	004
9	44329-SV4-305	BAND, SHAFT BOOT (DOUBLE ROLLED BAND)	004
10	44338-SB0-300	CIRCLIP, 26MM	002
11	44500-SR3-J01	SHAFT ASSY., HALF	001
12	44502-SR3-J00	SUPPORT COMP., HALF SHAFT	001
13	90102-SF1-000	BOLT, HEX., 10X1.25	003
14	90305-692-010	NUT, SPINDLE (22MM)	002
15	90681-SR3-000	CIRCLIP, EXTERNAL, 33MM	001
16	91057-SR3-008	BEARING, HALF SHAFT	001
17	91260-SR3-003	SEAL, HALF SHAFT OUTER (NOK)	001
17	91260-SR3-004	SEAL, HALF SHAFT OUTER (ARAI)	001
18	94520-55000	CIRCLIP, INTERNAL, 55MM	001
19	44014-ST7-J70	JOINT SET, OUTBOARD	002
20	44018-ST7-C03	BOOT SET, OUTBOARD	002
21	44337-SB0-300	RING B, STOPPER	002


Block B-21-1 FRONT DRIVESHAFT/ HALF SHAFT ('00)

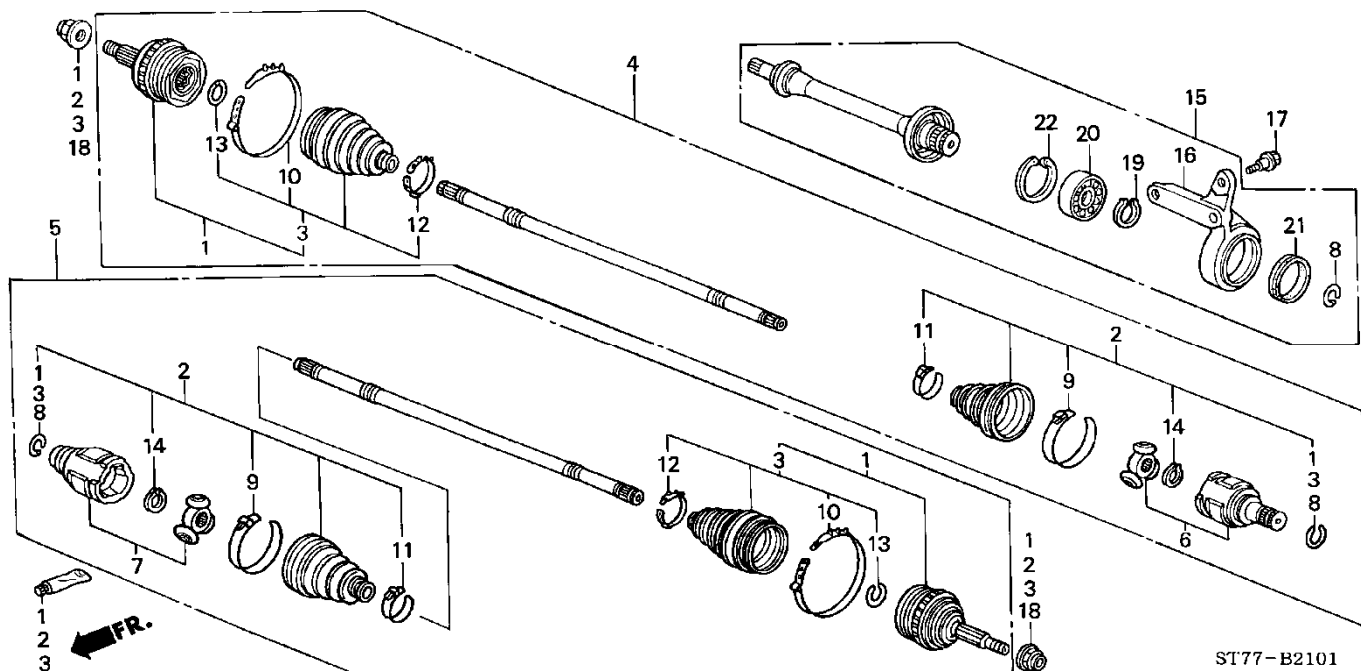

ST77-B2101


Refnr	Part Number	Part Description	Unit Qty
1	44014-ST7-C61	JOINT SET, OUTBOARD	002
2	44017-ST7-R50	BOOT SET, INBOARD	002
3	44018-ST7-C62	BOOT SET, OUTBOARD	002
4	44305-S03-950	DRIVESHAFT ASSY., R.	001
5	44306-S03-950	DRIVESHAFT ASSY., L.	001
6	44310-SH3-J00	JOINT COMP., INBOARD	001
7	44310-ST7-900	JOINT COMP., INBOARD	001
8	44319-S0A-300	SET RING, 28X2.0	002
9	44327-SV4-305	BAND, JOINT BOOT (DOUBLE ROLLED BAND)	002
10	44327-S04-A01	BAND B, DRIVESHAFT (NIPPON HATSUJO)	002
10	44327-S04-A02	BAND B, DRIVESHAFT (OETIKER LIMITED)	002
11	44329-SV4-305	BAND, SHAFT BOOT (DOUBLE ROLLED BAND)	002
12	44329-S0K-C01	BAND, DRIVESHAFT (OETIKER LIMITED)	002
12	44329-SX0-C02	BAND, DRIVESHAFT (NIPPON HATSUJO)	002
13	44337-SB0-300	RING B, STOPPER	002
14	44338-SB0-300	CIRCLIP, 26MM	002
15	44500-SR3-J01	SHAFT ASSY., HALF	001
16	44502-SR3-J00	SUPPORT COMP., HALF SHAFT	001
17	90102-SF1-000	BOLT, HEX., 10X1.25	003
18	90305-692-010	NUT, SPINDLE (22MM)	002
19	90681-SR3-000	CIRCLIP, EXTERNAL, 33MM	001
20	91057-SR3-008	BEARING, HALF SHAFT	001
21	91260-SR3-003	SEAL, HALF SHAFT OUTER (NOK)	001
21	91260-SR3-004	SEAL, HALF SHAFT OUTER (ARAI)	001
22	94520-55000	CIRCLIP, INTERNAL, 55MM	001

Block B-22 FRONT BRAKE

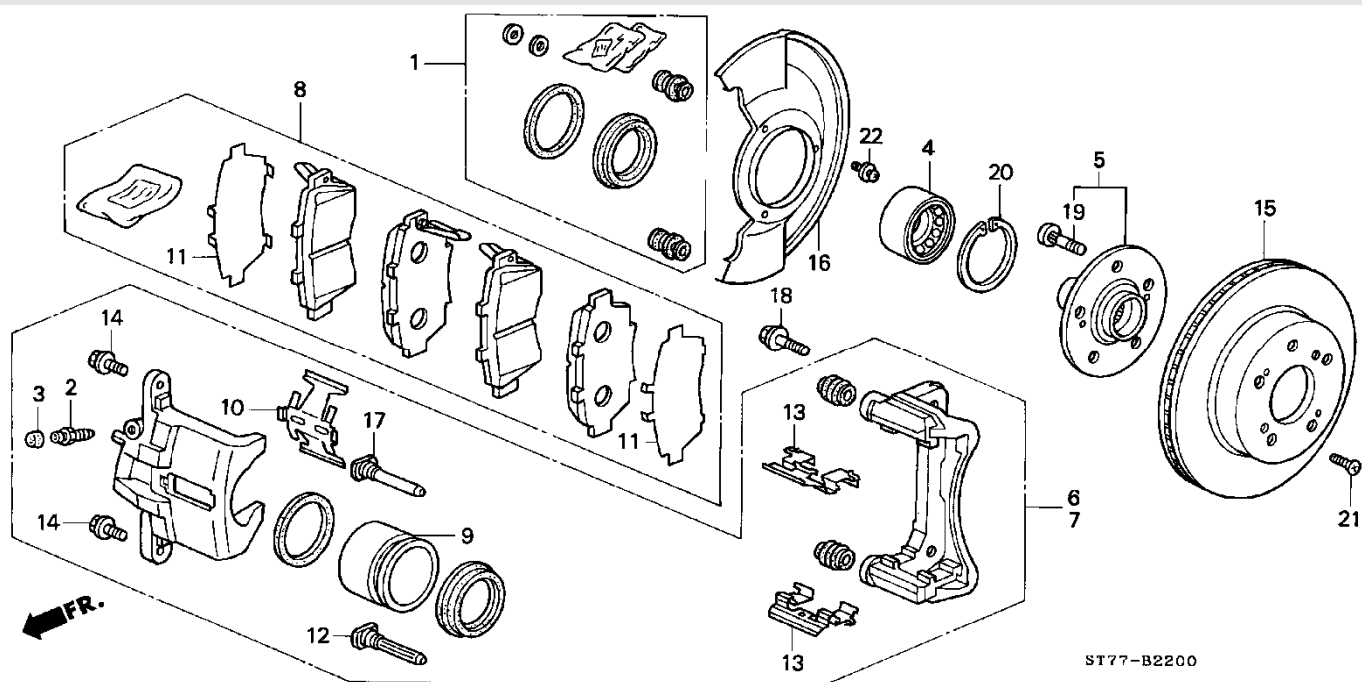

Refnr	Part Number	Part Description	Unit Qty
1	01463-ST7-R00	CALIPER SET, FR.	002
2	43352-SM4-951	SCREW, BLEEDER	002
3	43353-SD5-003	CAP, BLEEDER SCREW	002
4	44300-S04-A01	BEARING ASSY., FR. HUB (NTN)	002
4	44300-S04-A02	BEARING ASSY., FR. HUB (KOYO SEIKO)	002
5	44600-ST7-R00	HUB ASSY., FR.	002
6	45018-SM5-000	CALIPER SUB ASSY., R. FR.	001
7	45019-SM5-000	CALIPER SUB ASSY., L. FR.	001
8	45022-ST7-R01	PAD SET, FR.	001 ('98)
8	45022-ST7-R02	PAD SET, FR.	001 ('99-'00)
9	45216-SM4-003	PISTON	002
10	45227-SM4-003	SPRING, PAD	002
11	45228-SL0-003	SHIM, OUTER PAD	002
12	45235-SL0-003	PIN A	002
13	45237-SM5-A01	RETAINER	004
14	45240-SM4-003	BOLT, FLANGE, 10X24	004
15	45251-SZ3-000	DISK, FR. BRAKE (15")	002
16	45255-ST7-R00	GUARD, FR. BRAKE SPLASH	002
17	45262-SL0-003	PIN B	002
18	90107-SM4-000	BOLT, CALIPER MOUNTING (12X21)	004
19	90113-SD4-901	BOLT, WHEEL (NAGOYA RASHI)	010
19	90113-SD4-902	BOLT, WHEEL (SAGA)	010
20	90681-SR3-A00	CIRCLIP, SPECIAL INTERNAL, 79MM	002
21	93600-06014-0H	SCREW, FLAT, 6X14	004
22	93892-05012-08	SCREW-WASHER, 5X12	006


Block B-23 PEDAL (LH)

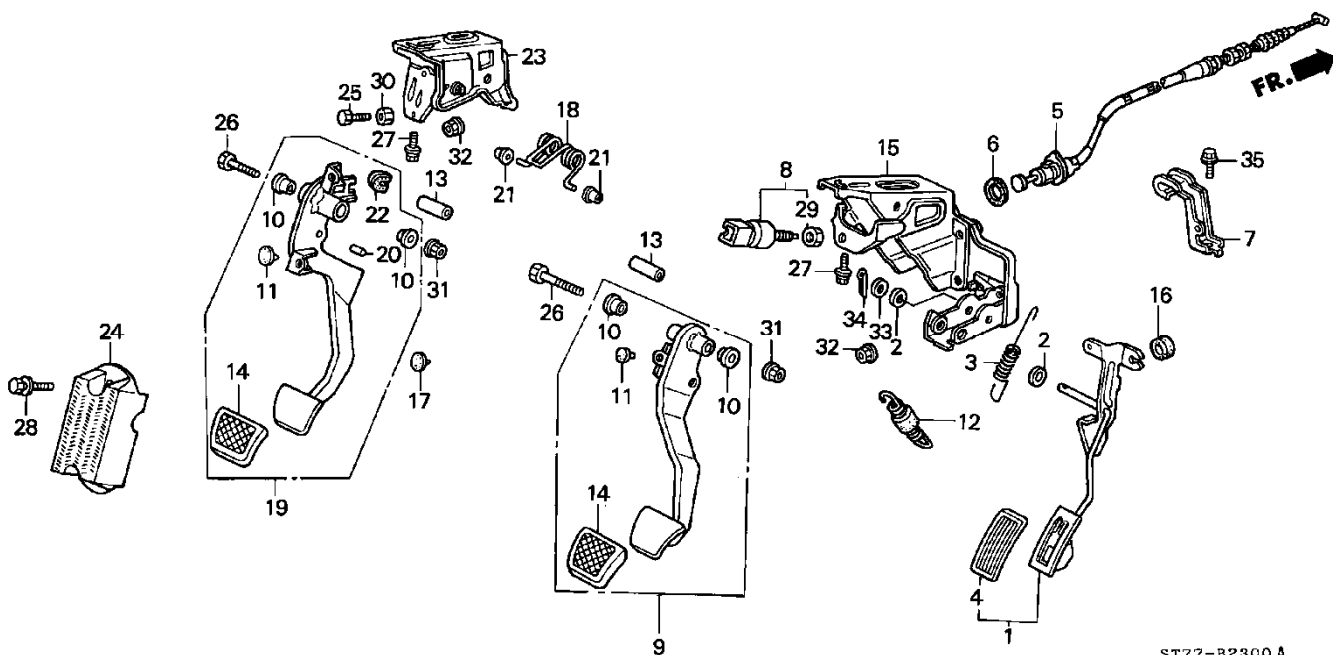

ST77-B2300 A

Refnr	Part Number	Part Description	Unit Qty
1	17800-SR3-000	PEDAL COMP., ACCELERATOR	001
2	17812-SA7-010	WASHER, ACCELERATOR PEDAL	002
3	17814-SR3-000	SPRING, ACCELERATOR RETURN	001
4	17816-SK7-000	COVER, ACCELERATOR PEDAL	001
5	17910-ST7-R01	WIRE, THROTTLE	001
6	17921-SA4-730	SEAL, THROTTLE CABLE	001
7	17931-ST7-R00	CLAMP, THROTTLE WIRE	001
8	35350-SE0-A03	SWITCH ASSY., STOP (TEC)	001
9	46500-SR3-L10	PEDAL ASSY., BRAKE	001
10	46504-ST5-300	BUSH, PEDAL	004
11	46505-SA5-000	PAD, PEDAL STOPPER	002
12	46530-SR3-000	SPRING ASSY., PEDAL RETURN	001
13	46535-SM4-000	COLLAR, PEDAL	002
14	46545-SH3-000	COVER, PEDAL	002
15	46590-SR3-L11	BRACKET, PEDAL	001
16	46904-SM4-300	PAD, ACCELERATOR STOPPER	001
17	46905-SK7-000	STOPPER, CLUTCH PEDAL	001
18	46907-SR3-010	SPRING, CLUTCH ASSISTANT	001
19	46910-SR3-J00	PEDAL COMP., CLUTCH	001
20	46911-SD4-930	BUSH, PEDAL PIN	001
21	46981-SR3-930	BUSH A, CLUTCH ASSISTANT	002
22	46982-SR3-930	BUSH B, CLUTCH ASSISTANT	001
23	46990-SR3-000	BRACKET, CLUTCH PEDAL	001
24	46991-SR3-010	BRACKET, FOOTREST	001
25	92201-10025-0H	BOLT, HEX., 10X25	001
26	92201-10070-0J	BOLT, HEX., 10X70	002
27	93404-08016-08	BOLT-WASHER, 8X16	002
28	93405-06020-07	BOLT-WASHER, 6X20	002
29	94001-10080-0S	NUT, HEX., 10MM	001
30	94002-10000-0S	NUT, HEX., 10MM	001
31	94050-10080	NUT, FLANGE, 10MM	002
32	94070-08080	NUT-WASHER, 8MM	007
33	94102-10800	WASHER, PLAIN, (10.5X18X1.6)	001
34	94201-25180	PIN, SPLIT, 2.5X18	001
35	95701-06012-08	BOLT, FLANGE, 6X12	001


Block B-23-1 PEDAL (RH)

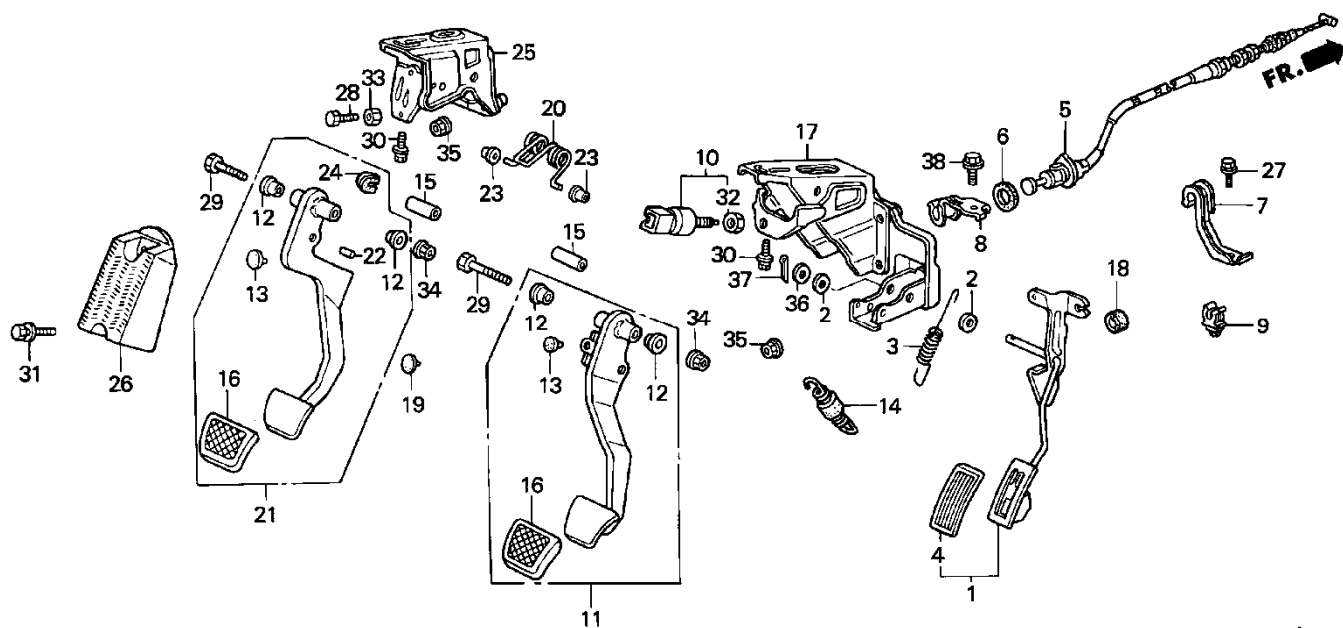

ST77-B2301 A


Refnr	Part Number	Part Description	Unit Qty
1	17800-SR3-000	PEDAL COMP., ACCELERATOR	001
2	17812-SA7-010	WASHER, ACCELERATOR PEDAL	002
3	17814-SR3-000	SPRING, ACCELERATOR RETURN	001
4	17816-SK7-000	COVER, ACCELERATOR PEDAL	001
5	17910-ST7-E01	WIRE, THROTTLE	001
6	17921-SA4-730	SEAL, THROTTLE CABLE	001
7	17924-ST7-000	CLAMP, THROTTLE WIRE	001
8	17934-SR3-010	STAY, THROTTLE WIRE	001
9	17938-SE0-941	CLIP, THROTTLE WIRE	001
10	35350-SE0-A03	SWITCH ASSY., STOP (TEC)	001
11	46500-SR3-N00	PEDAL ASSY., BRAKE	001
12	46504-ST5-300	BUSH, PEDAL	004
13	46505-SA5-000	PAD, PEDAL STOPPER	002
14	46530-SR3-000	SPRING ASSY., PEDAL RETURN	001
15	46535-SM4-000	COLLAR, PEDAL	002
16	46545-SH3-000	COVER, PEDAL	002
17	46590-SR3-N01	BRACKET, PEDAL	001
18	46904-SM4-300	PAD, ACCELERATOR STOPPER	001
19	46905-SK7-000	STOPPER, CLUTCH PEDAL	001
20	46907-SR3-010	SPRING, CLUTCH ASSISTANT	001
21	46910-SR3-J00	PEDAL COMP., CLUTCH	001
22	46911-SD4-930	BUSH, PEDAL PIN	001
23	46981-SR3-930	BUSH A, CLUTCH ASSISTANT	002
24	46982-SR3-930	BUSH B, CLUTCH ASSISTANT	001
25	46990-SR3-000	BRACKET, CLUTCH PEDAL	001
26	46991-SR3-010	BRACKET, FOOTREST	001
27	90003-PG7-660	BOLT-WASHER, 6X16 (DACRO COATING)	001
28	92201-10025-0H	BOLT, HEX., 10X25	001
29	92201-10070-0J	BOLT, HEX., 10X70	002
30	93404-08016-08	BOLT-WASHER, 8X16	002
31	93405-06020-07	BOLT-WASHER, 6X20	002
32	94001-10080-0S	NUT, HEX., 10MM	001
33	94002-10000-0S	NUT, HEX., 10MM	001
34	94050-10080	NUT, FLANGE, 10MM	002
35	94070-08080	NUT-WASHER, 8MM	007
36	94102-10800	WASHER, PLAIN, (10.5X18X1.6)	001
37	94201-25180	PIN, SPLIT, 2.5X18	001
38	95701-06010-08	BOLT, FLANGE, 6X10	001

Block B-23-20 CLUTCH MASTER CYLINDER (LH)

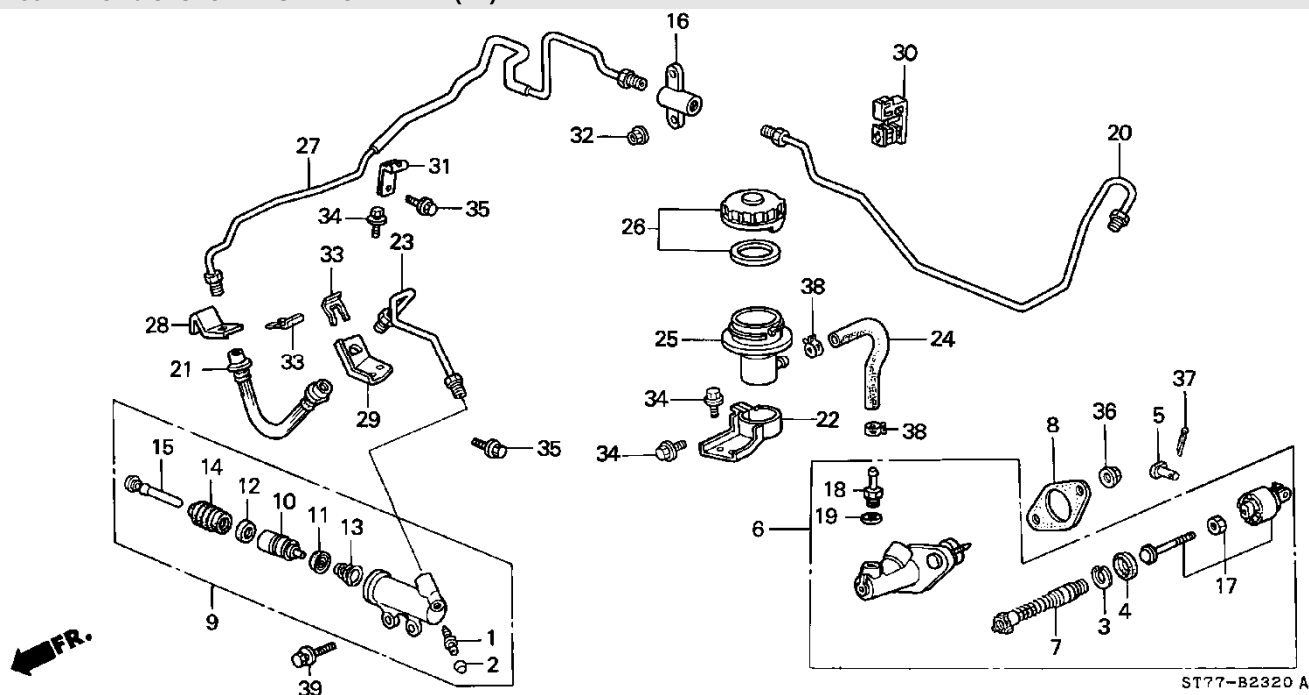

Refnr	Part Number	Part Description	Unit	Qty
1	43352-567-000	SCREW, BLEEDER	001	
2	43353-SD5-003	CAP, BLEEDER SCREW	001	
3	46182-500-013	CIRCLIP	001	
4	46184-611-000	DUST SEAL, MASTER CYLINDER	001	
5	46912-SD4-000	PIN, CLUTCH PEDAL	001	
6	46920-ST7-A01	CYLINDER ASSY., CLUTCH MASTER	001	
7	46926-SF1-003	PISTON ASSY.	001	
8	46928-SF1-000	SEAL, CLUTCH MASTER CYLINDER	001	
9	46930-SR3-013	CYLINDER ASSY., SLAVE	001	
10	46932-SD4-003	PISTON, SLAVE CYLINDER	001	
11	46933-SD4-013	CUP A, PISTON	001	
12	46934-SD4-003	CUP B, PISTON	001	
13	46935-SP0-000	SPRING, SLAVE CYLINDER	001	
14	46937-SR3-003	BOOT, SLAVE CYLINDER	001	
15	46938-SD4-003	ROD, PUSH	001	
16	46939-SR3-A01	JOINT, CLUTCH PIPE	001	
17	46950-ST0-003	ROD ASSY., PUSH	001	
18	46952-SD4-003	JOINT, TUBE	001	
19	46953-SD4-003	PACKING	001	
20	46960-ST7-R00	PIPE ASSY., CLUTCH	001	(-00)
20	46960-ST7-A00	PIPE COMP. A, CLUTCH	001	(00)
21	46961-SR3-A02	HOSE, CLUTCH	001	
22	46966-SR3-A00	HOLDER, TANK	001	
23	46970-SR3-N01	PIPE COMP. B, CLUTCH	001	
24	46971-S04-A01	TUBE, CLUTCH FLUID	001	
25	46972-SD4-003	TANK, CLUTCH FLUID	001	
26	46973-SD4-003	CAP COMP., RESERVE TANK	001	
27	46980-SR3-A00	PIPE COMP., CLUTCH	001	(-00)
27	46980-ST7-A00	PIPE COMP., CLUTCH	001	(00)
28	46995-SR3-A00	BRACKET A, CLUTCH PIPE	001	
29	46996-SR3-000	BRACKET B, CLUTCH PIPE	001	
30	46997-SR3-J01	CLIP, CLUTCH PIPE	001	
31	46998-SR3-A00	CLAMP, CLUTCH PIPE	001	
32	90361-SV4-003	NUT, PAINT CUTTING, 6MM	002	
33	90651-538-000	CLIP, BRAKE HOSE	002	
34	93403-06012-08	BOLT-WASHER, 6X12	005	
35	93403-06016-08	BOLT-WASHER, 6X16	003	
36	94070-08080	NUT-WASHER, 8MM	002	
37	94201-20220	PIN, SPLIT, 2.0X22	001	
38	95002-41200-04	CLAMP, TUBE (D12)	002	
39	95801-08025-08	BOLT, FLANGE, 8X25	002	


Block B-23-21 CLUTCH MASTER CYLINDER (RH)

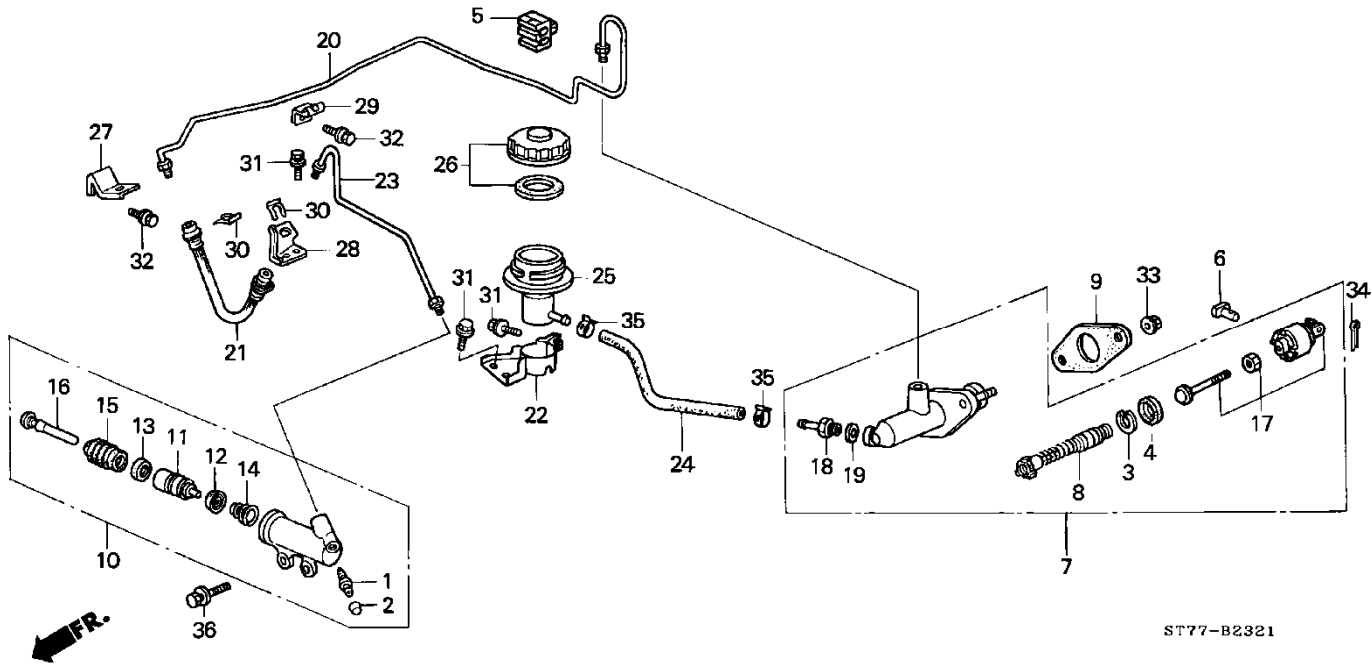

ST77-B2321

Refnr	Part Number	Part Description	Unit Qty
1	43352-567-000	SCREW, BLEEDER	001
2	43353-SD5-003	CAP, BLEEDER SCREW	001
3	46182-500-013	CIRCLIP	001
4	46184-611-000	DUST SEAL, MASTER CYLINDER	001
5	46393-SR3-003	CLIP, BRAKE PIPE	001
6	46912-SD4-000	PIN, CLUTCH PEDAL	001
7	46920-ST0-013	CYLINDER ASSY., CLUTCH MASTER	001
8	46926-SF1-003	PISTON ASSY.	001
9	46928-SF1-000	SEAL, CLUTCH MASTER CYLINDER	001
10	46930-SR3-013	CYLINDER ASSY., SLAVE	001
11	46932-SD4-003	PISTON, SLAVE CYLINDER	001
12	46933-SD4-013	CUP A, PISTON	001
13	46934-SD4-003	CUP B, PISTON	001
14	46935-SP0-000	SPRING, SLAVE CYLINDER	001
15	46937-SR3-003	BOOT, SLAVE CYLINDER	001
16	46938-SD4-003	ROD, PUSH	001
17	46950-ST0-003	ROD ASSY., PUSH	001
18	46952-SD4-003	JOINT, TUBE	001
19	46953-SD4-003	PACKING	001
20	46960-SR3-010	PIPE COMP. A, CLUTCH	001
21	46961-SR3-013	HOSE, CLUTCH	001
22	46966-SR3-000	HOLDER, TANK	001
23	46970-SR3-N01	PIPE COMP. B, CLUTCH	001
24	46971-S04-003	TUBE, CLUTCH FLUID	001
25	46972-SD4-003	TANK, CLUTCH FLUID	001
26	46973-SD4-003	CAP COMP., RESERVE TANK	001
27	46995-SR3-000	BRACKET A, CLUTCH PIPE	001
28	46996-SR3-000	BRACKET B, CLUTCH PIPE	001
29	46998-SR3-000	CLAMP, CLUTCH PIPE	001
30	90651-538-000	CLIP, BRAKE HOSE	002
31	93403-06012-08	BOLT-WASHER, 6X12	005
32	93403-06016-08	BOLT-WASHER, 6X16	003
33	94070-08080	NUT-WASHER, 8MM	002
34	94201-20220	PIN, SPLIT, 2.0X22	001
35	95002-41200-04	CLAMP, TUBE (D12)	002
36	95801-08025-08	BOLT, FLANGE, 8X25	002

Block B-24 BRAKE MASTER CYLINDER/ MASTER POWER

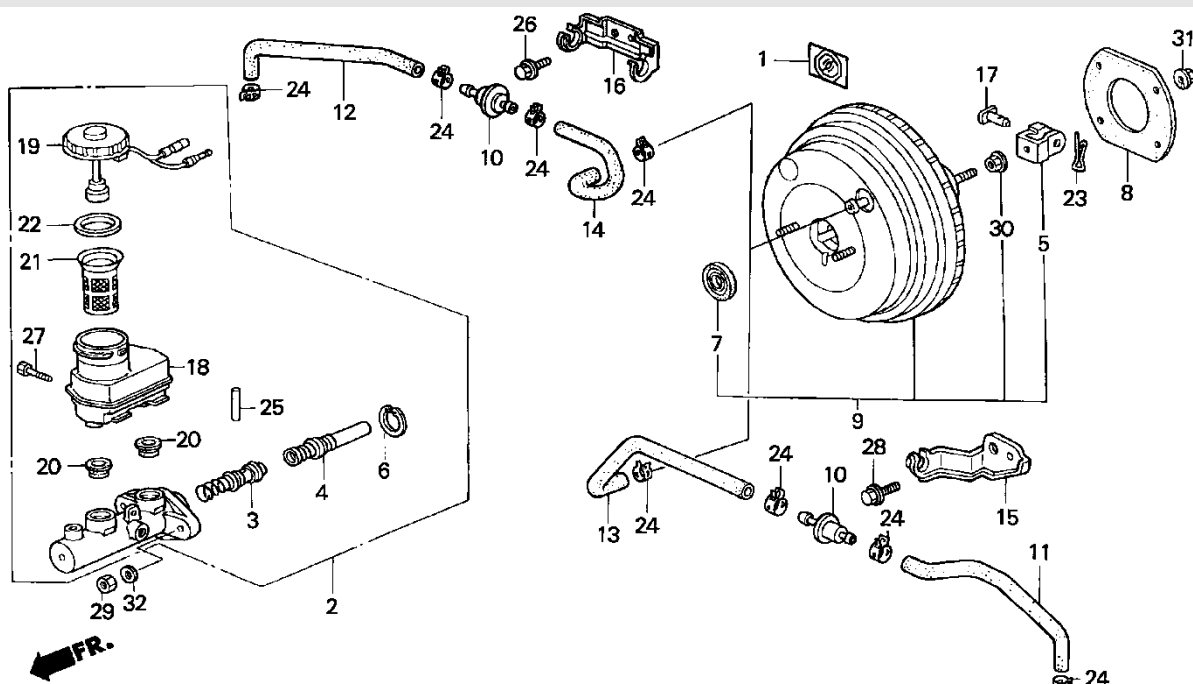


ST77-B2400

Refnr	Part Number	Part Description	Unit Qty
1	46070-SL0-G01	PLATE, SYMBOL MARK	001
2	46100-S03-Z01	CYLINDER ASSY., MASTER	001 (RH)
2	46100-ST7-L51	CYLINDER ASSY., MASTER	001 (LH)
3	46120-S84-A51	PISTON ASSY., PRIMARY	001
4	46122-S84-A51	PISTON ASSY., SECONDARY	001
5	46151-SB2-003	YOKE, PUSH ROD (NISSIN)	001
6	46182-S84-A51	CIRCLIP	001
7	46185-S04-J01	SEAL, ROD	001
8	46191-634-000	GASKET, MASTER CYLINDER BRACKET	001
9	46400-S84-E01	POWER ASSY., MASTER (8"+9")	001
10	46403-SE0-003	VALVE COMP., CHECK (NISSIN)	001
11	46404-SR2-N10	TUBE A, MASTER POWER	001 (RH)
12	46404-ST7-A10	TUBE A, MASTER POWER	001 (LH)
13	46405-SR3-N11	TUBE B, MASTER POWER	001 (RH)
14	46405-ST7-A20	TUBE B, MASTER POWER	001 (LH)
15	46406-SR3-J00	STAY, MASTER POWER TUBE	001 (RH)
16	46406-SR3-000	STAY, MASTER POWER TUBE	001 (LH)
17	46512-S70-000	PIN, PEDAL	001
18	46660-S47-003	RESERVOIR COMP.	001
19	46662-S04-J01	CAP COMP., RESERVE TANK	001
20	46665-S04-J01	GROMMET	002
21	46666-S04-J01	FILTER, BRAKE RESERVOIR	001
22	46669-692-003	SEAL, RESERVE TANK	001
23	46911-S70-003	PIN, LOCK (8MM)	001
24	53729-671-003	CLAMP D, 15.5MM	004
25	57515-S30-003	PIN, STOP	001
26	90139-ST7-000	BOLT-WASHER, 6X20	001 (LH)
27	92301-05025-0H	BOLT, RECESSED, 5X25	001
28	93402-06012-08	BOLT-WASHER, 6X12	001 (RH)
29	94001-08080-0S	NUT, HEX., 8MM	002
30	94050-08080	NUT, FLANGE, 8MM	001
31	94070-08080	NUT-WASHER, 8MM	004
32	94111-08800	WASHER, SPRING, 8MM	002

Block B-24-10 ABS MODULATOR


FR.

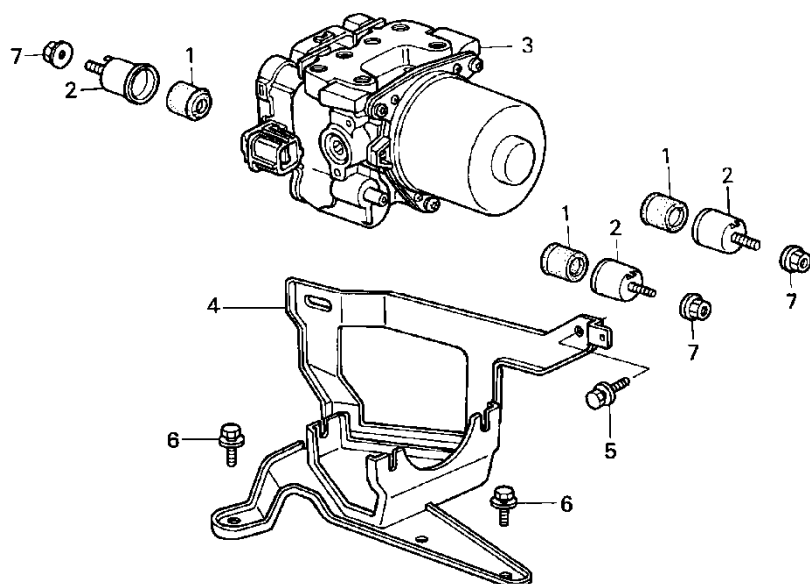

ST77-B2410

Refnr	Part Number	Part Description	Unit Qty
1	57101-S30-003	RUBBER, ABS MOUNTING	003
2	57102-S30-003	HOLDER, ABS	003
3	57110-S30-003	MODULATOR ASSY., ABS	001
4	57115-ST7-R00	BRACKET, MODULATOR	001
5	93403-08020-08	BOLT-WASHER, 8X20	001
6	93405-08020-08	BOLT-WASHER, 8X20	003
7	94071-06080	NUT-WASHER, 6MM	003


Block B-25-10 BRAKE LINES (ABS) (LH)

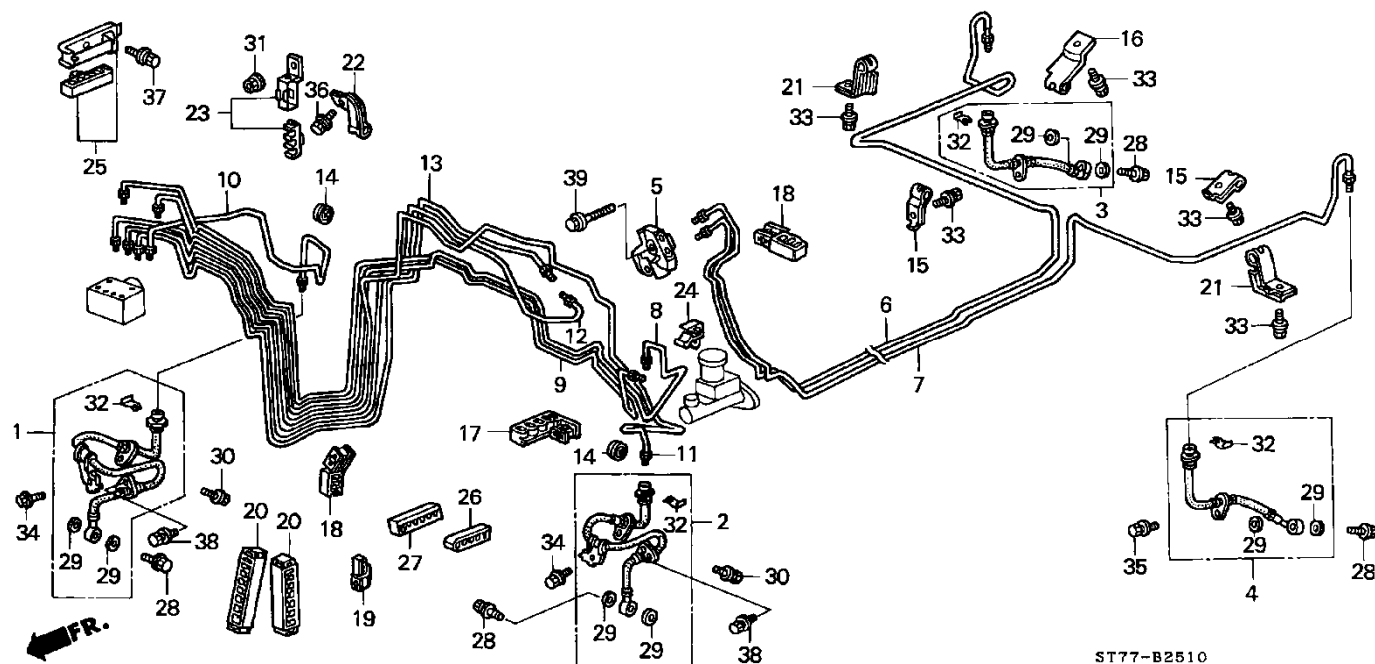

ST77-B2510


Refnr	Part Number	Part Description	Unit Qty
1	01464-SR3-N03	HOSE SET, R. FR. BRAKE	001
2	01465-SR3-N02	HOSE SET, L. FR. BRAKE	001
3	01466-S03-Z00	HOSE SET, R. RR. BRAKE	001
4	01468-S03-Z00	HOSE SET, L. RR. BRAKE	001
5	46210-S04-851	VALVE ASSY., PROPORTIONING	001 ('98-'99)
5	46210-S04-852	VALVE ASSY., PROPORTIONING	001 ('00)
6	46330-ST7-R01	PIPE COMP. C, BRAKE	001
7	46340-ST7-R01	PIPE COMP. D, BRAKE	001
8	46374-ST7-G00	PIPE COMP. U, BRAKE	001
9	46375-ST7-G00	PIPE COMP. V, BRAKE	001
10	46376-ST7-R00	PIPE COMP. W, BRAKE	001
11	46377-ST7-G00	PIPE COMP. X, BRAKE	001
12	46378-ST7-G00	PIPE COMP. Y, BRAKE	001
13	46379-ST7-G00	PIPE COMP. Z, BRAKE	001
14	46380-SH3-000	GROMMET A, BRAKE PIPE	002
15	46391-SR3-J00	CLAMP, BRAKE PIPE	002
16	46391-SR3-J10	CLAMP, BRAKE PIPE	001
17	46391-SR3-922	CLIP B, BRAKE PIPE	001
18	46391-SR3-931	CLIP D, BRAKE PIPE	002
19	46391-SR3-942	CLIP E, BRAKE PIPE	001
20	46391-ST7-003	CLIP, BRAKE PIPE	002
21	46392-SR3-000	CLIP, BRAKE PIPE	002
22	46392-SR3-910	CLAMP, BRAKE PIPE	001
23	46392-SR3-931	CLIP, BRAKE PIPE	001
24	46393-SM4-951	CLIP C	001
25	46394-ST7-000	CLAMP, BRAKE PIPE	001
26	46395-SM4-951	CLIP, BRAKE PIPE	001
27	46395-SR3-A01	CLIP C, BRAKE PIPE	001
28	46462-SE0-000	BOLT, OIL	004
29	46472-568-000	PACKING, OIL BOLT	008
30	90114-SD5-003	BOLT-WASHER, 8X25	002
31	90361-SV4-003	NUT, PAINT CUTTING, 6MM	001
32	90651-538-000	CLIP, BRAKE HOSE	004
33	93402-06012-08	BOLT-WASHER, 6X12	005
34	93402-08016-08	BOLT-WASHER, 8X16	002
35	93402-08020-08	BOLT-WASHER, 8X20	002
36	93403-06012-08	BOLT-WASHER, 6X12	001
37	93403-08020-08	BOLT-WASHER, 8X20	001
38	95701-06012-08	BOLT, FLANGE, 6X12	004
39	95801-06045-08	BOLT, FLANGE, 6X45	002

Block B-25-11 BRAKE LINES (ABS) (RH)

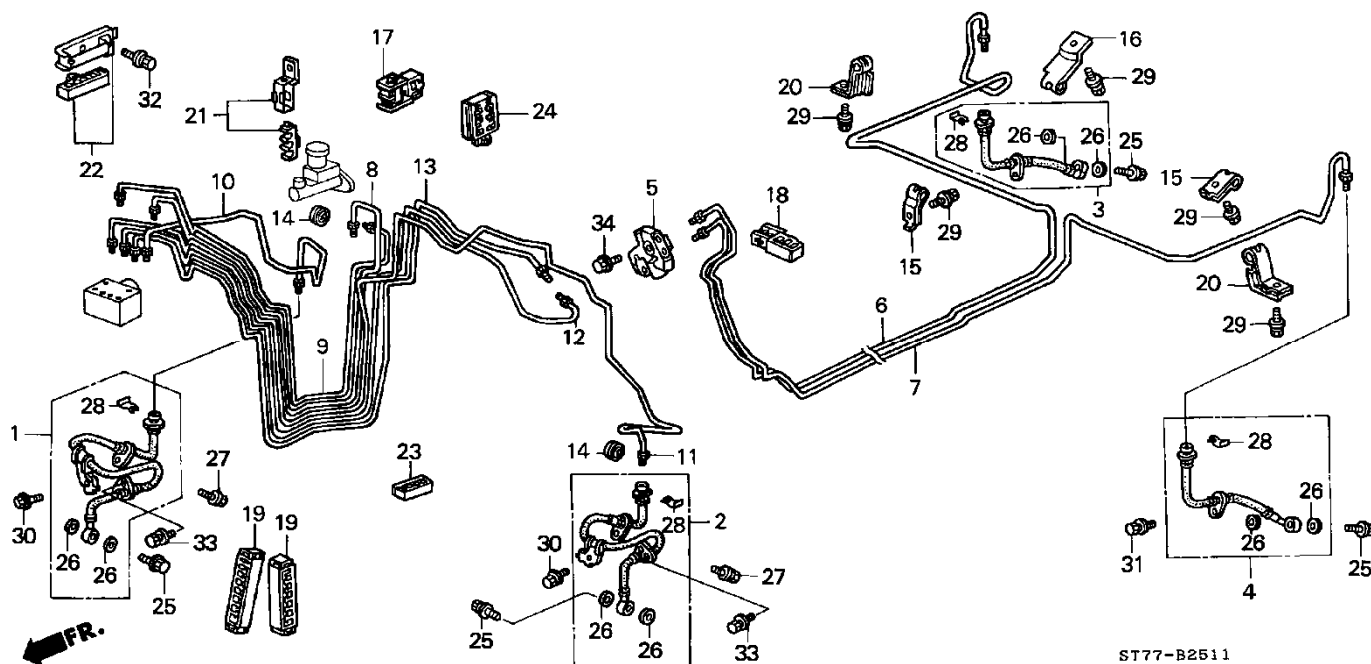

Refnr	Part Number	Part Description	Unit Qty
1	01464-SR3-N03	HOSE SET, R. FR. BRAKE	001
2	01465-SR3-N02	HOSE SET, L. FR. BRAKE	001
3	01466-S03-Z00	HOSE SET, R. RR. BRAKE	001
4	01468-S03-Z00	HOSE SET, L. RR. BRAKE	001
5	46210-S04-851	VALVE ASSY., PROPORTIONING	001 ('98-'99)
5	46210-S04-852	VALVE ASSY., PROPORTIONING	001 ('00)
6	46330-ST7-R01	PIPE COMP. C, BRAKE	001
7	46340-ST7-R01	PIPE COMP. D, BRAKE	001
8	46374-ST7-901	PIPE COMP. U, BRAKE	001
9	46375-ST7-900	PIPE COMP. V, BRAKE	001
10	46376-ST7-900	PIPE COMP. W, BRAKE	001
11	46377-ST7-900	PIPE COMP. X, BRAKE	001
12	46378-ST7-900	PIPE COMP. Y, BRAKE	001
13	46379-ST7-900	PIPE COMP. Z, BRAKE	001
14	46380-SH3-000	GROMMET A, BRAKE PIPE	002
15	46391-SR3-J00	CLAMP, BRAKE PIPE	002
16	46391-SR3-J10	CLAMP, BRAKE PIPE	001
17	46391-SR3-003	CLIP A, BRAKE PIPE	001
18	46391-SR3-931	CLIP D, BRAKE PIPE	001
19	46391-ST7-003	CLIP, BRAKE PIPE	002
20	46392-SR3-000	CLIP, BRAKE PIPE	002
21	46392-SR3-931	CLIP, BRAKE PIPE	001
22	46394-ST7-000	CLAMP, BRAKE PIPE	001
23	46395-SR3-J01	CLIP B, BRAKE PIPE	002
24	46396-ST7-951	CLIP A	001
25	46462-SE0-000	BOLT, OIL	004
26	46472-568-000	PACKING, OIL BOLT	008
27	90114-SD5-003	BOLT-WASHER, 8X25	002
28	90651-538-000	CLIP, BRAKE HOSE	004
29	93402-06012-08	BOLT-WASHER, 6X12	005
30	93402-08016-08	BOLT-WASHER, 8X16	002
31	93402-08020-08	BOLT-WASHER, 8X20	002
32	93403-08020-08	BOLT-WASHER, 8X20	001
33	95701-06012-08	BOLT, FLANGE, 6X12	004
34	95801-06045-08	BOLT, FLANGE, 6X45	002


Block B-26 PARKING BRAKE

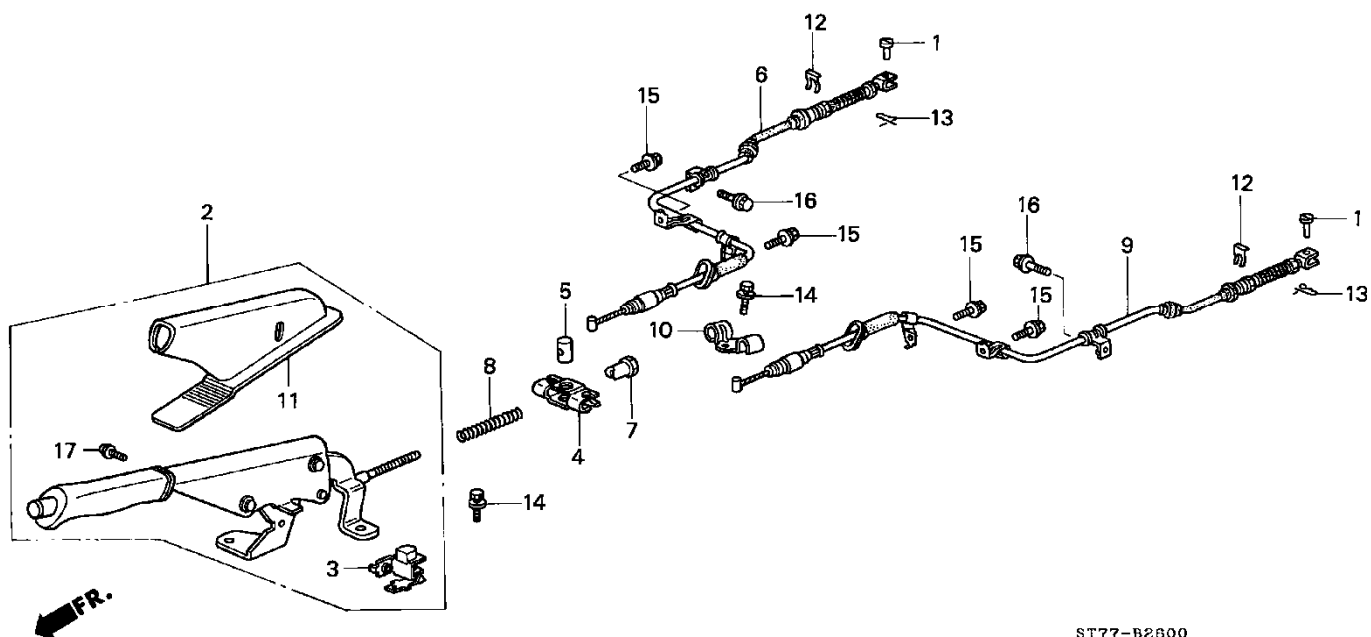

ST77-B2600


Refnr	Part Number	Part Description	Unit Qty
1	43471-SD2-930	PIN, BRAKE WIRE END	002
2	47105-S04-931ZD	LEVER ASSY., PARKING BRAKE *NH167L 1*	001 (-'98)
2	47105-S04-932ZD	LEVER ASSY., PARKING BRAKE *NH167L 1*	001 ('98-'00)
3	47342-S04-003	SWITCH, PARKING BRAKE	001
4	47360-SB2-000	EQUALIZER	001
5	47365-538-000	PIN, EQUALIZER	001
6	47510-ST7-R01	WIRE A, R. PARKING BRAKE	001
7	47522-594-000	NUT, PARKING BRAKE ADJUSTING	001
8	47537-671-670	SPRING, PARKING BRAKE ROD	001
9	47560-ST7-R01	WIRE A, L. PARKING BRAKE	001
10	47572-ST0-000	BASE, WIRE GUIDE	001
11	83445-SH3-000ZH	COVER, PARKING BRAKE *NH167L*	001
12	90651-538-000	CLIP, BRAKE HOSE	002
13	90705-SD2-931	PIN, SNAP, 6MM	002
14	93402-08020-08	BOLT-WASHER, 8X20	004
15	93403-08016-08	BOLT-WASHER, 8X16	004
16	93403-08020-08	BOLT-WASHER, 8X20	002
17	93892-04012-08	SCREW-WASHER, 4X12	001

Block B-27 KNUCKLE

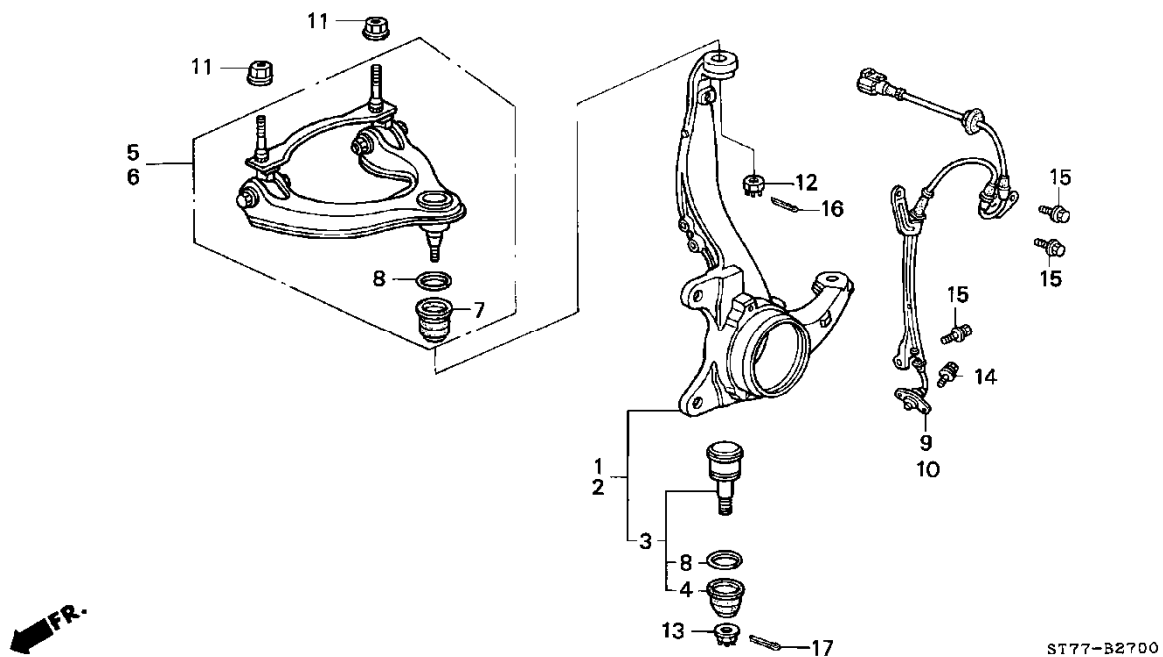

Refnr	Part Number	Part Description	Unit Qty
1	51210-SR3-N10	KNUCKLE COMP., R. FR. (ABS)	001
2	51215-SR3-N10	KNUCKLE COMP., L. FR. (ABS)	001
3	51220-S04-003	JOINT COMP., LOWER BALL (MUSASHI)	002
4	51225-SR3-003	BOOT, LOWER BALL DUST (MUSASHI)	002
5	51450-ST7-020	ARM ASSY., R. FR. UPPER	001
6	51460-ST7-020	ARM ASSY., L. FR. UPPER	001
7	51464-S04-013	BOOT, UPPER BALL JOINT	002
8	52338-SL0-003	CIRCLIP, CONTROL ARM	004
9	57450-ST7-R01	SENSOR ASSY., R. FR.	001
10	57455-ST7-R01	SENSOR ASSY., L. FR.	001
11	90215-SB0-003	NUT, SELF-LOCK, 12MM (SATO RASHI)	004
12	90321-SE0-000	NUT, UPPER BALL PIN, 10MM	002
13	90363-SF1-000	NUT, CASTLE, 12MM	002
14	93402-06010-07	BOLT-WASHER, 6X10	004
15	93402-06012-08	BOLT-WASHER, 6X12	008
16	94201-20180	PIN, SPLIT, 2.0X18	002
17	94201-30200	PIN, SPLIT, 3.0X20	002


Block B-27-10 FRONT LOWER ARM

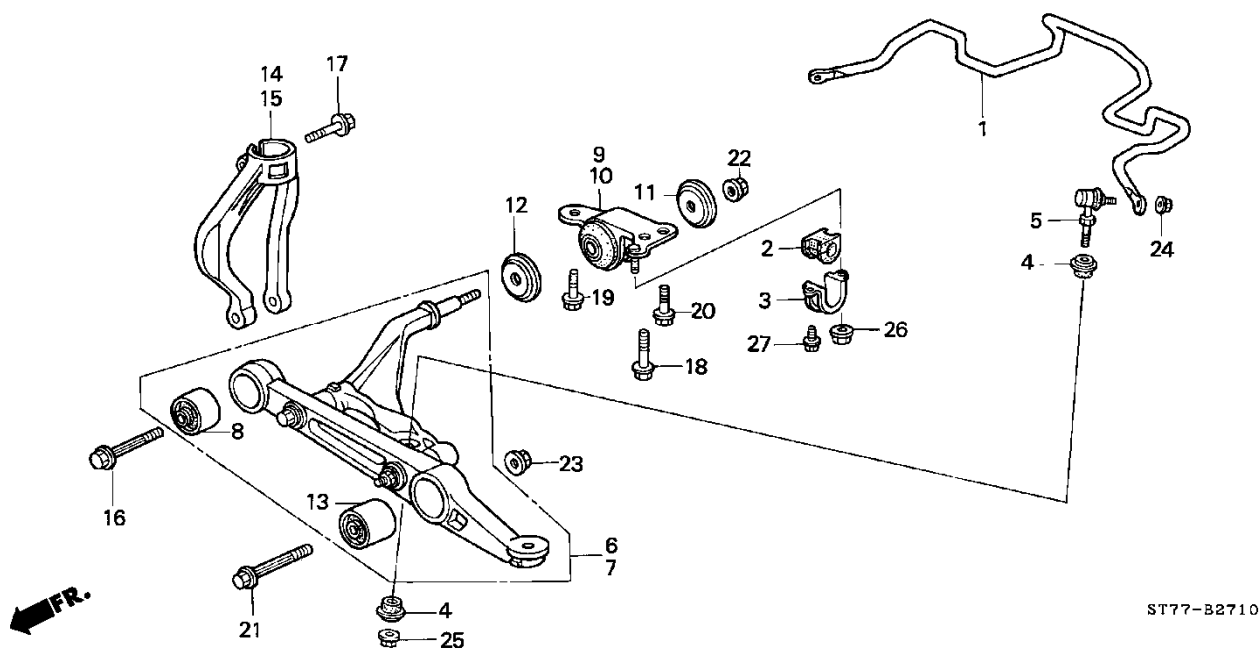

Refnr	Part Number	Part Description	Unit Qty
1	51300-ST7-003	SPRING, FR. STABILIZER	001
2	51306-ST7-Z01	BUSH, STABILIZER HOLDER	002
3	51308-S10-010	HOLDER, FR. STABILIZER	002
4	51312-SD4-020	RUBBER, STABILIZER END	004
5	51320-ST7-003	LINK ASSY., FR. STABILIZER	002
6	51350-ST7-010	ARM ASSY., R. FR. LOWER	001
7	51360-ST7-010	ARM ASSY., L. FR. LOWER	001
8	51392-ST7-013	BUSH, FR. LOWER ARM	002
9	51395-ST7-Z01	BUSH COMP., R. FR. COMPLIANCE	001
10	51396-ST7-Z01	BUSH COMP., L. FR. COMPLIANCE	001
11	51398-SR3-000	WASHER B, FR. RADIUS ARM (14MM)	002
12	51399-SR3-010	WASHER A, FR. RADIUS ARM (18MM)	002
13	51810-SH3-004	BUSH, SHOCK ABSORBER FORK (YAMASHITA)	002
14	51811-SR3-010	FORK, R. FR. SHOCK ABSORBER	001
15	51821-SR3-010	FORK, L. FR. SHOCK ABSORBER	001
16	90118-SR3-003	BOLT, SELF-LOCK, 12X76	002
17	90120-SB0-003	BOLT, SHOCK ABSORBER LOCK, 10X42	002
18	90162-SR3-000	BOLT, FLANGE, 14X60	002
19	90164-SR3-013	BOLT, SELF-LOCK, 14X34	002
20	90168-SR3-000	BOLT, FLANGE, 14X35	002
21	90175-SH3-005	BOLT, SHOCK ABSORBER FORK	002
22	90213-SR3-013	NUT, SELF-LOCK, 14MM	002
23	90215-SB0-003	NUT, SELF-LOCK, 12MM (SATO RASHI)	002
24	90306-SB2-013	NUT, SELF-LOCK, 10MM	002
25	90362-SF1-003	NUT, SELF-LOCK, 8MM	002
26	94050-08080	NUT, FLANGE, 8MM	002
27	95801-08016-08	BOLT, FLANGE, 8X16	002

Block B-28 FRONT SHOCK ABSORBER


FR.

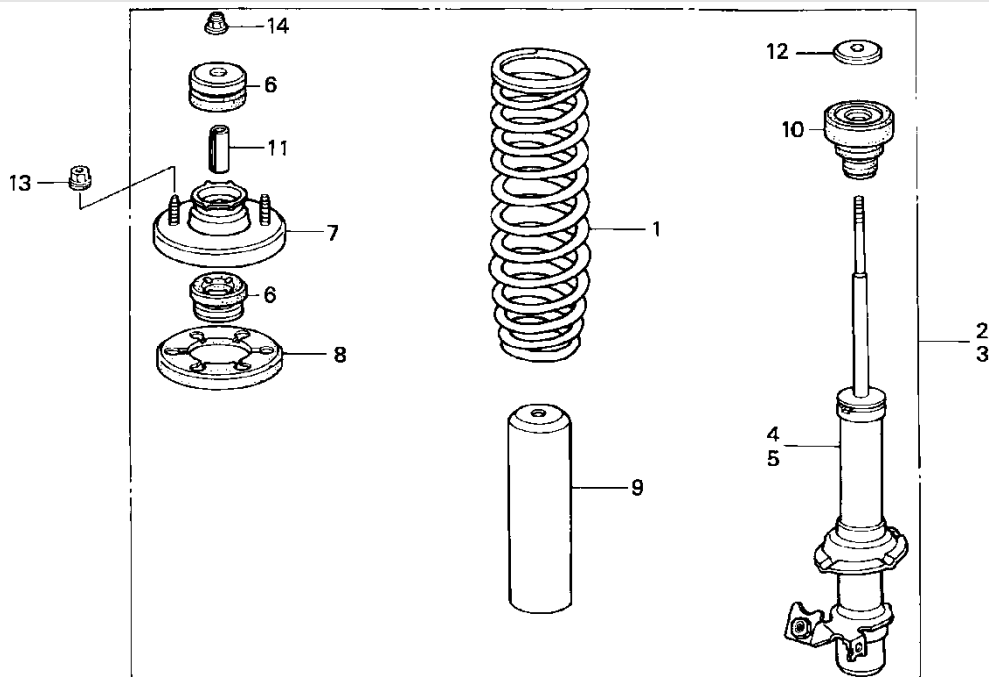

ST77-B2800

Refnr	Part Number	Part Description	Unit Qty
1	51401-ST7-Z01	SPRING, FR. (SHOWA)	002
2	51601-ST7-G01	ABSORBER ASSY., R. FR. SHOCK (SHOWA)	001
3	51602-ST7-G01	ABSORBER ASSY., L. FR. SHOCK (SHOWA)	001
4	51605-ST7-R01	ABSORBER UNIT, R. FR. SHOCK (SHOWA)	001
5	51606-ST7-R01	ABSORBER UNIT, L. FR. SHOCK (SHOWA)	001
6	51631-SL0-901	RUBBER, SHOCK ABSORBER MOUNTING (YAMASHITA)	004
7	51675-SH3-024	BASE, SHOCK ABSORBER MOUNTING (SHOWA)	002
8	51686-SR3-003	RUBBER, FR. SPRING MOUNTING (SHOWA)	002
9	51687-SR0-A02	COVER, FR. SLEEVE DUST (A.S.I. SHOWA)	002
10	51722-SS0-004	RUBBER, FR. BUMP STOPPER (POLYURETHAN KASEI)	002
11	51728-SB0-004	COLLAR, SHOCK ABSORBER MOUNTING (SHOWA)	002
12	52690-SG0-000	PLATE, BUMP STOP	002
13	90304-SR3-014	NUT, FLANGE, 10MM (OHASHI)	004
14	90364-SG0-004	NUT, SELF-LOCK, 10MM (SHOWA)	002


Block B-29 REAR LOWER ARM

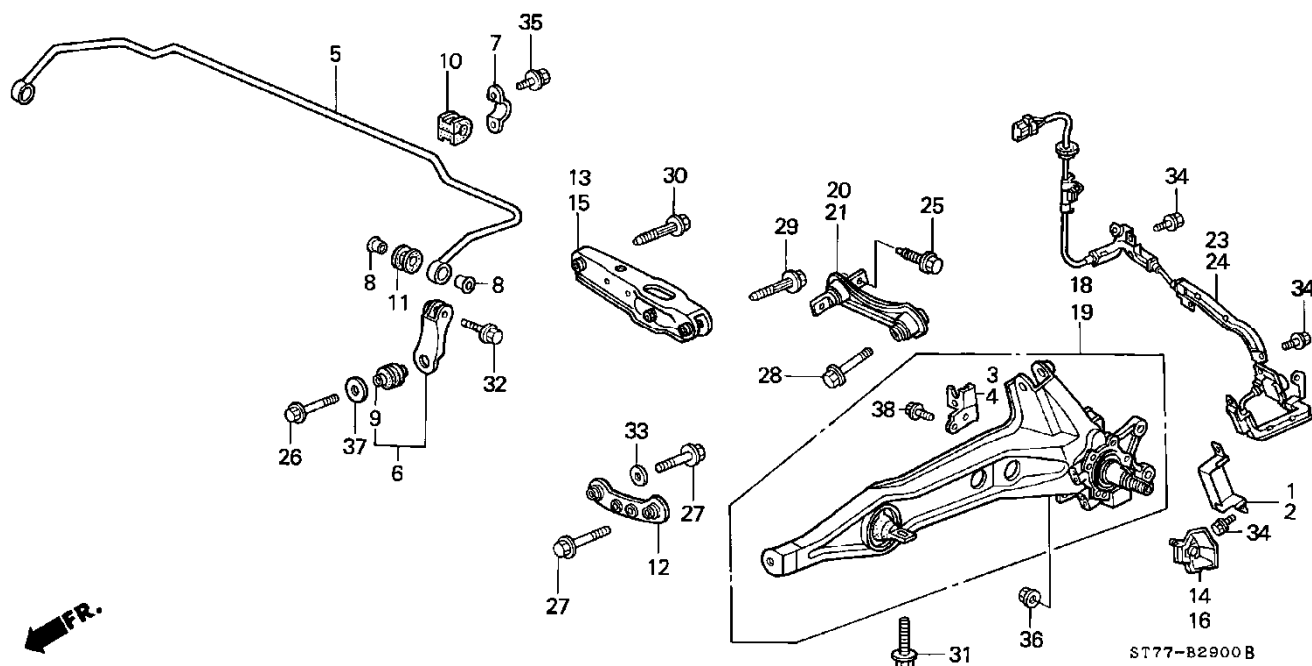

Refnr	Part Number	Part Description	Unit Qty
1	42534-S04-000	COVER, R. RR. (ABS)	001
2	42535-S04-000	COVER, L. RR. (ABS)	001
3	46438-SR3-010	BRACKET, R. RR. BRAKE HOSE (DISK)	001
4	46439-SR3-010	BRACKET, L. RR. BRAKE HOSE (DISK)	001
5	52300-ST7-Z01	SPRING, RR. STABILIZER	001
6	52303-ST7-Z00	LINK COMP., RR. STABILIZER	002
7	52308-SS0-000	HOLDER, RR. STABILIZER	002
8	52312-ST7-Z00	COLLAR, STABILIZER INNER BUSH END	004
9	52314-ST7-Z00	BUSH, STABILIZER LINKAGE	002
10	52315-ST7-Z01	BUSH, RR. STABILIZER	002
11	52316-ST7-Z00	BUSH, STABILIZER END	002
12	52341-SR3-000	ARM COMP., RR. COMPENSATOR	002
13	52350-ST7-R00	ARM COMP., R. RR. LOWER (ABS)	001
14	52354-SR3-000	PROTECTOR, R. RR. LOWER ARM	001
15	52360-ST7-R00	ARM COMP., L. RR. LOWER (ABS)	001
16	52364-SR3-000	PROTECTOR, L. RR. LOWER ARM	001
18	52370-ST7-R01	ARM COMP., R. RR. TRAILING (DISK)	001 ('98)
18	52370-ST7-R02	ARM COMP., R. RR. TRAILING (DISK)	001 ('98-'00)
19	52371-ST7-R01	ARM COMP., L. RR. TRAILING (DISK)	001 ('98)
19	52371-ST7-R02	ARM COMP., L. RR. TRAILING (DISK)	001 ('98-'00)
20	52390-SR3-000	ARM COMP., R. RR. UPPER	001
21	52400-SR3-000	ARM COMP., L. RR. UPPER	001
23	57470-SR3-802	SENSOR ASSY., R. RR.	001
24	57475-SR3-803	SENSOR ASSY., L. RR.	001
25	90117-SH3-004	BOLT, UPPER ARM, 10X30	004
26	90120-SB0-003	BOLT, SHOCK ABSORBER LOCK, 10X42	002
27	90171-SR3-003	BOLT, TORQUE COMPENSATOR, 10X59	004
28	90172-SK7-003	BOLT, UPPER ARM, 10X68	002
29	90173-SR3-003	BOLT, LOWER ARM, 10X80	002
30	90173-ST7-Z01	BOLT, LOWER ARM, 10X89	002
31	90174-SJ4-003	BOLT, TRAILING ARM BUSH, 12X60	004
32	90175-ST7-Z00	BOLT, STABILIZER END (8X35)	002
33	90551-SH3-000	WASHER (24X10X2.3)	002
34	93402-06012-08	BOLT-WASHER, 6X12	016
35	93403-08020-08	BOLT-WASHER, 8X20	004
36	94050-08080	NUT, FLANGE, 8MM	002
37	94103-10400	WASHER, PLAIN, 10MM	002
38	95801-08016-08	BOLT, FLANGE, 8X16	004

Block B-30 REAR SHOCK ABSORBER

FR.

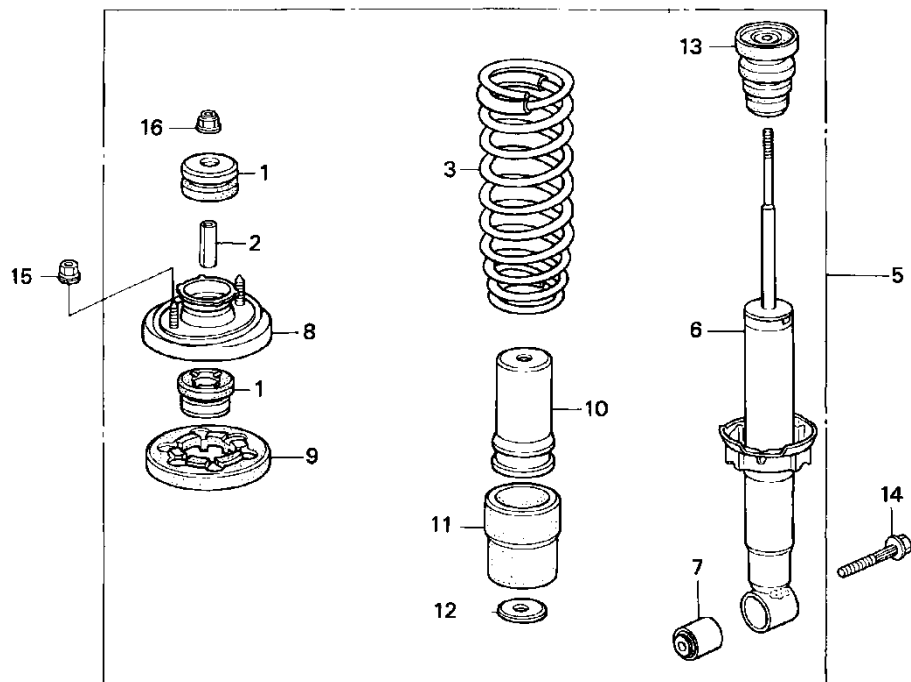


ST77-B3000 A

Refnr	Part Number	Part Description	Unit Qty
1	51631-SL0-901	RUBBER, SHOCK ABSORBER MOUNTING (YAMASHITA)	004
2	51728-SB0-003	COLLAR, RR. SHOCK ABSORBER MOUNTING (TOKICO)	002
3	52441-ST7-G01	SPRING, RR.	002
5	52610-ST7-G01	ABSORBER ASSY., RR. SHOCK (SHOWA)	002
6	52611-ST7-G01	ABSORBER UNIT, RR. SHOCK (SHOWA)	002
7	52622-SR3-003	BUSH, RR. SHOCK ABSORBER LOWER (HOKUSHIN)	002
8	52675-SH3-024	BASE, RR. SHOCK ABSORBER MOUNTING (SHOWA)	002
9	52686-SR3-003	RUBBER, RR. SPRING MOUNTING (SHOWA)	002
10	52687-SR3-003	COVER, RR. DUST (SHOWA)	002
11	52688-SR3-003	END, RR. DUST COVER (SHOWA)	002
12	52690-SG0-000	PLATE, BUMP STOP	002
13	52722-SM4-961	RUBBER, BUMP STOPPER (POLYURETHAN KASEI)	002
14	90172-SK7-003	BOLT, UPPER ARM, 10X68	002
15	90304-SR3-014	NUT, FLANGE, 10MM (OHASHI)	004
16	90364-SG0-004	NUT, SELF-LOCK, 10MM (SHOWA)	002

Block B-31 STEERING WHEEL


FR. 

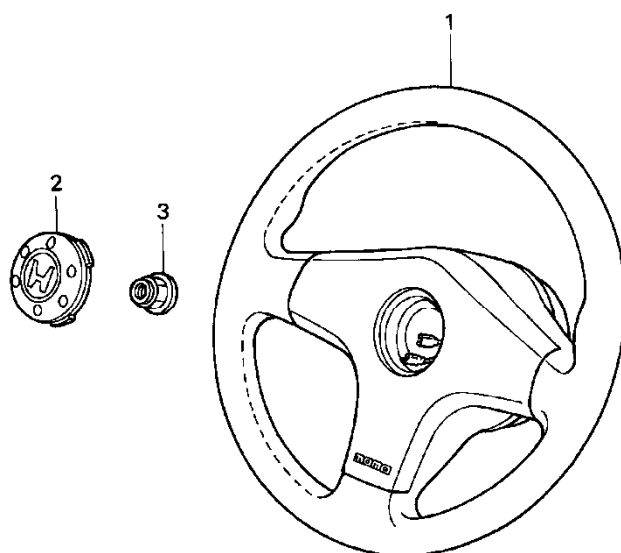

ST77-B3100


Refnr	Part Number	Part Description	Unit Qty
1	78500-ST7-972ZA	WHEEL ASSY., STEERING (TS TECH)(LEATHER) *NH1L*	001 ('98-'99)
1	78500-ST7-972ZB	WHEEL ASSY., STEERING (TS TECH)(LEATHER) *TYPER*	001 ('00)
1	78500-ST7-972ZC	WHEEL ASSY., STEERING (TS TECH)(LEATHER) *TYPEY*	001 ('00) (LH)
2	78531-ST7-N00ZA	BUTTON, HORN *TYPER*	001
3	90380-SB2-003	NUT, SELF-LOCK (OHASHI)	001

Block B-31-10 STEERING WHEEL (SRS) (1)

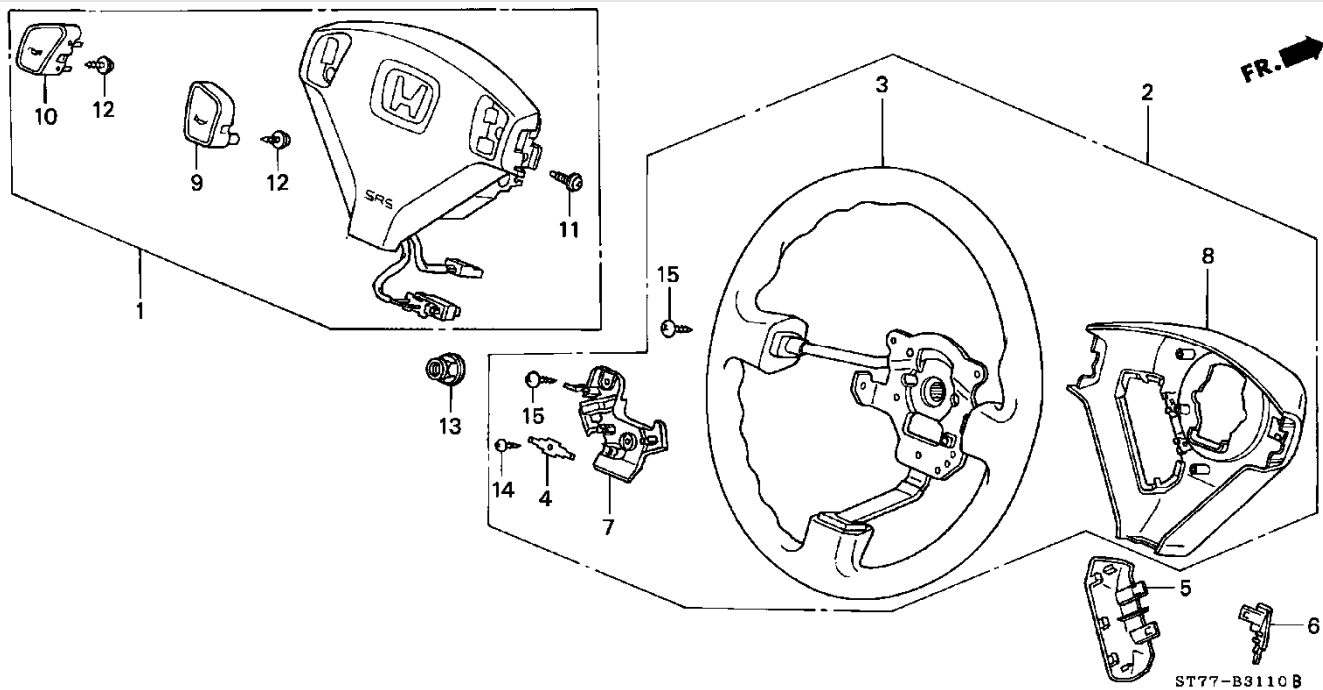

Refnr	Part Number	Part Description	Unit Qty
1	06770-S30-G80ZA	MODULE KIT, DRIVER *NH167L*	001
2	78500-ST7-N71ZC	WHEEL ASSY., STEERING (LEATHER) *TYPER*	001
3	78501-ST7-N71ZC	GRIP COMP. *TYPER* (LEATHER)	001
4	78512-S30-A61	TAB	001
5	78514-S30-A61ZA	CAP A, BODY COVER *NH167L*	001
6	78515-S30-A61ZA	CAP B, BODY COVER *NH167L*	001
7	78516-S30-A61	COVER, BOSS PLATE	001
8	78518-S30-A61ZA	COVER, BODY *NH167L*	001
9	78521-S30-A81ZA	BUTTON, R. HORN *NH167L*	001
10	78522-S30-A81ZA	BUTTON, L. HORN *NH167L*	001
11	90134-S04-A81	BOLT, HEX., 6X12	002
12	90136-SF1-A02	SCREW, TAPPING, 4X18 (NIPPON PURASUTO)	002
13	90380-SB2-003	NUT, SELF-LOCK (OHASHI)	001
14	93911-24120	SCREW, TAPPING, 4X10 (PO)	001
15	93913-14420	SCREW, TAPPING, 4X16 (PO)	004


Block B-31-11 STEERING WHEEL (SRS) (2)

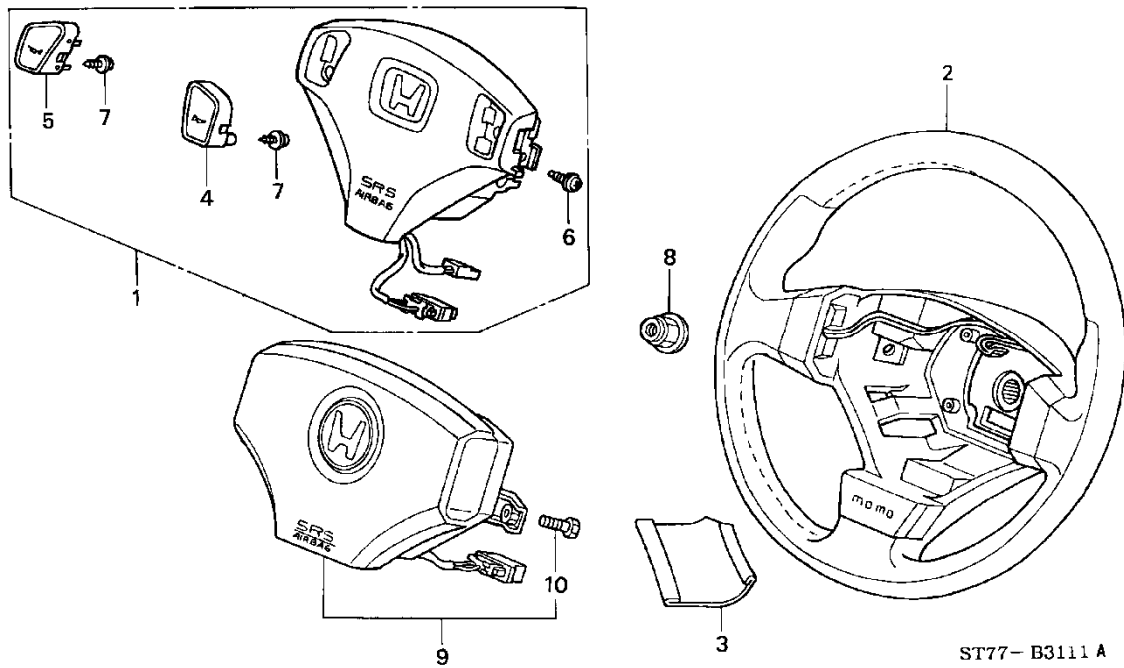

Refnr	Part Number	Part Description	Unit Qty
1	06770-S30-G80ZB	MODULE KIT, DRIVER *NH1L*	001 ('99)
2	78500-ST7-Z70ZB	WHEEL ASSY., STEERING (LEATHER) *TYPER*	001
2	78500-ST7-Z70ZC	WHEEL ASSY., STEERING (LEATHER) *TYPEY*	001 ('00) (LH)
3	78512-S03-Z70ZA	CAP, BODY COVER *NH1L*	001
4	78521-S30-A81ZB	BUTTON, R. HORN *NH1L*	001 ('99)
5	78522-S30-A81ZB	BUTTON, L. HORN *NH1L*	001 ('99)
6	90134-S04-A81	BOLT, HEX., 6X12	002 ('99)
7	90136-SF1-A02	SCREW, TAPPING, 4X18 (NIPPON PURASUTO)	002 ('99)
8	90380-SB2-003	NUT, SELF-LOCK (OHASHI)	001
9	06770-S1A-R70ZB	MODULE KIT, DRIVER *NH1L*	001 ('00)
10	90141-S03-Z80	BOLT, HEX. (6X16)	002 ('00)

Block B-32 STEERING COLUMN


FR. 

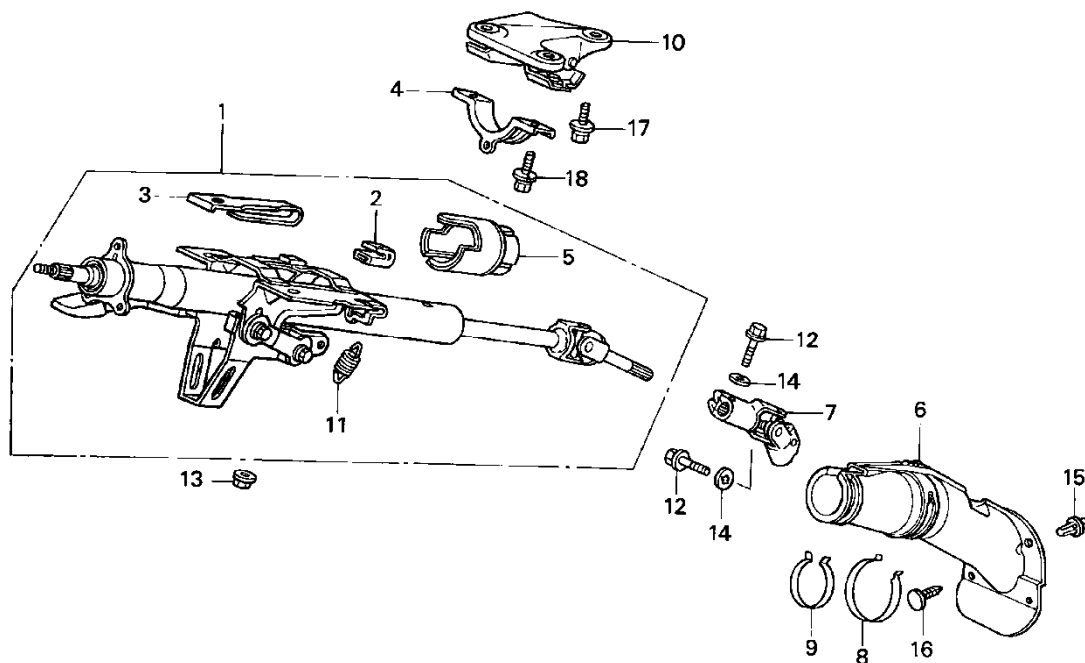

ST77-B3200


Refnr	Part Number	Part Description	Unit Qty
1	53200-ST7-G01	COLUMN ASSY., STEERING	001 (ABS)
1	53200-ST7-G21	COLUMN ASSY., STEERING	001 (SRS) (ABS)
2	53201-SL4-003	GUIDE, ABSORBING PLATE	002
3	53202-SR3-J00	PLATE, ABSORBING	002
4	53216-SR3-000	HOLDER B, STEERING COLUMN	001
5	53217-SR3-000	COLLAR, STEERING RETAINER	001
6	53320-SR3-010	COVER, STEERING JOINT	001 (RH)
6	53320-SR3-A01	COVER, STEERING JOINT	001 (LH)
7	53323-S04-003	JOINT COMP. B, STEERING	001
8	53325-SH3-000	CLIP A, JOINT COVER	001
9	53326-SB0-000	CLIP B, JOINT COVER	001
10	53363-SR3-010	PIVOT COMP., COLUMN	001 (RH)
10	53363-SR3-A01	PIVOT COMP., COLUMN	001 (LH)
11	53371-SB3-000	SPRING, COLUMN HANGER	001
12	90135-SB0-003	BOLT, STEERING YOKE, 8X28 (NIPPON SEIKO)	002
13	90361-SR3-000	NUT, FLANGE, 8MM	002
14	90511-671-003	WASHER, LOCK	002
15	90654-SR3-003	CLIP, STEERING JOINT COVER	001
16	90665-SB2-003ZY	CLIP, TRIM, 7MM *NH120L*	001 (LH)
16	90665-SB2-003ZY	CLIP, TRIM, 7MM *NH120L*	002 (RH)
17	93403-08016-08	BOLT-WASHER, 8X16	003
18	93403-08030-08	BOLT-WASHER, 8X30	002

Block B-33-10 POWER STEERING GEAR BOX (LH)

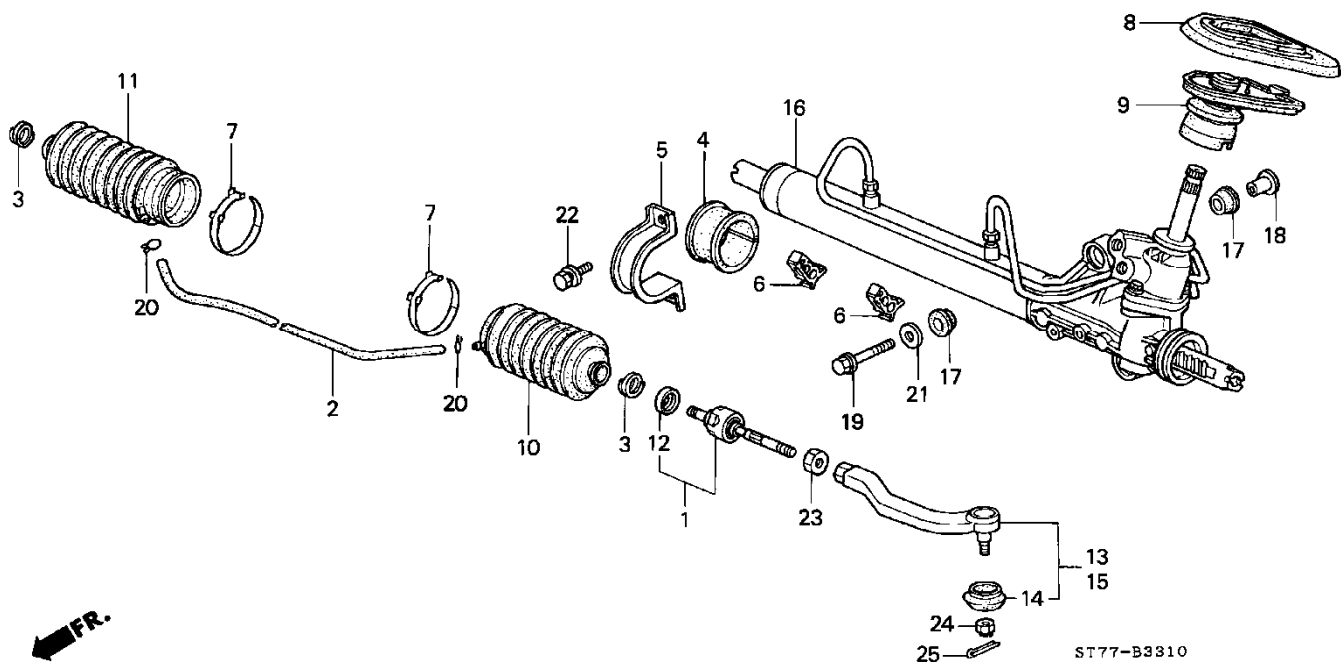


Refnr	Part Number	Part Description	Unit Qty
1	53010-ST7-J61	END SET, RACK	002
2	53411-ST7-003	TUBE, AIR TRANSFER	001
3	53434-S04-J51	CLIP, TIE ROD	002
4	53436-ST0-950	CUSHION B, POWER STEERING GEAR BOX	001
5	53438-SR3-950	BRACKET, POWER STEERING GEAR BOX	001
6	53447-S04-J51	CLIP, TRANSFER TUBE	002
7	53449-S04-J51	BAND B, BELLOWS	002
8	53501-SR3-000	GROMMET A, STEERING	001
9	53502-ST0-010	GROMMET B, STEERING	001
10	53534-SR3-N52	DUST SEAL COMP., TIE ROD	001
11	53534-ST0-013	DUST SEAL COMP., TIE ROD	001
12	53536-S04-J51	WASHER, TIE ROD LOCK	002
13	53540-S04-013	END COMP., R. TIE ROD	001
14	53546-S84-003	BOOT, TIE ROD END (NOK)	002
15	53560-S04-013	END COMP., L. TIE ROD	001
16	53601-ST7-G62	BOX ASSY., POWER STEERING GEAR	001 ('98-'99)
16	53601-ST7-G63	BOX ASSY., POWER STEERING GEAR	001 ('00)
17	53685-SL0-A00	BUSH, STEERING GEAR BOX MOUNTING	004
18	53686-SH3-010	COLLAR, STEERING GEAR BOX MOUNTING	002
19	90108-SR3-951	BOLT, GEAR BOX MOUNTING (10X65)	002
20	90111-S04-J51	CLIP, TUBE (B7)	002
21	90325-SM4-J00	WASHER, PLAIN, 10MM	002
22	93402-10020-08	BOLT-WASHER, 10X20	002
23	94002-14280-0S	NUT, HEX., 14MM	002
24	94030-10080	NUT, HEX., 10MM	002
25	94201-20180	PIN, SPLIT, 2.0X18	002

Block B-33-11 POWER STEERING GEAR BOX (RH)

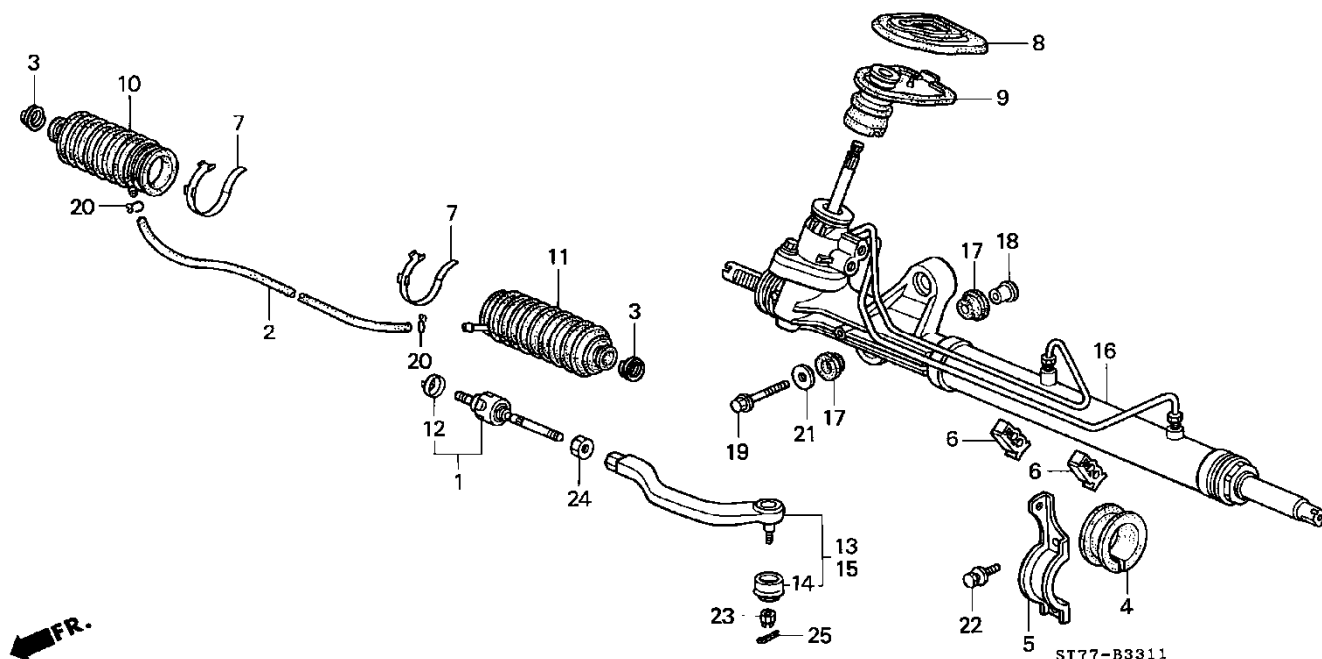


Refnr	Part Number	Part Description	Unit Qty
1	53010-ST7-J61	END SET, RACK	002
2	53411-ST7-003	TUBE, AIR TRANSFER	001
3	53434-S04-J51	CLIP, TIE ROD	002
4	53436-ST0-950	CUSHION B, POWER STEERING GEAR BOX	001
5	53438-SR3-J51	BRACKET, POWER STEERING GEAR BOX	001
6	53447-S04-J51	CLIP, TRANSFER TUBE	002
7	53449-S04-J51	BAND B, BELLOWS	002
8	53501-SR3-000	GROMMET A, STEERING	001
9	53502-ST0-010	GROMMET B, STEERING	001
10	53534-SR3-N52	DUST SEAL COMP., TIE ROD	001
11	53534-ST0-013	DUST SEAL COMP., TIE ROD	001
12	53536-S04-J51	WASHER, TIE ROD LOCK	002
13	53540-S04-013	END COMP., R. TIE ROD	001
14	53546-S84-003	BOOT, TIE ROD END (NOK)	002
15	53560-S04-013	END COMP., L. TIE ROD	001
16	53601-ST7-E62	BOX ASSY., POWER STEERING GEAR	001 ('98-'99)
16	53601-ST7-E63	BOX ASSY., POWER STEERING GEAR	001 ('00)
17	53685-SL0-A00	BUSH, STEERING GEAR BOX MOUNTING	004
18	53686-SH3-010	COLLAR, STEERING GEAR BOX MOUNTING	002
19	90108-SR3-951	BOLT, GEAR BOX MOUNTING (10X65)	002
20	90111-S04-J51	CLIP, TUBE (B7)	002
21	90325-SM4-J00	WASHER, PLAIN, 10MM	002
22	93402-10020-08	BOLT-WASHER, 10X20	002
23	94002-14280-0S	NUT, HEX., 14MM	002
24	94030-10080	NUT, HEX., 10MM	002
25	94201-20180	PIN, SPLIT, 2.0X18	002

Block B-33-20 POWER STEERING GEAR BOX COMPONENTS (LH)

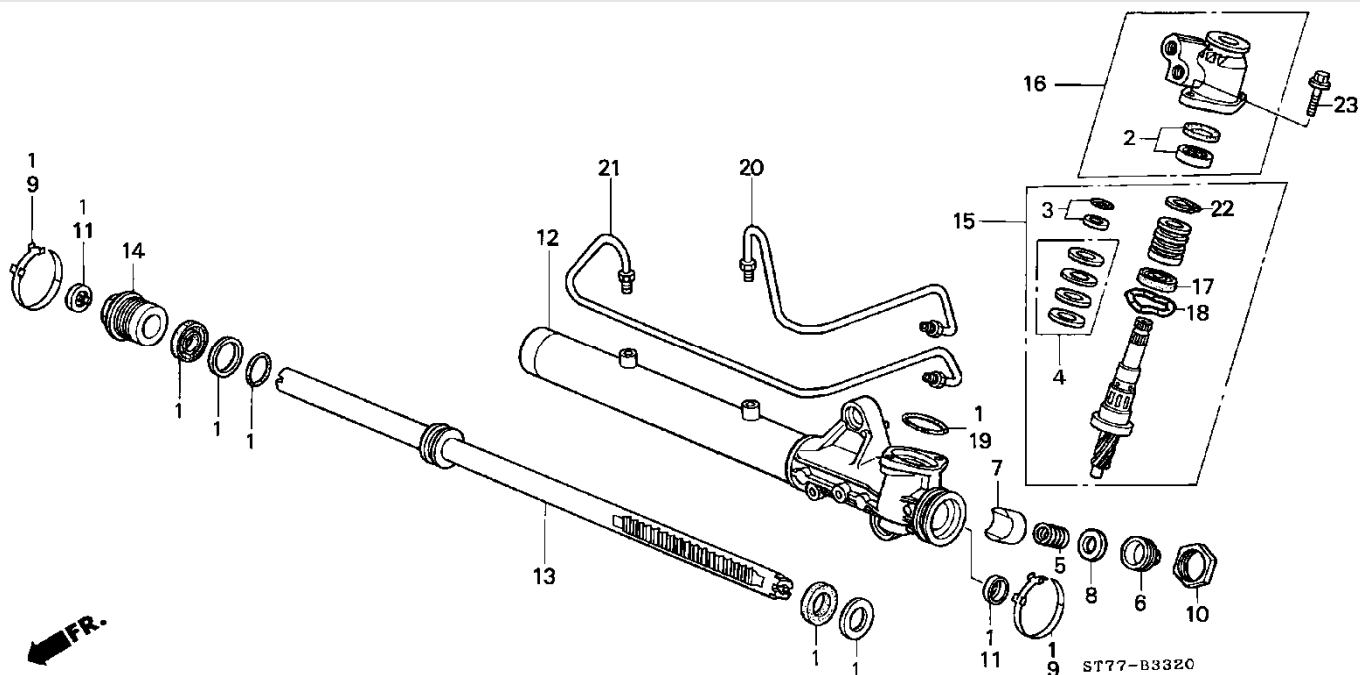

Refnr	Part Number	Part Description	Unit Qty
1	06531-S04-J51	SEAL KIT A, POWER STEERING (ROTARY VALVE)	001
2	06532-S84-A01	OIL SEAL SET, ROTARY VALVE	001
3	06534-S84-A01	SEAL SET, POWER STEERING VALVE (ROTARY VALVE)	001
4	06535-S50-003	RING SET, POWER STEERING SEAL (ROTARY VALVE)	001
5	53413-S04-G51	SPRING, RACK GUIDE PRESSURE	001
6	53414-S04-J51	SCREW, RACK GUIDE	001 ('98-'99)
6	53414-S04-003	SCREW, RACK GUIDE	001 ('00)
7	53416-S04-J51	GUIDE, STEERING RACK	001
8	53418-S04-G51	WASHER, DISK	001
9	53449-S04-J51	BAND B, BELLOWS	002
10	53458-S04-J51	NUT, LOCK	001
11	53536-S04-J51	WASHER, TIE ROD LOCK	002
12	53608-ST7-A61	HOUSING SUB ASSY., STEERING GEAR BOX	001 ('98-'99)
12	53608-ST7-A62	HOUSING SUB ASSY., STEERING GEAR BOX	001 ('00)
13	53626-ST7-A62	RACK COMP., STEERING	001
14	53630-S04-J54	END COMP., CYLINDER	001
15	53641-ST7-G61	VALVE SUB ASSY., STEERING	001
16	53645-ST7-A61	HOUSING COMP., VALVE	001
17	53660-S50-003	OIL SEAL, 27X38X5.5 (SHOWA)	001
18	53661-S50-003	WASHER, WAVE (SHOWA)	001
19	53666-S50-003	O-RING, 41.5X2 (SHOWA)	001
20	53671-ST7-A61	PIPE B, CYLINDER	001
21	53670-ST7-A61	PIPE A, CYLINDER	001
22	90601-S50-003	CIRCLIP, EXTERNAL, 20MM	001
23	90105-S50-003	BOLT, FLANGE, 8X28	002


Block B-33-21 POWER STEERING GEAR BOX COMPONENTS (RH)

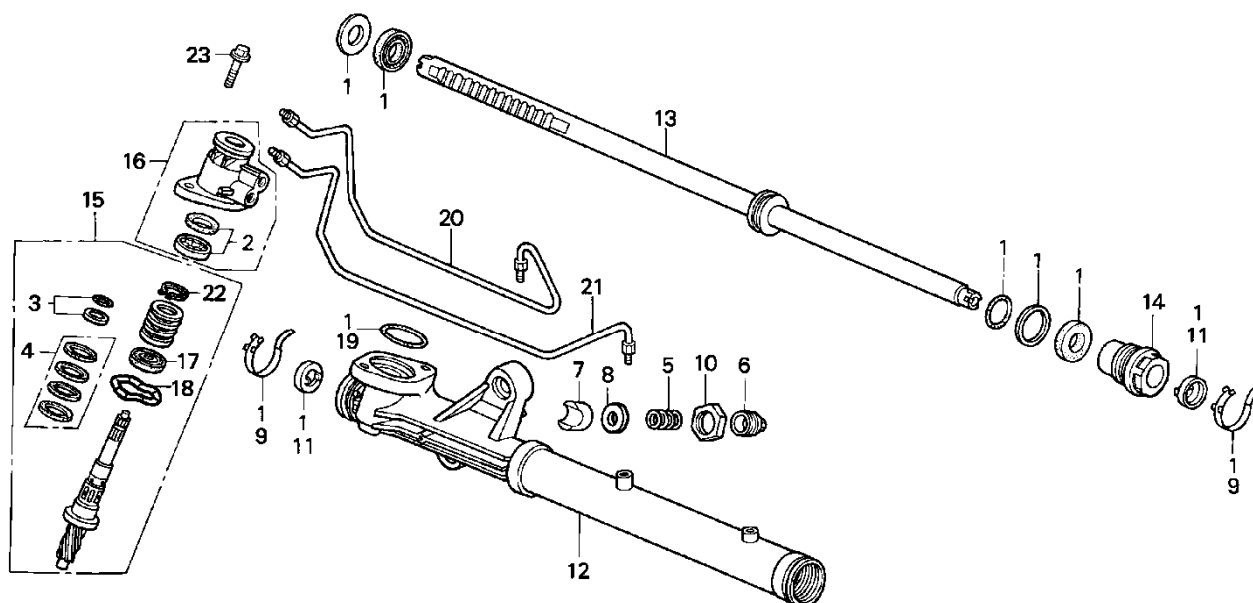

ST77-B3321

Refnr	Part Number	Part Description	Unit Qty
1	06531-S04-J51	SEAL KIT A, POWER STEERING (ROTARY VALVE)	001
2	06532-S84-A01	OIL SEAL SET, ROTARY VALVE	001
3	06534-S84-A01	SEAL SET, POWER STEERING VALVE (ROTARY VALVE)	001
4	06535-S50-003	RING SET, POWER STEERING SEAL (ROTARY VALVE)	001
5	53413-S04-G51	SPRING, RACK GUIDE PRESSURE	001
6	53414-S04-J51	SCREW, RACK GUIDE	001 ('98-'99)
6	53414-S04-003	SCREW, RACK GUIDE	001 ('00)
7	53416-S04-J51	GUIDE, STEERING RACK	001
8	53418-S04-G51	WASHER, DISK	001
9	53449-S04-J51	BAND B, BELLOWS	002
10	53458-S04-J51	NUT, LOCK	001
11	53536-S04-J51	WASHER, TIE ROD LOCK	002
12	53608-ST7-J61	HOUSING SUB ASSY., STEERING GEAR BOX	001 ('98-'99)
12	53608-ST7-J62	HOUSING SUB ASSY., STEERING GEAR BOX	001 ('00)
13	53626-ST7-J62	RACK COMP., STEERING (RH)	001
14	53630-S04-J54	END COMP., CYLINDER	001
15	53641-ST7-E61	VALVE SUB ASSY., STEERING	001
16	53645-ST7-J61	HOUSING COMP., VALVE	001
17	53660-S50-003	OIL SEAL, 27X38X5.5 (SHOWA)	001
18	53661-S50-003	WASHER, WAVE (SHOWA)	001
19	53666-S50-003	O-RING, 41.5X2 (SHOWA)	001
20	53670-ST7-J61	PIPE A, CYLINDER	001
21	53671-ST7-J61	PIPE B, CYLINDER	001
22	90601-S50-003	CIRCLIP, EXTERNAL, 20MM	001
23	90105-S50-003	BOLT, FLANGE, 8X28	002


Block B-33-60 POWER STEERING LINES (LH)

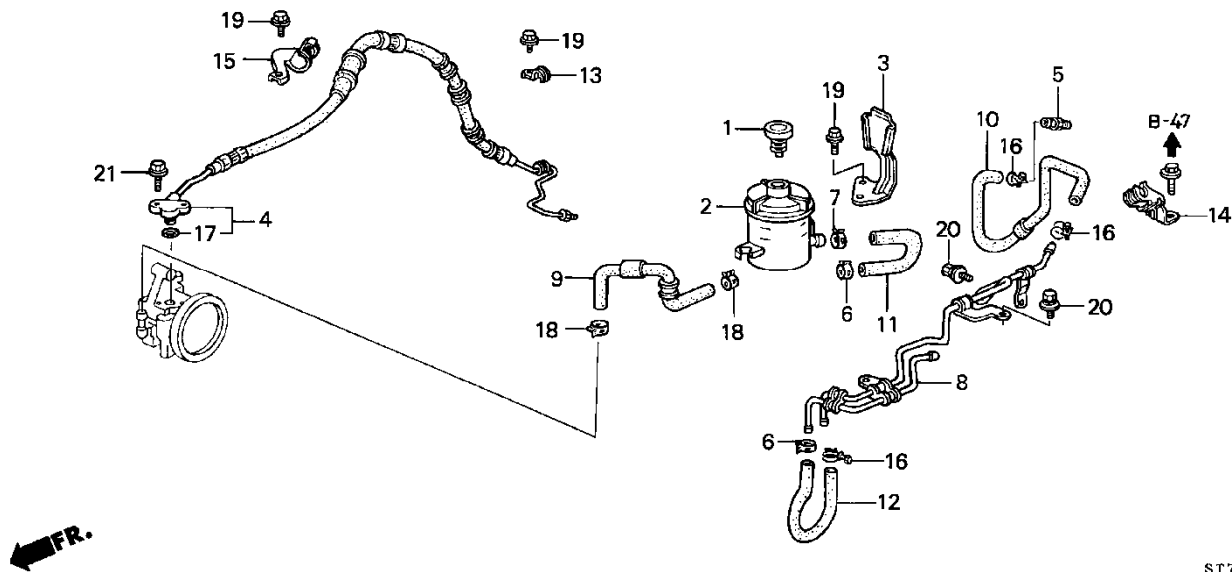

ST77-B3360A


Refnr	Part Number	Part Description	Unit Qty
1	53697-SB3-952	CAP, OIL TANK	001
2	53701-SR3-951	TANK COMP., POWER STEERING OIL	001
3	53711-SR3-951	BRACKET ASSY., OIL TANK	001
4	53713-ST7-R52	HOSE COMP., POWER STEERING FEED	001
5	53720-SP0-010	PIPE COMP., RETURN, 10MM	001
6	53721-SM4-013	CLAMP D, 15.5MM	002
7	53729-671-003	CLAMP D, 15.5MM	001
8	53730-SR3-951	PIPE COMP., POWER STEERING COMBINATION	001
9	53731-S04-J50	TUBE, POWER STEERING SUCTION	001
10	53732-ST7-A01	HOSE, POWER STEERING RETURN	001
11	53733-SR3-951	TUBE, POWER STEERING OIL TANK	001
12	53735-SR3-960	HOSE, OIL COOLER RETURN	001
13	53736-SR3-950	HOLDER, POWER STEERING PIPE	001
14	53737-SR3-992	BRACKET, POWER STEERING PIPE	001
15	53775-S04-980	STAY B, FEED HOSE	001
16	90635-SM4-A01	CLIP, OIL HOSE (MEIJI)	003
17	91370-SV4-000	O-RING, 14.4X1.9	001
18	91405-PE0-003	CLAMP, TUBE (D20)	002
19	93403-06012-08	BOLT-WASHER, 6X12	004
20	93405-06016-08	BOLT-WASHER, 6X16	003
21	95801-06030-08	BOLT, FLANGE, 6X30	002

Block B-33-61 POWER STEERING LINES (RH)

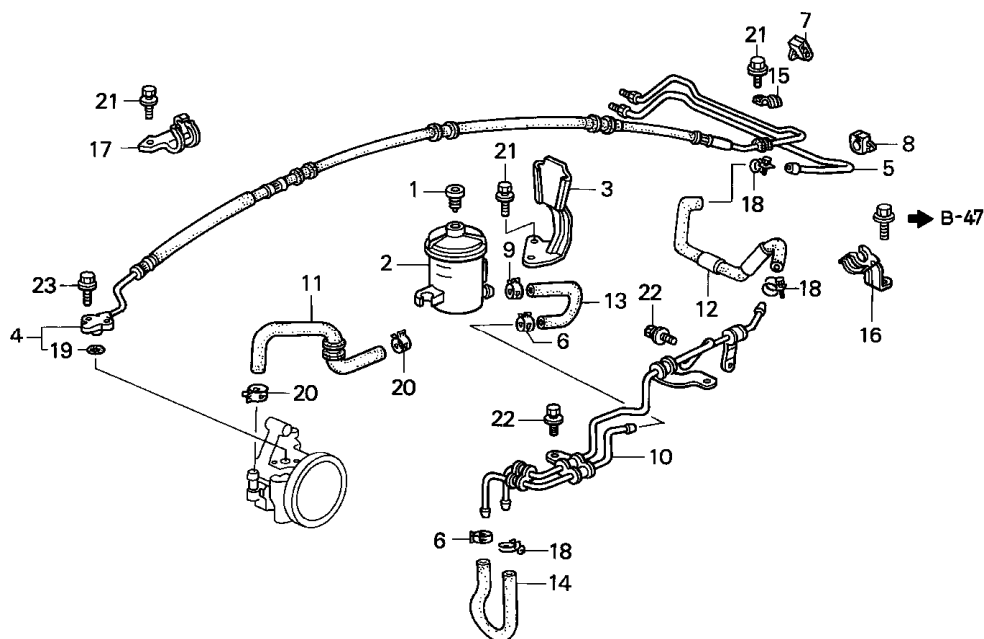


ST77-B3361

Refnr	Part Number	Part Description	Unit Qty
1	53697-SB3-952	CAP, OIL TANK	001
2	53701-SR3-951	TANK COMP., POWER STEERING OIL	001
3	53711-SR3-951	BRACKET ASSY., OIL TANK	001
4	53713-ST7-E01	HOSE COMP., POWER STEERING FEED	001
5	53720-ST0-950	PIPE COMP., RETURN, 10MM	001
6	53721-SM4-013	CLAMP D, 15.5MM	002
7	53728-SR3-951	CLIP, POWER STEERING PIPE	002
8	53729-SL4-951	CLIP, RETURN PIPE, 10MM	001
9	53729-671-003	CLAMP D, 15.5MM	001
10	53730-SR3-951	PIPE COMP., POWER STEERING COMBINATION	001
11	53731-S04-J50	TUBE, POWER STEERING SUCTION	001
12	53732-SR3-952	HOSE, POWER STEERING RETURN	001
13	53733-SR3-951	TUBE, POWER STEERING OIL TANK	001
14	53735-SR3-960	HOSE, OIL COOLER RETURN	001
15	53736-SR3-950	HOLDER, POWER STEERING PIPE	001
16	53737-SR3-992	BRACKET, POWER STEERING PIPE	001
17	53775-SR3-981	STAY B, FEED HOSE	001
18	90635-SM4-A01	CLIP, OIL HOSE (MEIJI)	003
19	91370-SV4-000	O-RING, 14.4X1.9	001
20	91405-PE0-003	CLAMP, TUBE (D20)	002
21	93403-06012-08	BOLT-WASHER, 6X12	004
22	93405-06016-08	BOLT-WASHER, 6X16	003
23	95801-06030-08	BOLT, FLANGE, 6X30	002

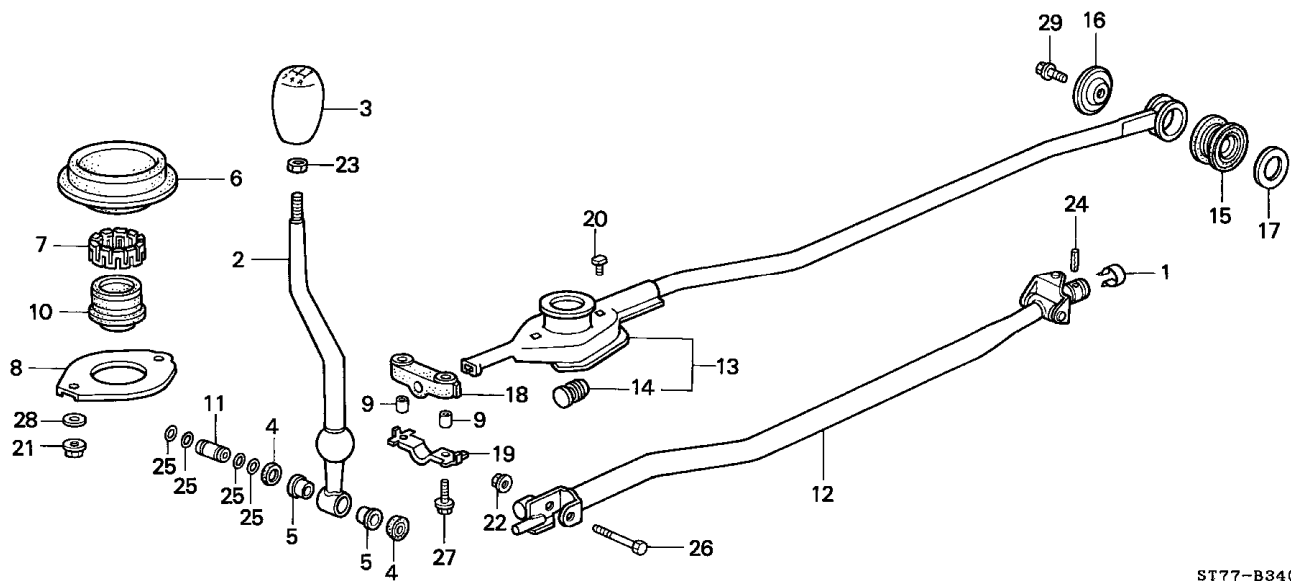

ST77-B3400


Refnr	Part Number	Part Description	Unit Qty
1	24313-PF5-000	CLIP, CHANGE JOINT PIN	001
2	54101-ST7-Z00	LEVER, CHANGE	001
3	54102-ST7-Z00	KNOB, CHANGE	001
4	54105-692-010	WASHER, THRUST	002
5	54107-SA0-010	BUSH, RR. JOINT	002
6	54109-SA7-000	SEAL A, CHANGE LEVER DUST	001
7	54110-SH3-003	SEAT, CHANGE LEVER BALL	001
8	54111-SH3-000	HOLDER, CHANGE BALL	001
9	54114-SB2-000	COLLAR, PIPE MOUNTING	002
10	54115-SH3-000	DUST SEAL B, CHANGE	001
11	54117-SD4-000	COLLAR, RR. JOINT	001
12	54201-ST7-R00	ROD COMP., CHANGE	001
13	54301-SR3-G00	EXTENSION, CHANGE	001
14	54302-SA0-300	CAP, EXTENSION	001
15	54303-SB2-010	RUBBER, EXTENSION END	001
16	54304-SK7-000	WASHER A, EXTENSION END	001
17	54305-SA0-000	WASHER B, EXTENSION END	001
18	54306-SH3-000	RUBBER, EXTENSION MOUNTING	001
19	54307-SH3-010	STOPPER, EXTENSION MOUNTING	001
20	54308-SH3-000	BOLT, EXTENSION	002
21	90114-SA0-000	NUT, SELF-LOCK, 6MM	002
22	90115-659-003	NUT, SELF-LOCK, 8MM	001
23	90310-ST7-Z00	NUT, CHANGE LEVER FLANGE	001
24	90751-S04-000	PIN, SPRING, 8X22	001
25	91301-671-671	O-RING, 1.9X11	004
26	92201-08060-0H	BOLT, HEX., 8X60	001
27	93402-08040-08	BOLT-WASHER, 8X40	002
28	94101-06800	WASHER, PLAIN, 6MM	002
29	95701-08018-08	BOLT, FLANGE, 8X18	001

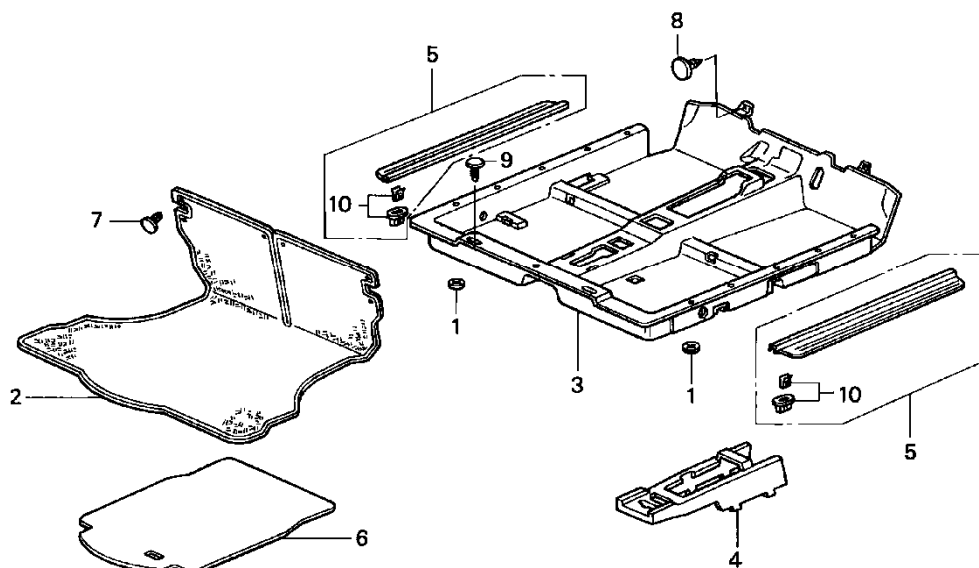

ST77-B3600


Refnr	Part Number	Part Description	Unit Qty
1	64436-692-000	CLIP, GUIDE	010
2	82320-ST7-A21ZA	MAT, TRUNK FLOOR *NH167L*	001
3	83302-ST7-G00ZA	MAT, FLOOR *NH167L*	001 (LH) (SRS) (ABS)
3	83302-ST7-G10ZA	MAT, FLOOR *NH167L*	001 (LH) (ABS)
3	83302-ST7-Z00ZA	MAT, FLOOR *NH167L*	001 (RH) (ABS)
3	83302-ST7-Z10ZA	MAT, FLOOR *NH167L*	001 (RH) (SRS) (ABS)
4	83303-ST7-000	PAD, FLOOR MAT	001
5	84201-ST7-000ZA	GARNISH, SIDE *NH167L*	002
6	84521-ST7-G00	LID COMP., SPARE TIRE	001
7	90667-SA7-003YW	CLIP, MAT, 5MM *NH167L*	014
8	90700-SB2-003	CLIP, HOOD INSULATOR	002
9	91562-ST8-003	CLIP, MAT, 8MM	003
10	91641-SH3-013	GROMMET ASSY., GARNISH	008

Block B-36-10 GROMMET

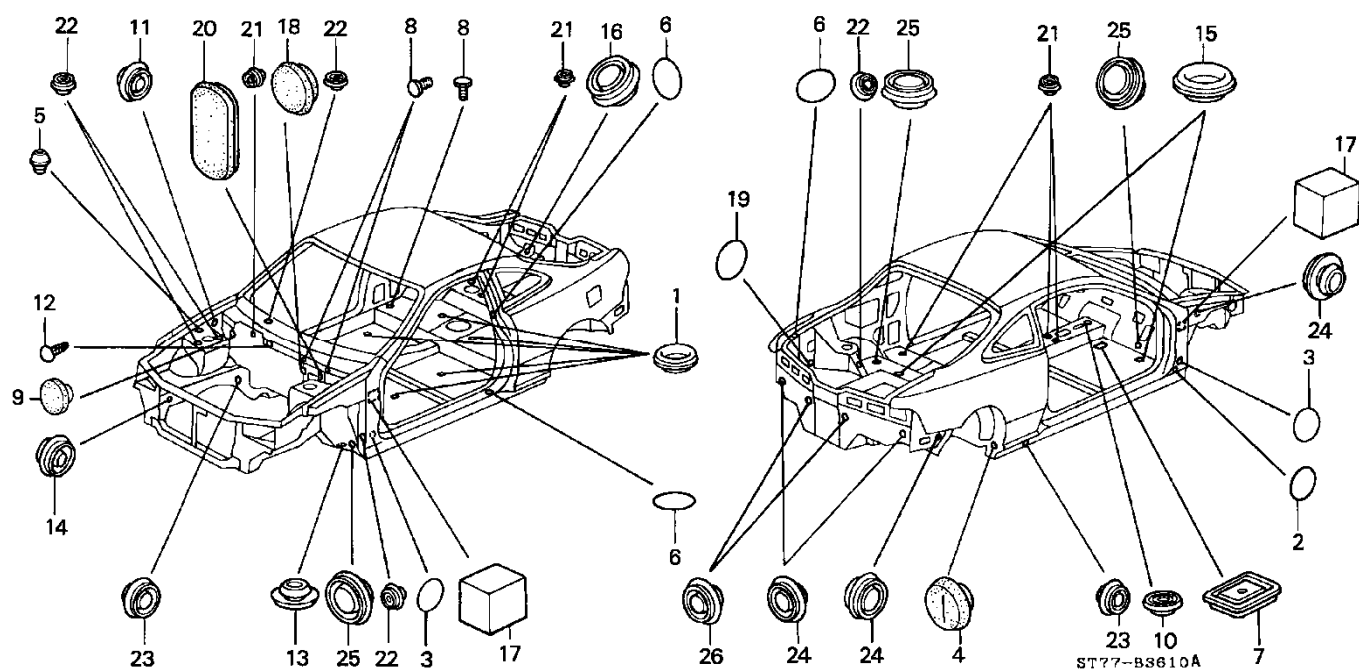


Refnr	Part Number	Part Description	Unit Qty
1	72207-SB2-000	CAP, FLOOR HOLE, 24MM	006
2	75826-605-300	SEAL, DOOR HOLE, 30MM (CIRCLE) (BLACK)	001
3	75826-634-300	SEAL, INSIDE PANEL, 15MM	003 (LH)
3	75826-634-300	SEAL, INSIDE PANEL, 15MM	006 (RH)
4	82871-671-000	GROMMET, DRAIN HOLE, 25MM	002
5	83431-SA4-000	CUSHION, FR. TRUNK	001
6	85268-SA0-000	PROTECTION, TAILGATE, 20MM (CIRCLE)	006
7	90615-SR3-000	CAP, WELD HOLE, 51X77	002
8	90852-671-003	PLUG, HOLE	004
9	90855-SA0-000	PLUG, VENTILATION HOLE, 20MM	001
10	90856-SR3-000	PLUG, HOLE, 18MM	001 (RH)
11	90860-SA5-003	PLUG, HOLE, 16MM	002
12	91504-SD5-901	CLIP, WASHER MOUTH	001 (RH)
13	91606-SK7-003	PLUG, BLIND, 25MM	002
14	91610-SB2-003	PLUG, HOLE, 16.7MM (BLACK)	002
15	91615-SH3-000	CAP, FLOOR HOLE, 49MM	003
16	91616-SS1-000	CAP, VALVE MAINTENANCE HOLE, 40MM	002
17	91616-ST7-000	BLOCK, FR. PILLAR INNER LOWER	002
18	91617-SB6-000	GROMMET, WASHER HOSE, 32MM	001
19	91619-SE0-000	SEAL, DOOR HOLE, 30MM (BLACK)	002
20	91631-SR3-000	PLUG, AIR CONDITIONER HOLE	001
21	95550-07000	PLUG, BLIND, 7MM	005 (LH)
21	95550-07000	PLUG, BLIND, 7MM	009 (RH)
22	95550-12000	PLUG, BLIND, 12MM	009
23	95550-18000	PLUG, BLIND, 18MM	002
24	95550-20000	PLUG, BLIND, 20MM	005 ('98-'99)
24	95550-20000	PLUG, BLIND, 20MM	004 ('00)
25	95550-25000	PLUG, BLIND, 25MM	006
26	91603-S04-003	PLUG, HOLE, 20MM	002 ("99-'00)

Block B-37 INSTRUMENT PANEL (LH)

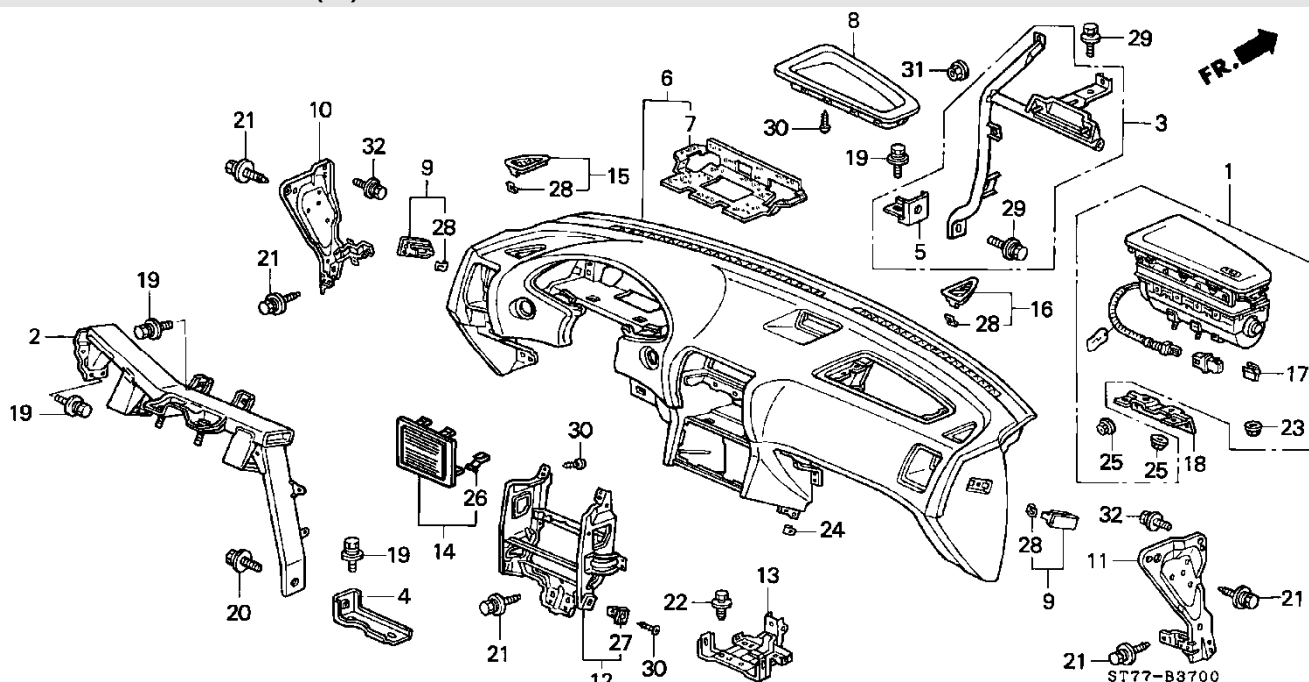


Refnr	Part Number	Part Description	Unit Qty
1	06780-ST7-G70ZA	MODULE KIT, PASSENGER *NH167L*	001 (SRS) (ABS)
2	61170-ST7-A00ZZ	BEAM COMP., STEERING HANGER	001
3	61190-ST7-A10ZZ	BEAM ASSY., PASSENGER SRS	001 (SRS) (ABS)
4	61193-ST7-A00ZZ	BRACKET, CENTER BEAM	001
5	61196-ST7-A00ZZ	BRACKET, SRS BEAM	001 (SRS) (ABS)
6	77100-ST7-A01ZA	PANEL ASSY., INSTRUMENT *NH167L*	001 ('98)
6	77100-ST7-G00ZA	PANEL ASSY., INSTRUMENT *NH167L*	001 ('99-'00)
7	77108-ST7-A00	INSULATOR, INSTRUMENT PANEL LOWER	001 ('98)
8	77109-ST7-G00ZA	TRAY, INSTRUMENT PANEL *NH167L*	001 (ABS)
9	77120-SR3-000ZB	LID ASSY., SIDE FIX *NH167L*	002
10	77140-ST7-A80	BRACKET COMP., INSTRUMENT DRIVER SIDE	001
11	77145-ST7-A00	BRACKET COMP., INSTRUMENT PASSENGER SIDE	001
12	77160-ST7-A00ZZ	FRAME COMP., INSTRUMENT CENTER (LH)	001
13	77180-ST0-000	BRACKET COMP., INSTRUMENT CENTER LOWER	001
14	77240-ST7-Z00ZA	LID ASSY., AUDIO HOLE *TCARBON*	001
15	77470-ST7-A00ZA	GARNISH ASSY., DRIVER SIDE DEFROSTER *NH167L*	001
16	77475-ST7-A00ZA	GARNISH ASSY., PASSENGER SIDE DEFROSTER *NH167L*	001
17	77858-ST7-A81	CLIP, PASSENGER SRS LID	002 (SRS) (ABS)
18	77885-ST7-A80	BRACKET, PASSENGER MODULE	001 (SRS) (ABS)
19	90109-SH3-000	BOLT-WASHER, 8X25	007
20	90116-SB0-000	BOLT-WASHER, 8X16	001
21	90128-ST7-Z00	BOLT-WASHER, 6X25	006
22	90153-SB6-003	BOLT, EARTH, 6X12 (ZN)	002
23	90301-634-670	NUT, FLANGE, 6MM	002 (SRS) (ABS)
24	90302-SA4-003	NUT, SPRING, 4MM	002
25	90321-SP0-A80	NUT-WASHER, 6MM	004 (SRS) (ABS)
26	90650-SE3-000	CLIP, RADIO PANEL	002
27	90665-SM4-003	GROMMET, SCREW, 4MM (YELLOW)	002
28	90666-SD4-003	CLIP, FITTING	004
29	93404-08016-08	BOLT-WASHER, 8X16	003 (SRS) (ABS)
30	93913-14420	SCREW, TAPPING, 4X16 (PO)	N
31	94050-08080	NUT, FLANGE, 8MM	002 (SRS) (ABS)
32	95701-06012-08	BOLT, FLANGE, 6X12	002

Block B-37-1 INSTRUMENT PANEL (RH)

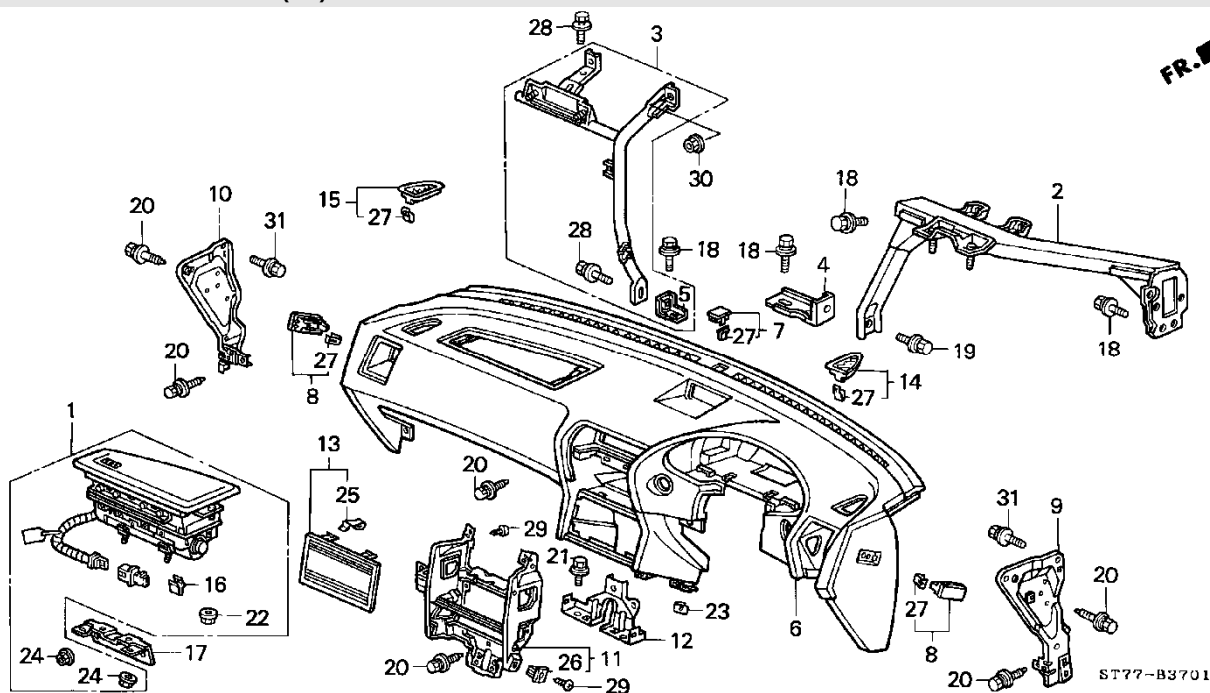

Refnr	Part Number	Part Description	Unit Qty
1	06780-ST7-E70ZA	MODULE KIT, PASSENGER *NH167L*	001 (SRS) (ABS)
2	61170-ST7-000ZZ	BEAM COMP., STEERING HANGER	001
3	61190-ST7-000ZZ	BEAM ASSY., PASSENGER SRS	001 (SRS) (ABS)
4	61193-ST7-000ZZ	BRACKET, SRS CENTER BEAM	001
5	61196-ST7-000ZZ	BRACKET, SRS BEAM	001 (SRS) (ABS)
6	77100-ST7-000ZA	PANEL ASSY., INSTRUMENT *NH167L*	001 (ABS)
6	77100-ST7-J80ZA	PANEL ASSY., INSTRUMENT *NH167L*	001 (SRS) (ABS)
7	77104-SR3-000ZA	LID, AUTO AIR CONDITIONER HOLE *NH167L*	001
8	77120-SR3-000ZB	LID ASSY., SIDE FIX *NH167L*	002
9	77140-ST7-E00	BRACKET COMP., INSTRUMENT DRIVER SIDE	001
10	77145-ST7-000	BRACKET COMP., INSTRUMENT PASSENGER SIDE	001
11	77160-ST7-000ZZ	FRAME COMP., INSTRUMENT CENTER (RH)	001
12	77180-ST0-000	BRACKET COMP., INSTRUMENT CENTER LOWER	001
13	77240-ST7-Z00ZA	LID ASSY., AUDIO HOLE *TCARBON*	001
14	77470-ST7-000ZA	GARNISH ASSY., DRIVER SIDE DEFROSTER *NH167L*	001
15	77475-ST7-000ZA	GARNISH ASSY., PASSENGER SIDE DEFROSTER *NH167L*	001
16	77858-ST7-A81	CLIP, PASSENGER SRS LID	002 (SRS) (ABS)
17	77885-ST7-A80	BRACKET, PASSENGER MODULE	001 (SRS) (ABS)
18	90109-SH3-000	BOLT-WASHER, 8X25	007
19	90116-SB0-000	BOLT-WASHER, 8X16	001
20	90128-ST7-Z00	BOLT-WASHER, 6X25	006
21	90153-SB6-003	BOLT, EARTH, 6X12 (ZN)	002
22	90301-634-670	NUT, FLANGE, 6MM	002 (SRS) (ABS)
23	90302-SA4-003	NUT, SPRING, 4MM	002
24	90321-SP0-A80	NUT-WASHER, 6MM	004 (SRS) (ABS)
25	90650-SE3-000	CLIP, RADIO PANEL	002
26	90665-SM4-003	GROMMET, SCREW, 4MM (YELLOW)	002
27	90666-SD4-003	CLIP, FITTING	005
28	93404-08016-08	BOLT-WASHER, 8X16	003 (SRS) (ABS)
29	93913-14420	SCREW, TAPPING, 4X16 (PO)	N
30	94050-08080	NUT, FLANGE, 8MM	002 (SRS) (ABS)
31	95701-06012-08	BOLT, FLANGE, 6X12	002


Block B-37-10 INSTRUMENT PANEL GARNISH (LH)

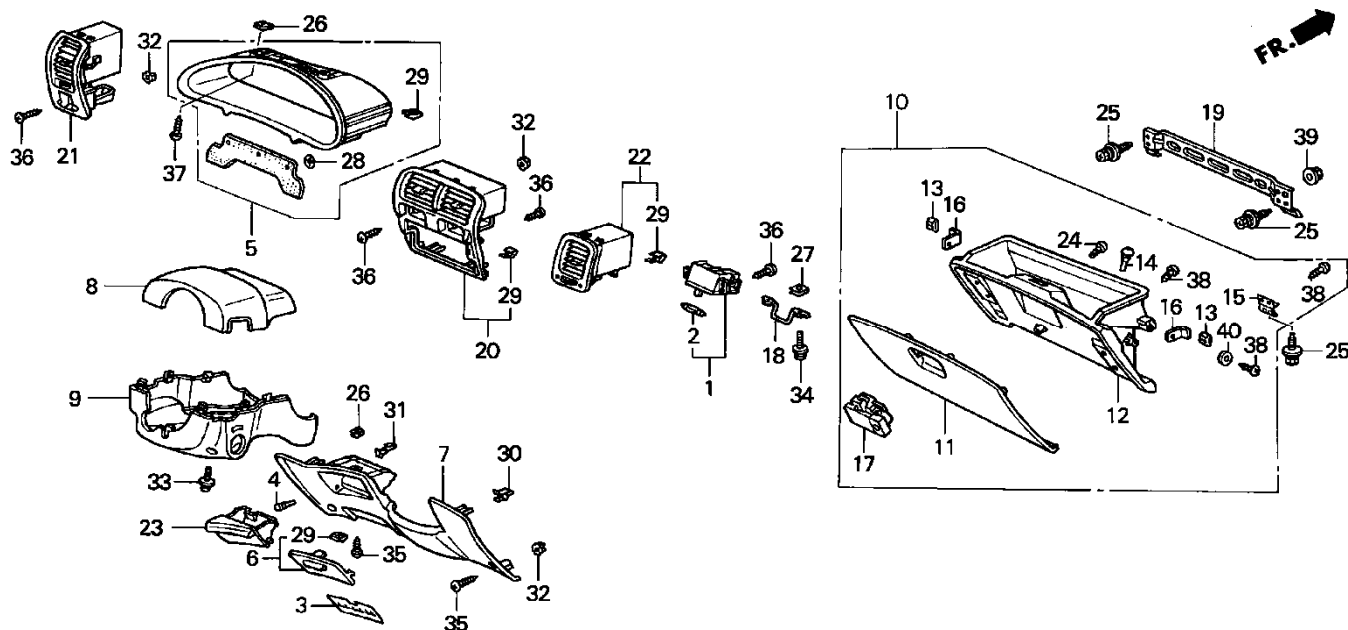

ST77-B3710 A


Refnr	Part Number	Part Description	Unit Qty
1	34254-SM4-013	LAMP ASSY., GLOVE BOX	001
2	34295-SA5-003	BULB (12V 3.4W) (DAIICHI)	001
3	38205-ST7-A01	LABEL, FUSE	001
3	38205-ST7-P00	LABEL, FUSE (PORTUGAL)	(1) ('99) (LH)
4	66418-SA5-000	STOPPER, GLOVE BOX LID	001
5	77200-ST7-A00ZA	VISOR ASSY., METER *NH1L*	001
6	77222-SR2-000ZA	LID ASSY., FUSE *NH167L*	001
7	77311-ST7-A00ZA	COVER, INSTRUMENT DRIVER SIDE LOWER *NH167L*	001
8	77350-ST7-A80ZA	COVER, COLUMN UPPER *NH167L*	001 ('98-'99)
8	77350-ST7-A02ZC	COVER, COLUMN UPPER *NH167L*	001 ('00)
9	77360-ST7-G00ZA	COVER ASSY., COLUMN LOWER *NH167L*	001 (ABS)
9	77360-ST7-G80ZA	COVER ASSY., COLUMN LOWER *NH167L*	001 (SRS) (ABS)
10	77500-ST8-Y00ZA	BOX ASSY., GLOVE *NH167L*	001
11	77501-ST7-C00ZA	LID, GLOVE BOX *NH167L*	001
12	77502-ST7-C00ZA	BOX, GLOVE *NH167L*	001
13	77508-SP0-000	RUBBER, GLOVE BOX STOPPER	002
14	77509-SR3-000	STOPPER, GLOVE BOX	002
15	77512-SR8-A90	HINGE COMP., GLOVE BOX	002
16	77518-SR8-A90	STOPPER, GLOVE BOX	002
17	77540-ST7-A01ZA	LOCK ASSY., GLOVE BOX *NH167L*	001
18	77542-SR3-000	STRIKER, GLOVE BOX	001
19	77551-ST7-A91	FRAME, GLOVE BOX	001
20	77610-ST7-G00ZA	OUTLET ASSY., AIR CONDITIONER CENTER *TCARBON*	001
21	77630-ST7-G00ZA	OUTLET ASSY., DRIVER *TCARBON*	001
22	77640-ST7-G01ZA	OUTLET ASSY., PASSENGER *NH167L*	001
23	77755-ST7-A01ZA	POCKET COMP., COIN *NH167L*	001
24	90107-SE3-000	SCREW-WASHER, 4X12	002
25	90140-SH3-003	BOLT-WASHER, 5X18	005
26	90302-SA4-003	NUT, SPRING, 4MM	003
27	90305-SA0-000	NUT, FLOATING, 4MM	002
28	90310-SB2-003	NUT, SPEED	003
29	90666-SD4-003	CLIP, FITTING	006
30	90667-SK7-A02	CLIP B, LOWER COVER	002
31	90671-SK7-A00	CLIP, COIN POCKET	002
32	91640-SM4-003	GROMMET, SCREW, 4MM	005
33	93891-05010-07	SCREW-WASHER, 5X10	003
34	93893-04016-07	SCREW-WASHER, 4X16	002
35	93903-44480	SCREW, TAPPING, 4X16	003
36	93913-14420	SCREW, TAPPING, 4X16 (PO)	005
37	93913-14480	SCREW, TAPPING, 4X16 (PO)	002
38	93913-24280	SCREW, TAPPING, 4X12 (PO)	015
39	94050-05080	NUT, FLANGE, 5MM	001
40	94103-04700	WASHER, PLAIN, 4MM	002

Block B-37-11 INSTRUMENT PANEL GARNISH (RH)

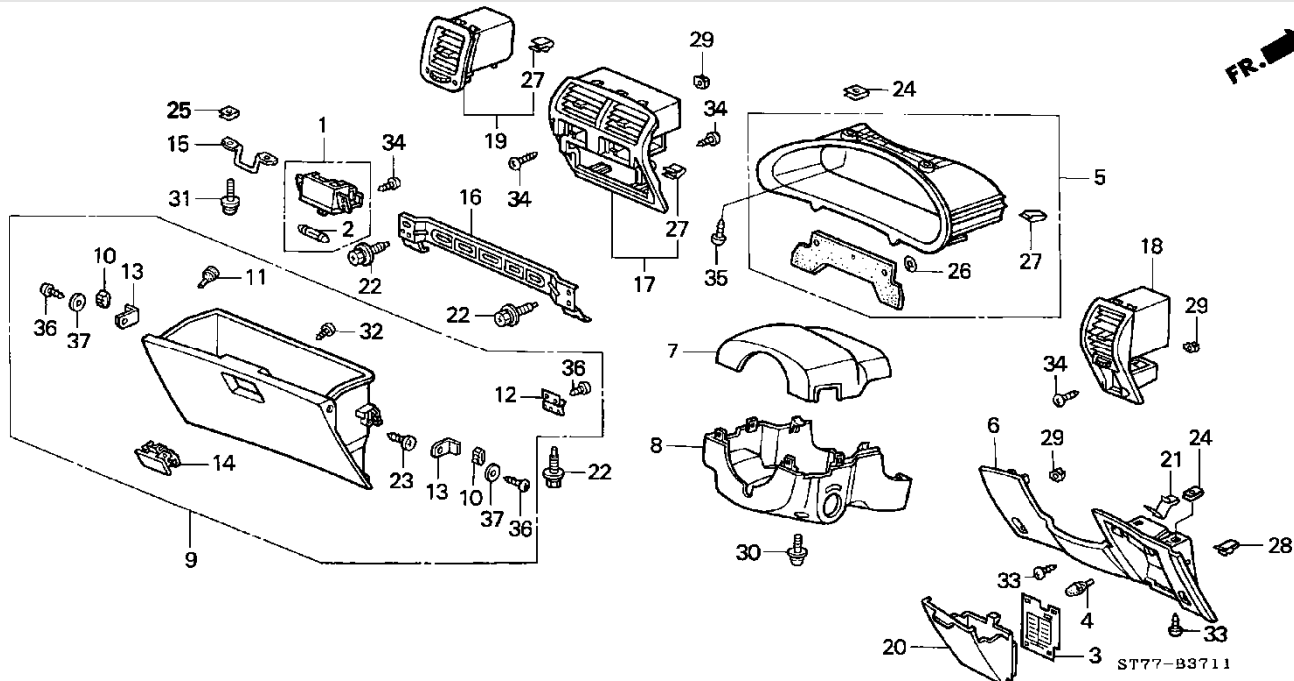


Refnr	Part Number	Part Description	Unit Qty
1	34254-SM4-013	LAMP ASSY., GLOVE BOX	001
2	34295-SA5-003	BULB (12V 3.4W) (DAIICHI)	001
3	38205-ST7-E00	LABEL, FUSE	001
4	66418-SB2-000	STOPPER, GLOVE BOX LID	002
5	77200-ST7-A00ZA	VISOR ASSY., METER *NH1L*	001
6	77311-ST7-000ZA	COVER, INSTRUMENT DRIVER SIDE LOWER *NH167L*	001
7	77350-ST7-A80ZA	COVER, COLUMN UPPER *NH167L*	001 ('98-'99)
7	77350-ST7-A02ZC	COVER, COLUMN UPPER *NH167L*	001 ('00)
8	77360-ST7-G00ZA	COVER ASSY., COLUMN LOWER *NH167L*	001 (ABS)
8	77360-ST7-G80ZA	COVER ASSY., COLUMN LOWER *NH167L*	001 (SRS) (ABS)
9	77500-ST7-N80ZA	BOX ASSY., GLOVE *NH167L*	001
10	77508-SP0-000	RUBBER, GLOVE BOX STOPPER	002
11	77509-SR3-000	STOPPER, GLOVE BOX	002
12	77512-SR8-A90	HINGE COMP., GLOVE BOX	002
13	77518-SR8-A90	STOPPER, GLOVE BOX	002
14	77520-SR3-013ZB	LOCK ASSY., GLOVE BOX *NH167L*	001
15	77542-SR3-000	STRIKER, GLOVE BOX	001
16	77551-ST7-000	FRAME, GLOVE BOX	001
17	77610-ST7-G00ZA	OUTLET ASSY., AIR CONDITIONER CENTER *TCARBON*	001
18	77630-ST7-Z01ZA	OUTLET ASSY., DRIVER *TCARBON*	001
19	77640-ST7-G01ZA	OUTLET ASSY., PASSENGER *NH167L*	001
20	77751-ST7-010ZA	POCKET, DRIVER *NH167L*	001
21	77752-SF4-000	SPRING, COIN POCKET	002
22	90140-SH3-003	BOLT-WASHER, 5X18	005
23	90144-SP0-000	SCREW, TAPPING, 4X16 (PO)	002
24	90302-SA4-003	NUT, SPRING, 4MM	003
25	90305-SA0-000	NUT, FLOATING, 4MM	002
26	90310-SB2-003	NUT, SPEED	003
27	90666-SD4-003	CLIP, FITTING	005
28	90667-SK7-A02	CLIP B, LOWER COVER	002
29	91640-SM4-003	GROMMET, SCREW, 4MM	005
30	93891-05010-07	SCREW-WASHER, 5X10	003
31	93893-04016-07	SCREW-WASHER, 4X16	002
32	93903-34380	SCREW, TAPPING, 4X12	002
33	93903-44480	SCREW, TAPPING, 4X16	003
34	93913-14420	SCREW, TAPPING, 4X16 (PO)	005
35	93913-14480	SCREW, TAPPING, 4X16 (PO)	002
36	93913-24280	SCREW, TAPPING, 4X12 (PO)	009
37	94103-04700	WASHER, PLAIN, 4MM	002

Block B-37-40 CONSOLE

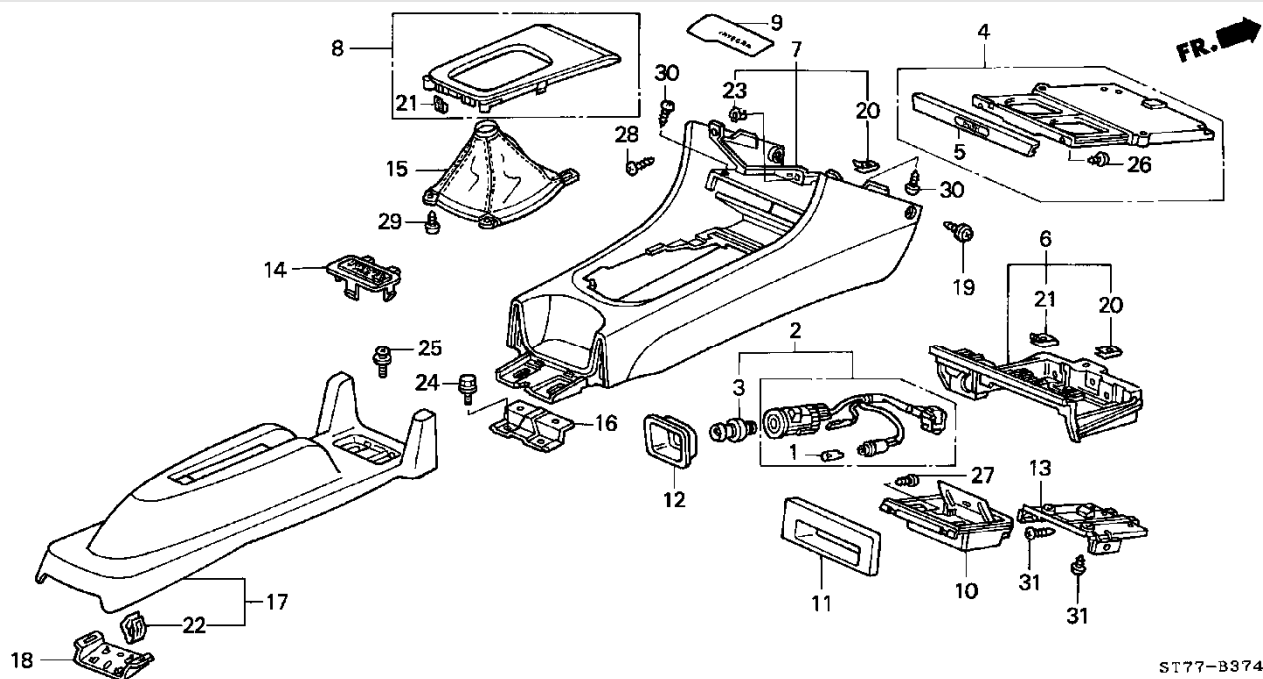

ST77-B3740


Refnr	Part Number	Part Description	Unit Qty
1	35505-S04-003	BULB (14V 1.4W)	001
2	39600-ST7-Z01	LIGHTER ASSY., CIGARETTE	001
3	39610-SA5-405	KNOB COMP., CIGARETTE LIGHTER	001
4	77230-ST7-Z02ZA	CUP HOLDER ASSY. *TCARBON*	001
5	77231-ST7-000ZB	PANEL, FACE *TCARBON*	001
6	77233-ST7-G00ZA	PANEL, FR. CONSOLE *TCARBON*	001 (LH)
6	77233-ST7-Z00ZA	PANEL, FR. CONSOLE *TCARBON*	001 (RH)
7	77291-ST7-000ZA	CONSOLE, FR. *NH167L*	001 (RH)
7	77291-ST7-A00ZA	CONSOLE, FR. *NH167L*	001 (LH)
8	77293-ST7-G00ZA	PANEL, MT ESCUTCHEON *TCARBON*	001 (LH)
8	77293-ST7-Z00ZA	PANEL, MT ESCUTCHEON *TCARBON*	001 (RH)
9	77299-ST7-G00	SEAL, WOOD PANEL (INTEGRA)	001 (LH)
9	77299-ST7-Z00	SEAL, WOOD PANEL (INTEGRA)	001 (RH)
10	77710-ST0-003ZA	CASE COMP., FR. ASHTRAY *NH1L*	001
11	77715-ST7-Z01ZA	PANEL, FR. ASHTRAY *TCARBON*	001
12	77721-ST7-G00ZA	PROTECTOR, CIGARETTE LIGHTER *TCARBON*	001 (LH)
12	77721-ST7-Z00ZA	PROTECTOR, CIGARETTE LIGHTER *TCARBON*	001 (RH)
13	77730-ST7-003	HOLDER COMP., FR. ASHTRAY	001
14	83413-ST7-G01ZA	CAP, RR. CONSOLE *NH167L*	001
15	83414-SR3-000ZA	BOOT, CHANGE LEVER *NH1L*	001
16	83425-ST0-000ZZ	BRACKET, FR. CONSOLE	001
17	83445-ST7-Z01ZA	COVER, PARKING BRAKE *NH167L*	001
18	83446-ST7-Z00ZZ	BRACKET, PARKING BRAKE COVER	001
19	90137-SH3-000	SCREW, TAPPING, 4X16	002
20	90302-SA4-003	NUT, SPRING, 4MM	003
21	90666-SD4-003	CLIP, FITTING	008
22	90666-S10-003	CLIP, SNAP FITTING	002
23	91640-SM4-003	GROMMET, SCREW, 4MM	002
24	93405-06016-08	BOLT-WASHER, 6X16	002
25	93894-06020-08	SCREW-WASHER, 6X20	002
26	93901-22020	SCREW, TAPPING, 3X6	002
27	93901-32180	SCREW, TAPPING, 3X8	002
28	93903-44480	SCREW, TAPPING, 4X16	002
29	93913-14280	SCREW, TAPPING, 4X12 (PO)	004
30	93913-14480	SCREW, TAPPING, 4X16 (PO)	005
31	93913-24280	SCREW, TAPPING, 4X12 (PO)	003

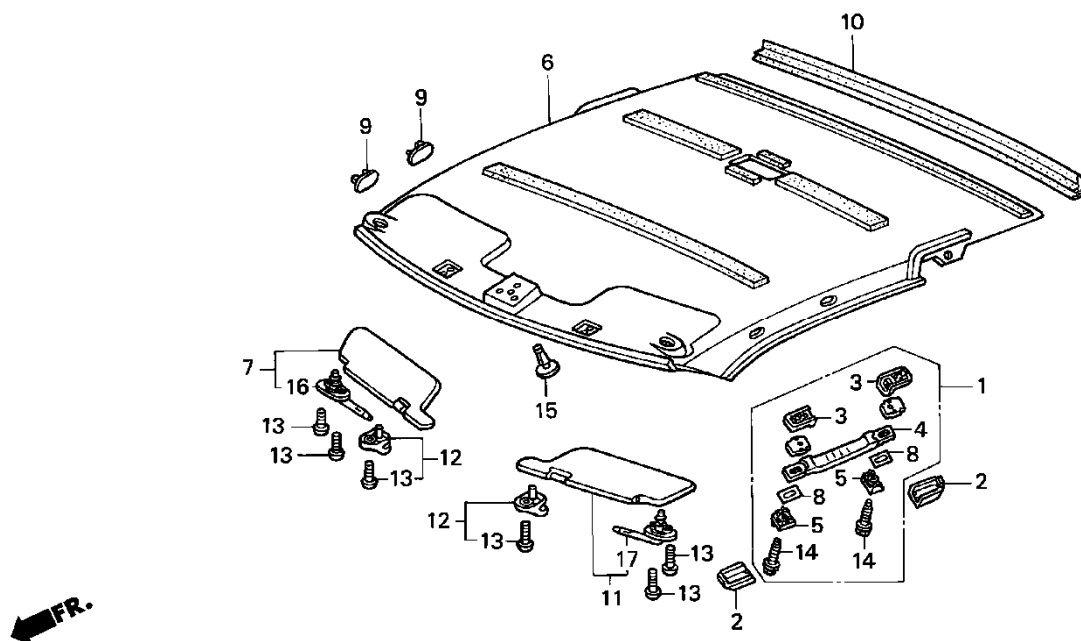

ST77-B3800B

Refnr	Part Number	Part Description	Unit Qty
1	71830-SE7-G02ZL	RAIL ASSY., GRAB *NH180L* (PASSENGER SIDE)	001
2	71832-SA5-932ZT	CAP, GRAB RAIL *NH180L* (PASSENGER SIDE)	002
3	71833-SE7-G01ZK	MOLDING, GRAB RAIL *NH180L*	002
4	71834-SA5-933ZK	GRIP, GRAB RAIL *NH180L*	001
5	71835-SA5-933	COVER, GRAB RAIL	002
6	83200-ST7-010ZA	LINING ASSY., ROOF *NH180L*	001
7	83230-ST7-G00ZA	SUNVISOR ASSY., R. *NH180L*	001 ('98-'99) (LH) / (RH) (ABS)
7	83230-ST7-G01ZA	SUNVISOR ASSY., R. *NH180L*	001 ('00) (LH) / (RH) (ABS)
7	83230-ST7-Q10ZA	SUNVISOR ASSY., R. *NH180L*	001 (-'99) (RH) (SRS) (ABS)
7	83230-ST7-Q11ZA	SUNVISOR ASSY., R. *NH180L*	001 ('99) (RH) (SRS) (ABS)
7	83230-ST7-Q12ZA	SUNVISOR ASSY., R. *NH180L*	001 ('00) (RH) (SRS) (ABS)
8	83248-SG0-003	SPACER, GRAB RAIL	002
9	83248-ST7-003ZA	LID, GRAB HOLE *NH180L* (DRIVER SIDE)	002
10	83260-ST7-010ZA	TRIM, RR. ROOF *NH180L*	001
11	83280-ST7-E00ZA	SUNVISOR ASSY., L. *NH180L*	001 ('98-'99) (LH) (ABS) / (RH)
11	83280-ST7-E01ZA	SUNVISOR ASSY., L. (MIRROR) *NH180L*	001 ('00) (LH) (ABS) / (RH)
11	83280-ST7-G00ZA	SUNVISOR ASSY., L. *NH180L*	001 ('98-'99) (LH) (SRS) (ABS)
11	83280-ST7-G01ZA	SUNVISOR ASSY., L. *NH180L*	001 ('00) (LH) (SRS) (ABS)
11	83280-ST7-P00ZA	SUNVISOR ASSY., L. *NH180L* (PORTUGAL)	(1) ('99-'00) (LH) (SRS) (ABS)
12	88217-SR3-003ZB	HOLDER, SUNVISOR *NH180L*	002
13	90131-SH3-A12	SCREW, PAN, 5X16	006
14	90133-SE3-003	BOLT-WASHER, 5X25	002
15	90672-671-003ZP	CLIP, TRIM *NH120L*	002
16	83235-SR3-G01ZA	STAY ASSY., R. SUNVISOR *NH180L*	001
17	83285-SR3-G01ZA	STAY ASSY., L. SUNVISOR *NH180L*	001


Block B-39 PILLAR GARNISH (LH)

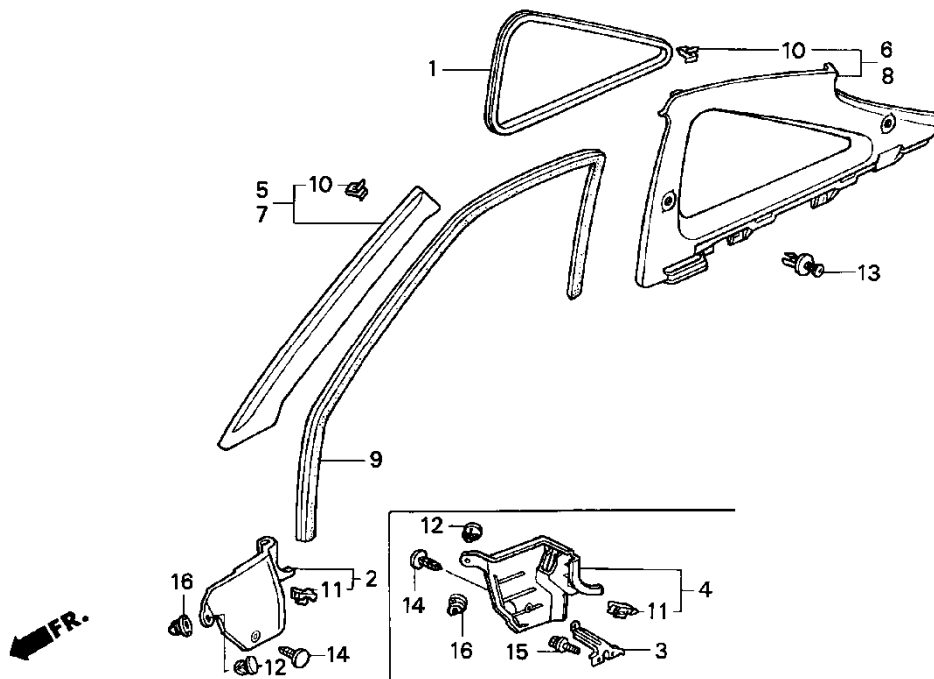

ST77-B3900

Refnr	Part Number	Part Description	Unit Qty
1	73541-ST7-000ZA	TRIM, QUARTER WINDOW *NH1L*	002
2	83111-ST7-A00ZA	LINING, R. COWL SIDE *NH167L*	001
3	83113-ST7-000	BRACKET, COWL SIDE	001
4	83161-ST7-A00ZA	LINING, L. COWL SIDE *NH167L*	001
5	84101-ST7-000ZA	GARNISH ASSY., R. FR. PILLAR *NH180L*	001
6	84130-ST7-A00ZA	LINING, R. QUARTER *NH180L*	001
7	84151-ST7-000ZA	GARNISH ASSY., L. FR. PILLAR *NH180L*	001
8	84180-ST7-000ZA	LINING, L. QUARTER *NH180L*	001
9	84231-ST7-000ZA	TRIM, FR. OPENING *NH167L*	002
10	90609-SG0-003	CLIP, PILLAR GARNISH	022
11	90668-ST0-003	CLIP, SIDE LINING	002
12	91532-SR3-003	CLIP, DASHBOARD INSULATOR (BLACK)	002
13	91550-SH3-003ZT	CLIP, RR. PANEL LINING *NH167L*	002
14	91560-SE3-003ZT	CLIP, TRIM, 5MM *NH167L*	002
15	93403-06016-08	BOLT-WASHER, 6X16	002
16	91533-SR3-003	CLIP, INSULATOR (NATURAL)	002


Block B-39-1 PILLAR GARNISH (RH)

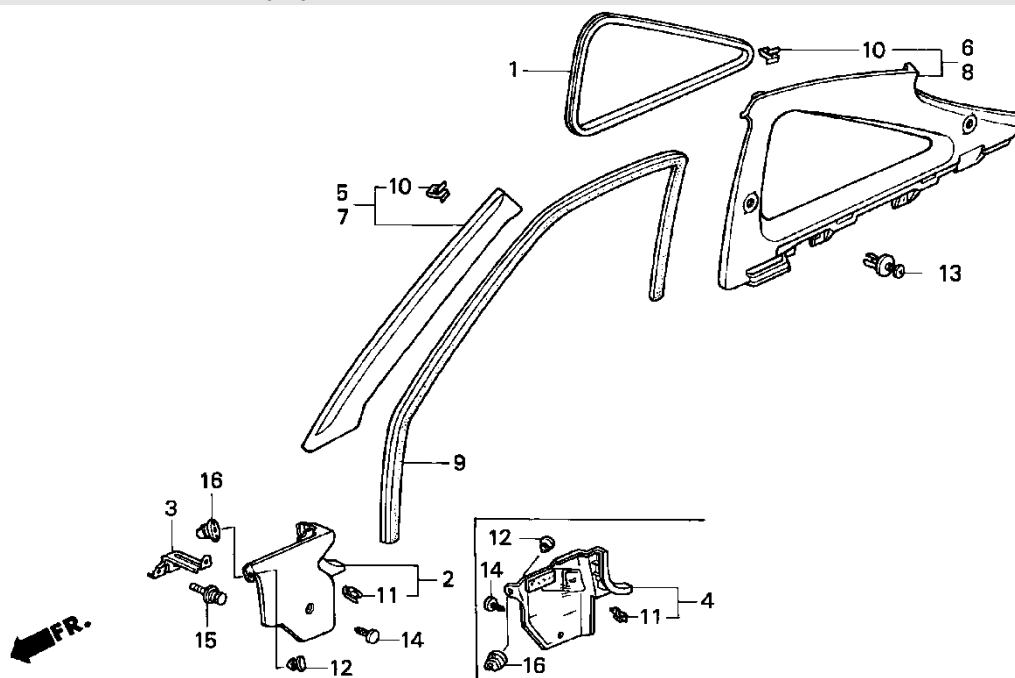

ST77-B3901

Refnr	Part Number	Part Description	Unit Qty
1	73541-ST7-000ZA	TRIM, QUARTER WINDOW *NH1L*	002
2	83111-ST7-000ZA	LINING, R. COWL SIDE *NH167L*	001
3	83113-ST7-000	BRACKET, COWL SIDE	001
4	83161-ST7-Q00ZA	LINING, L. COWL SIDE *NH167L*	001
5	84101-ST7-000ZA	GARNISH ASSY., R. FR. PILLAR *NH180L*	001
6	84130-ST7-A00ZA	LINING, R. QUARTER *NH180L*	001
7	84151-ST7-000ZA	GARNISH ASSY., L. FR. PILLAR *NH180L*	001
8	84180-ST7-000ZA	LINING, L. QUARTER *NH180L*	001
9	84231-ST7-000ZA	TRIM, FR. OPENING *NH167L*	002
10	90609-SG0-003	CLIP, PILLAR GARNISH	022
11	90668-ST0-003	CLIP, SIDE LINING	002
12	91532-SR3-003	CLIP, DASHBOARD INSULATOR (BLACK)	002
13	91550-SH3-003ZT	CLIP, RR. PANEL LINING *NH167L*	002
14	91560-SE3-003ZT	CLIP, TRIM, 5MM *NH167L*	002
15	93403-06016-08	BOLT-WASHER, 6X16	002
16	91533-SR3-003	CLIP, INSULATOR (NATURAL)	002


Block B-39-11 DOOR LINING (RH)

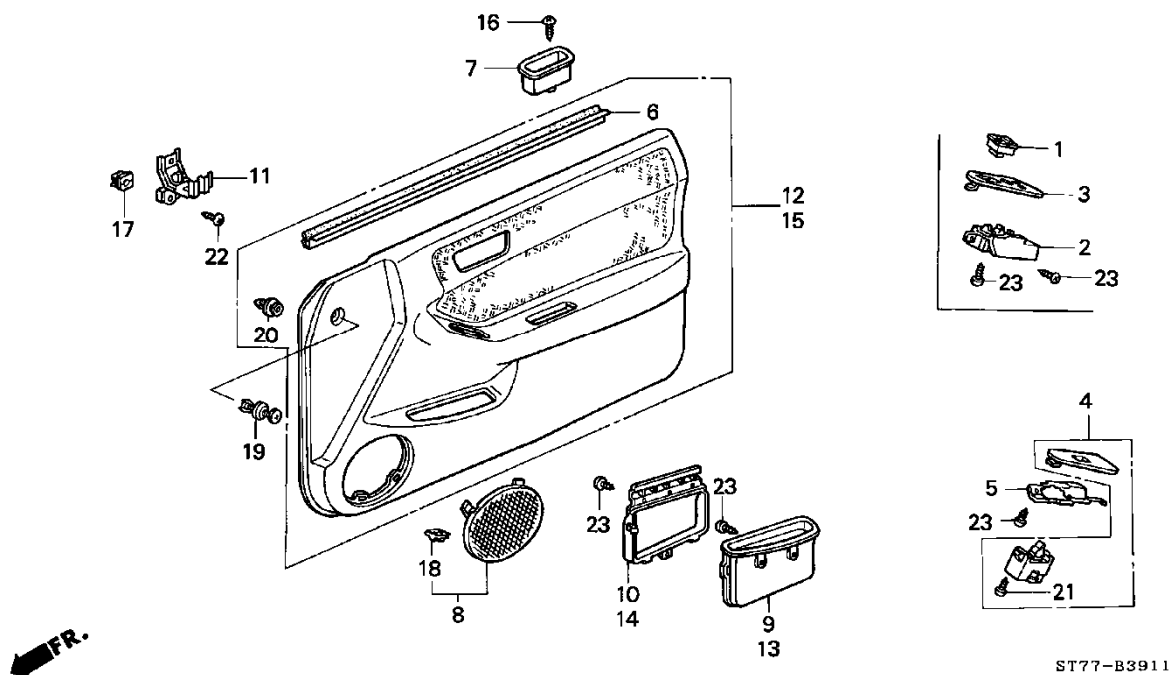

ST77-B3911

Refnr	Part Number	Part Description	Unit Qty
1	35190-ST7-A11	SWITCH ASSY., REMOTE CONTROL MIRROR (ALPS)	001
2	35750-ST7-E01	SWITCH ASSY., POWER WINDOW MASTER	001
3	35751-ST7-003ZA	PANEL, POWER WINDOW MASTER SWITCH *NH167L*	001
4	35760-ST7-003ZA	SWITCH ASSY., POWER WINDOW ASSISTANT *NH167L*	001
5	35761-ST7-000	BRACKET, POWER WINDOW SWITCH	001
6	72335-ST7-003	WEATHERSTRIP, FR. DOOR INNER	002
7	83501-SR4-000ZA	POCKET, DOOR PULL *NH167L*	002
8	83503-ST7-901ZA	LID, DOOR SPEAKER *NH167L*	002
9	83504-ST7-000ZA	POCKET A, R. DOOR *NH167L*	001
10	83506-ST7-000ZA	POCKET B, R. DOOR *NH167L*	001
11	83508-SR3-000	BRACKET ASSY., PULL POCKET	002
12	83533-ST7-921ZA	LINING COMP., R. FR. DOOR *2TN37*	001
13	83554-ST7-000ZA	POCKET A, L. DOOR *NH167L*	001
14	83556-ST7-000ZA	POCKET B, L. DOOR *NH167L*	001
15	83583-ST7-921ZA	LINING COMP., L. FR. DOOR *2TN37*	001
16	90101-S03-000	SCREW, TAPPING, 4X16	002
17	90662-SB2-003	GROMMET, SCREW, 5MM	004
18	90678-SK7-003	CLIP, SPEAKER	004
19	91550-SH3-003ZT	CLIP, RR. PANEL LINING *NH167L*	002
20	91560-SP0-003	CLIP, DOOR LINING (GRAY)	016
21	93901-44320	SCREW, TAPPING, 4X12	002
22	93903-45220	SCREW, TAPPING, 5X12	004
23	93913-14220	SCREW, TAPPING, 4X12	N

Block B-39-30 SIDE LINING

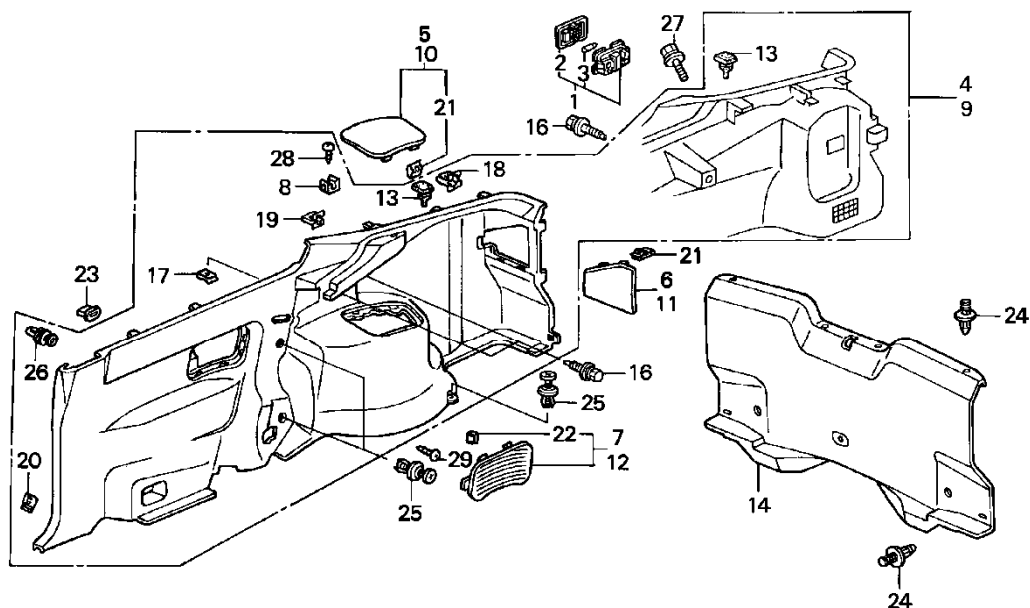


FR.

ST77-B3930 B

Refnr	Part Number	Part Description	Unit Qty
1	34260-SH3-004	LIGHT ASSY., TRUNK ROOM	001
2	34262-SH3-004	LENS	001
3	34295-SA5-003	BULB (12V 3.4W) (DAIICHI)	001
4	83730-ST7-010ZA	LINING, R. SIDE *NH167L*	001
5	83735-ST7-000ZA	LID, R. DAMPER MAINTENANCE *NH167L*	001
6	83736-SK7-000ZA	LID, R. TAILLIGHT *NH167L*	001
7	83737-ST7-000ZA	LID ASSY., R. RR. SPEAKER *NH167L*	001
8	83739-SH5-003	HOLDER, RR. SIDE LINING	002
9	83780-ST7-010ZA	LINING, L. SIDE *NH167L*	001
10	83785-ST7-000ZA	LID, L. DAMPER MAINTENANCE *NH167L*	001
11	83786-SK7-000ZA	LID, L. TAILLIGHT *NH167L*	001
12	83787-ST7-000ZA	LID ASSY., L. RR. SPEAKER *NH167L*	001
13	84426-SF4-900	STOPPER, RR. SHELF	002
14	84640-ST7-J00ZA	LINING ASSY., RR. PANEL *NH167L*	001
16	90128-SA7-000	BOLT-WASHER, 6X25	003
17	90302-SA4-003	NUT, SPRING, 4MM	002
18	90609-SG0-003	CLIP, PILLAR GARNISH	006
19	90611-SM4-013	CLIP, PILLAR GARNISH	002
20	90669-SH4-003	CLIP, CENTER PILLAR LINING	002
21	90674-SK7-000	CLIP, SNAP FITTING	008
22	90678-SK7-003	CLIP, SPEAKER	004
23	90683-693-000	GROMMET, SCREW, 5MM	004
24	91505-ST7-003ZA	CLIP, COWL TOP *NH167L*	007
25	91550-SH3-003ZT	CLIP, RR. PANEL LINING *NH167L*	006
26	91560-SP0-003	CLIP, DOOR LINING (GRAY)	004
27	93404-06020-07	BOLT-WASHER, 6X20	001
28	93913-14220	SCREW, TAPPING, 4X12	002
29	93913-15420	SCREW, TAPPING, 5X16 (PO)	004


Block B-39-50 TAILGATE LINING

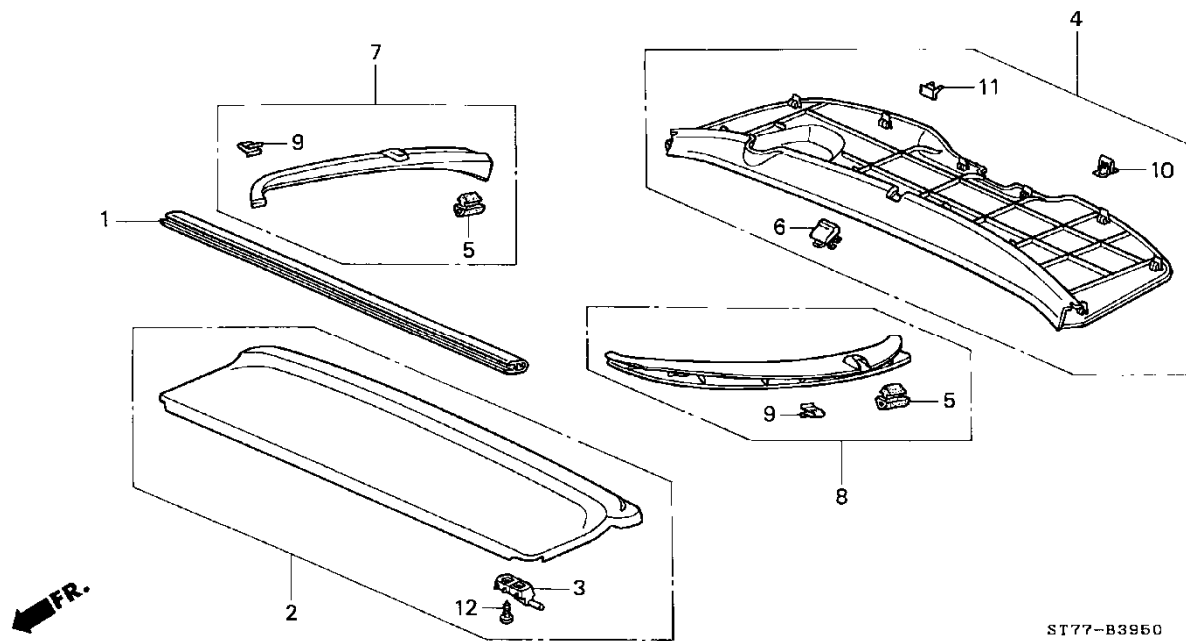

ST77-B3950

Refnr	Part Number	Part Description	Unit Qty
1	73240-SK7-000	TRIM, RR. WINDSHIELD	001
2	84400-ST7-000ZA	SHELF COMP., RR. CENTER *NH167L*	001
3	84402-SF4-000	BAR, SUPPORT	002
4	84431-ST7-A00ZA	LINING, TAILGATE *NH167L*	001 ('98)
4	84431-ST7-A01ZA	LINING, TAILGATE *NH167L*	001 ('99-'00)
5	84432-SH3-000	STOPPER, CENTER SHELF	002
6	84432-ST7-000ZA	CAP, TAILGATE LINING *NH167L*	001
7	84435-ST7-000ZA	GARNISH, R. TAILGATE SIDE *NH167L*	001
8	84445-ST7-000ZA	GARNISH, L. TAILGATE SIDE *NH167L*	001
9	90609-SG0-003	CLIP, PILLAR GARNISH	008
10	90610-SR3-003	CLIP, GARNISH (KATO)	011
11	90664-ST7-003	CLIP, TAILGATE LINING	003
12	93903-44380	SCREW, TAPPING, 4X12	004


Block B-40 FRONT SEAT

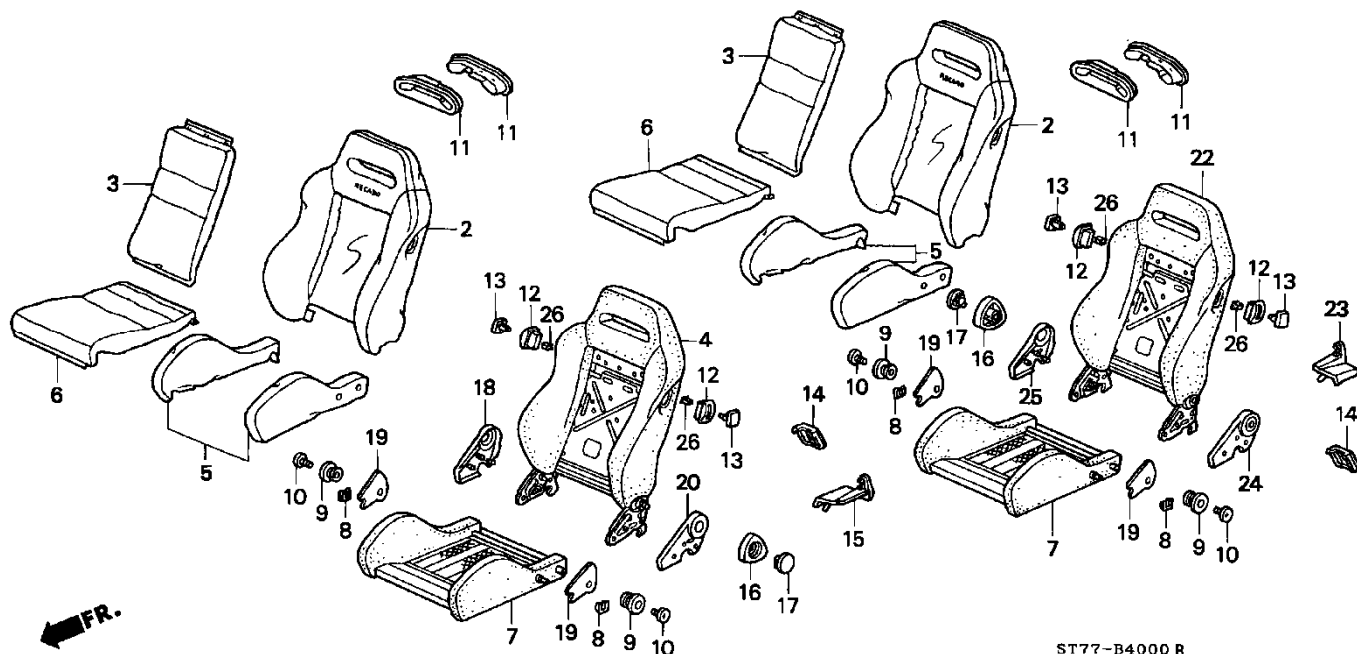

ST77-B4000 B

Refnr	Part Number	Part Description	Unit Qty	
2	81121-ST7-Z00ZA	COVER, R. FR. SEATBACK TRIM *NH1L*	002	
2	81121-ST7-Z00ZB	COVER, R. FR. SEATBACK TRIM *R124L*	002	
2	81121-ST7-Z00ZC	COVER, R. FR. SEATBACK TRIM *Y55L*	002	('00) (LH)
3	81122-ST7-Z00ZA	COVER, FR. SEATBACK CENTER TRIM *NH1L*	002	
3	81122-ST7-Z00ZB	COVER, FR. SEATBACK CENTER TRIM *R124L*	002	
3	81122-ST7-Z00ZC	COVER, FR. SEATBACK CENTER TRIM *Y55L*	002	('00) (LH)
4	81122-ST7-Z11	PAD & FRAME COMP., R. FR. SEATBACK	001	
5	81131-ST7-Z00ZA	COVER, FR. SEAT CUSHION SIDE TRIM *NH1L*	002	
5	81131-ST7-Z00ZB	COVER, FR. SEAT CUSHION SIDE TRIM *R124L*	002	
5	81131-ST7-Z00ZC	COVER, FR. SEAT CUSHION SIDE TRIM *Y55L*	002	('00) (LH)
6	81132-ST7-Z00ZA	COVER, FR. SEAT CUSHION CENTER TRIM *NH1L*	002	
6	81132-ST7-Z00ZB	COVER, FR. SEAT CUSHION CENTER TRIM *R124L*	002	
6	81132-ST7-Z00ZC	COVER, FR. SEAT CUSHION CENTER TRIM *Y55L*	002	('00) (LH)
7	81132-ST7-Z01	PAD & FRAME COMP., FR. SEAT CUSHION	002	
8	81137-ST7-Z01	CLIP, PIVOT	004	
9	81138-S03-Z01	PROTECTOR, STRIKER	004	
10	81139-ST7-Z01	BOLT, 6X14	004	
11	81147-ST7-Z01ZA	GARNISH, BELT HOLE *NH1L*	004	
12	81161-ST7-Z01	GARNISH, FALL DOWN	004	
13	81162-ST7-Z01	KNOB, FALL DOWN	004	
14	81195-SR3-000ZB	COVER, RR. FOOT OUTER *NH167L*	002	
15	81196-SR3-000ZB	COVER, R. RR. INNER FOOT *NH167L*	001	
16	81221-ST7-Z01	DIAL, RECLINING	002	
17	81222-ST7-Z01	CAP, DIAL	002	
18	81238-ST7-Z01	COVER, R. RECLINING OUTER	001	
19	81239-ST7-Z01	PROTECTOR, RECLINING INNER	004	
20	81248-ST7-Z01	COVER, R. RECLINING INNER	001	
22	81522-ST7-Z11	PAD & FRAME COMP., L. FR. SEATBACK	001	
23	81596-SR3-000ZB	COVER, L. RR. INNER FOOT *NH167L*	001	
24	81638-ST7-Z01	COVER, L. RECLINING OUTER	001	
25	81648-ST7-Z01	COVER, L. RECLINING INNER	001	
26	81237-ST7-Z01	CLIP, KNOB	004	


Block B-40-10 FRONT SEAT COMPONENTS (L.)

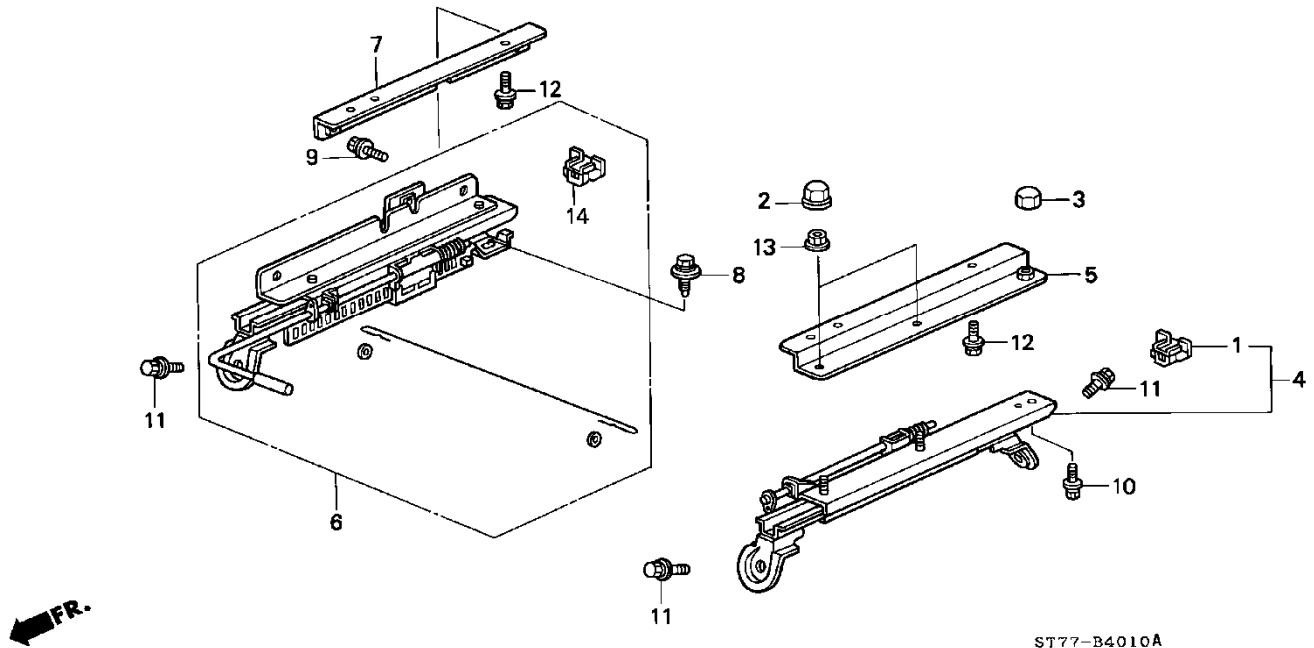

ST77-B4010A

Refnr	Part Number	Part Description	Unit Qty
1	81261-SP0-A03	CAP, RAIL END	001
2	81268-ST7-Z01	NUT, FR. CAP	002
3	81269-ST7-Z01	NUT, RR. CAP	001
4	81660-ST7-G01	ADJUSTER, L. OUTER SLIDE	001
5	81667-ST7-000	BRACKET, L. OUTER SLIDE ADJUSTER	001
6	81670-ST7-G01	ADJUSTER, L. INNER SLIDE	001
7	81677-ST7-000	BRACKET, L. INNER SLIDE ADJUSTER	001
8	90135-SK7-A01	BOLT-WASHER, 10X27	001
9	90143-SR3-000	BOLT-WASHER, 10X22	002
10	90143-ST5-900	BOLT-WASHER, 8X22	001
11	90155-SH3-000	BOLT-WASHER, 8X25	003
12	93402-06016-08	BOLT-WASHER, 6X16	006
13	94070-08080	NUT-WASHER, 8MM	002
14	81261-SH4-A21	CAP, END	001


Block B-40-20 FRONT SEAT COMPONENTS (R.)

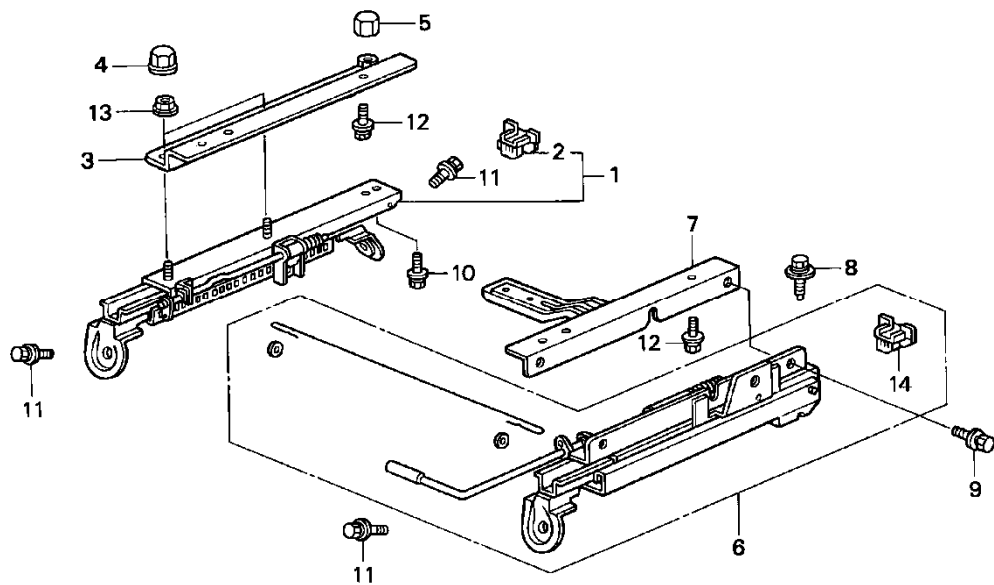

ST77-B4020 A


Refnr	Part Number	Part Description	Unit Qty
1	81260-ST7-G01	ADJUSTER, R. OUTER SLIDE	001
2	81261-SP0-A03	CAP, RAIL END	001
3	81267-ST7-000	BRACKET, R. OUTER SLIDE ADJUSTER	001
4	81268-ST7-Z01	NUT, FR. CAP	002
5	81269-ST7-Z01	NUT, RR. CAP	001
6	81270-ST7-G01	ADJUSTER, R. INNER SLIDE	001
7	81277-ST7-000	BRACKET, R. INNER SLIDE ADJUSTER	001
8	90135-SK7-A01	BOLT-WASHER, 10X27	001
9	90143-SR3-000	BOLT-WASHER, 10X22	002
10	90143-ST5-900	BOLT-WASHER, 8X22	001
11	90155-SH3-000	BOLT-WASHER, 8X25	003
12	93402-06016-08	BOLT-WASHER, 6X16	006
13	94070-08080-	NUT-WASHER, 8MM	002
14	81261-SH4-A21	CAP, END	001

Block B-41 REAR SEAT

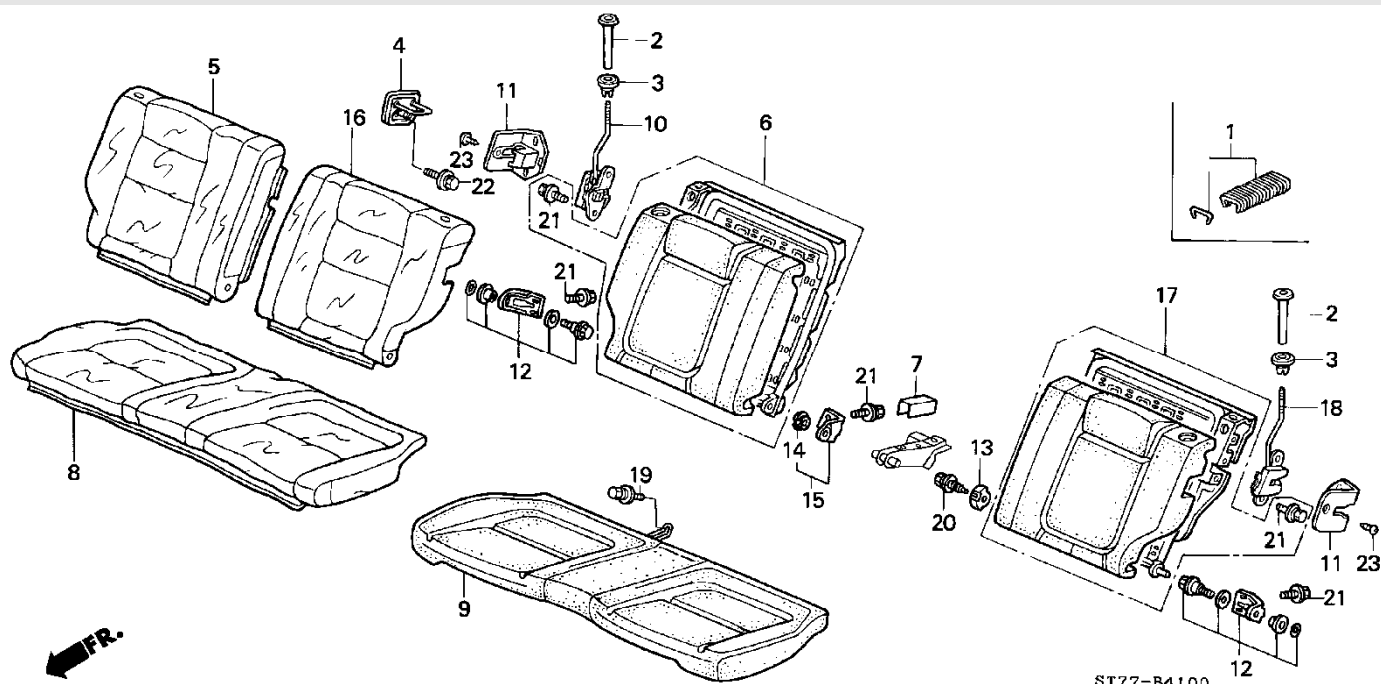

Refnr	Part Number	Part Description	Unit Qty
1	04810-SB3-000	C CLIP SET, TRIM FASTENER (30 PIECES)	001
1	04810-SB3-R00	C CLIP SET, TRIM FASTENER (100 PIECES)	001
2	78165-SA5-003YH	KNOB, RR. SEAT LOCK *NH167L*	002
3	78166-SB3-003ZN	COLLAR, RR. SEATBACK LOCK *NH167L*	002
4	78185-SB3-003	STRIKER, RR. SEAT	002
5	82121-ST7-G01ZA	COVER, R. RR. SEATBACK TRIM *NH1L*	001 ('98-'99)
5	82121-ST7-G01ZB	COVER, R. RR. SEATBACK TRIM *TYPED* (GRAPHITE BLACK)	001 ('00)
5	82121-ST7-G01ZC	COVER, R. RR. SEATBACK TRIM *TYPEE* (BLACK/YELLOW)	001 ('00) (LH)
6	82122-ST7-G01	PAD, R. RR. SEATBACK MOLDING	001
7	82126-ST7-000	SEAL, RR. SEATBACK HINGE	001
8	82131-ST7-Z01ZA	COVER, RR. SEAT CUSHION TRIM *NH1L*	001 ('98-'99)
8	82131-ST7-Z01ZB	COVER, RR. SEAT CUSHION TRIM *TYPED* (BLACK/RED)	001 ('00)
8	82131-ST7-Z01ZC	COVER, RR. SEAT CUSHION TRIM *TYPEE* (BLACK/YELLOW)	001 ('00) (LH)
9	82132-ST7-J21	PAD, RR. SEAT CUSHION MOLDING	001
10	82220-S03-003	LOCK ASSY., R. RR. SEAT	001
11	82223-SH3-003ZA	COVER, RR. SEAT LOCK *NH167L*	002
12	82290-S03-000	BRACKET COMP., SEAT PIVOT	002
13	82291-S04-000	COVER, RR. CENTER PIVOT	001
14	82292-S04-000	COLLAR, RR. CENTER SEAT PIVOT	001
15	82295-S04-000	BRACKET COMP., CENTER SEAT PIVOT	001
16	82521-ST7-G01ZA	COVER, L. RR. SEATBACK TRIM *NH1L*	001 ('98-'99)
16	82521-ST7-G01ZB	COVER, L. RR. SEATBACK TRIM *TYPED* (GRAPHITE BLACK)	001 ('00)
16	82521-ST7-G01ZC	COVER, L. RR. SEATBACK TRIM *TYPEE* (BLACK/YELLOW)	001 ('00) (LH)
17	82522-ST7-G01	PAD, L. RR. SEATBACK MOLDING	001
18	82620-S03-003	LOCK ASSY., L. RR. SEAT	001
19	90128-SA7-000	BOLT-WASHER, 6X25	001
20	90139-SH3-003	BOLT-WASHER, 6X20	001
21	93403-06016-08	BOLT-WASHER, 6X16	016
22	93405-06016-08	BOLT-WASHER, 6X16	004
23	93903-44380	SCREW, TAPPING, 4X12	006


Block B-41-20 SEATBELTS

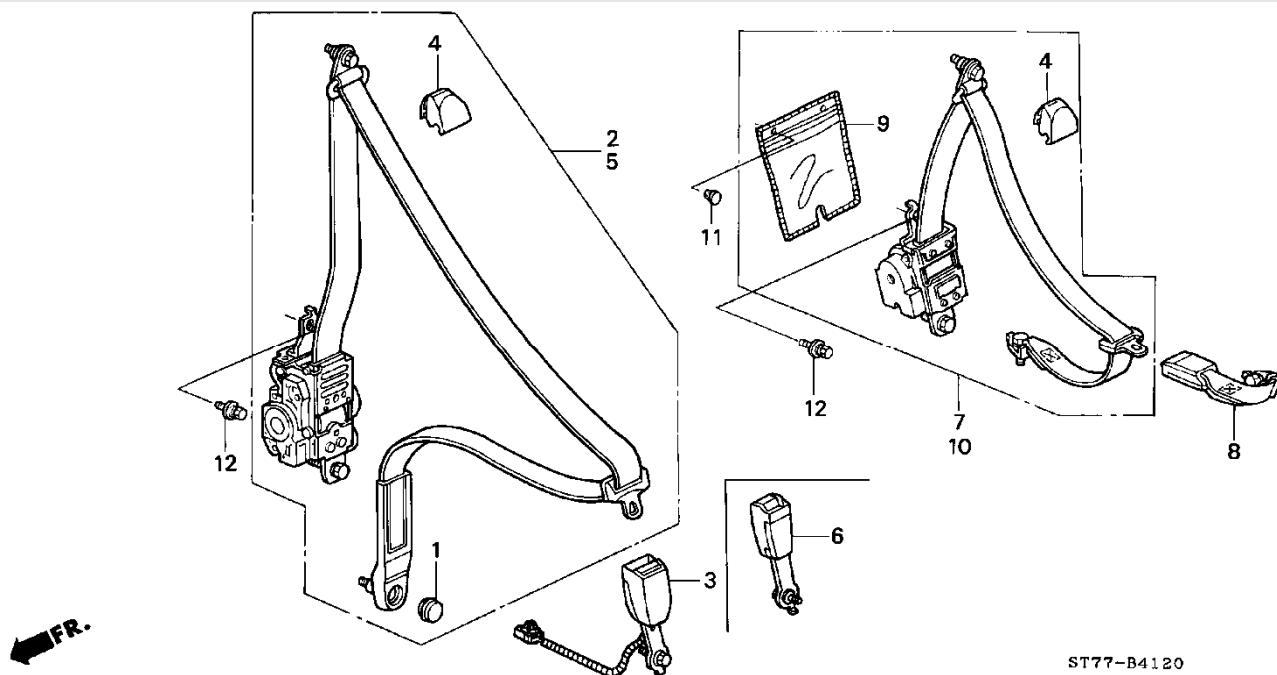


ST77-B4120

Refnr	Part Number	Part Description	Unit Qty
1	77863-SA5-672ZW	CAP, ANCHOR COVER (TAKATA) *NH167L*	002
2	81450-ST7-G01ZA	TONGUE, R. FR. SEATBELT OUTER *NH167L*	001
3	81455-ST7-G01ZA	BUCKLE, R. FR. SEATBELT INNER *NH167L*	001
4	81493-SR3-004ZB	COVER, THROUGH ANCHOR (TAKATA) *NH180L*	004
5	81850-ST7-G01ZA	TONGUE, L. FR. SEATBELT OUTER *NH167L*	001
6	81855-SY0-N02ZA	BUCKLE, L. FR. SEATBELT INNER *NH167L*	001
7	82450-ST7-G01ZA	TONGUE, R. RR. SEATBELT OUTER *NH167L*	001
8	82455-ST7-Q02ZA	BUCKLE, RR. SEATBELT INNER *NH167L*	002
9	82490-SR3-000	BAG, PROTECTOR	002
10	82850-ST7-G01ZA	TONGUE, L. RR. SEATBELT OUTER *NH167L*	001
11	90688-SR3-003	CLIP, BAG PROTECTOR	004
12	93405-06016-08	BOLT-WASHER, 6X16	004

Block B-42 EMBLEMS/CAUTION LABELS

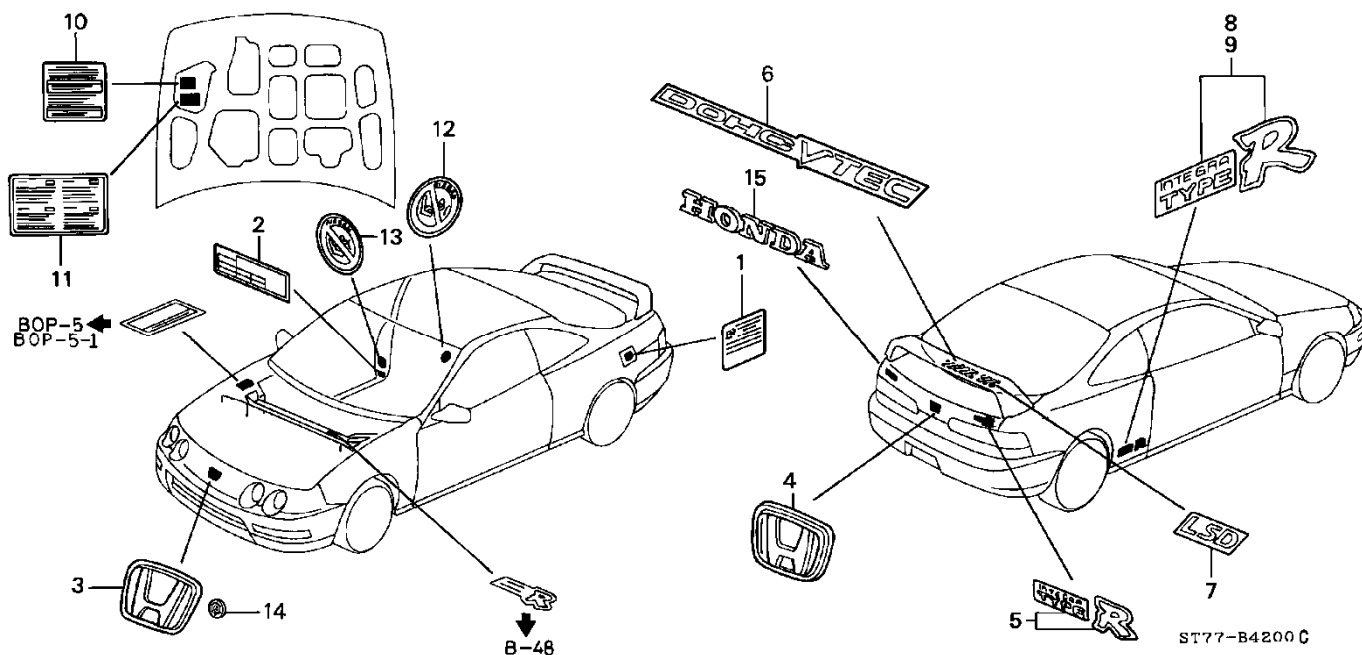


Refnr	Part Number	Part Description	Unit Qty	
1	17669-ST7-G00	LABEL, FUEL FILLER CAUTION (PREMIUM UNLEADED GASOLINE)	001	
1	17669-SH3-P30	LABEL, FUEL FILLER CAUTION (PORTUGAL)	(1)	('99) (LH)
2	42760-ST7-G00	PLATE, TIRE PRESSURE CAUTION	001	
3	75700-ST7-E00	EMBLEM, FR. CENTER (H)	001	
4	75701-ST7-Z00	EMBLEM, RR. CENTER (H)	001	
5	75717-ST7-G01ZA	STICKER, RR. (TYPE R) *TYPE03*	001	
5	75717-ST7-G01ZB	STICKER, RR. (TYPE R) *TYPE04*	001	
6	75717-ST7-003ZB	STICKER, RR. (DOHC VTEC) *TYPEVG*	001	
7	75717-ST7-941ZA	STICKER, RR. (LSD) *TYPEVG*	001	
8	75773-ST7-Z01ZA	STICKER, R. SIDE (TYPE R) *TYPE03*	001	
8	75773-ST7-Z01ZB	STICKER, R. SIDE (TYPE R) *TYPE04*	001	
9	75783-ST7-Z01ZA	STICKER, L. SIDE (TYPE R) *TYPE03*	001	
9	75783-ST7-Z01ZB	STICKER, L. SIDE (TYPE R) *TYPE04*	001	
10	77871-S04-M80	LABEL, SRS CAUTION (PORTUGAL)	(1)	('99) (LH)
10	77871-SM4-C70	LABEL, CAUTION (SRS)	001	(RH)
11	77875-SP0-G80	LABEL, SRS CAUTION	001	('98) (LH) (SRS) (ABS)
11	77875-S84-G80	LABEL, SRS CAUTION	001	('98-'00) (LH) (SRS) (ABS)
12	78527-S04-E80	LABEL, SRS CAUTION (CHILD SEAT)	001	(SRS) (ABS)
13	78527-S04-G80	LABEL, SRS CAUTION (CHILD SEAT)	001	(SRS) (ABS)
14	90190-SB2-000	NUT, PUSH, 4MM	002	
15	75711-S84-E00	EMBLEM, RR. (HONDA)	001	

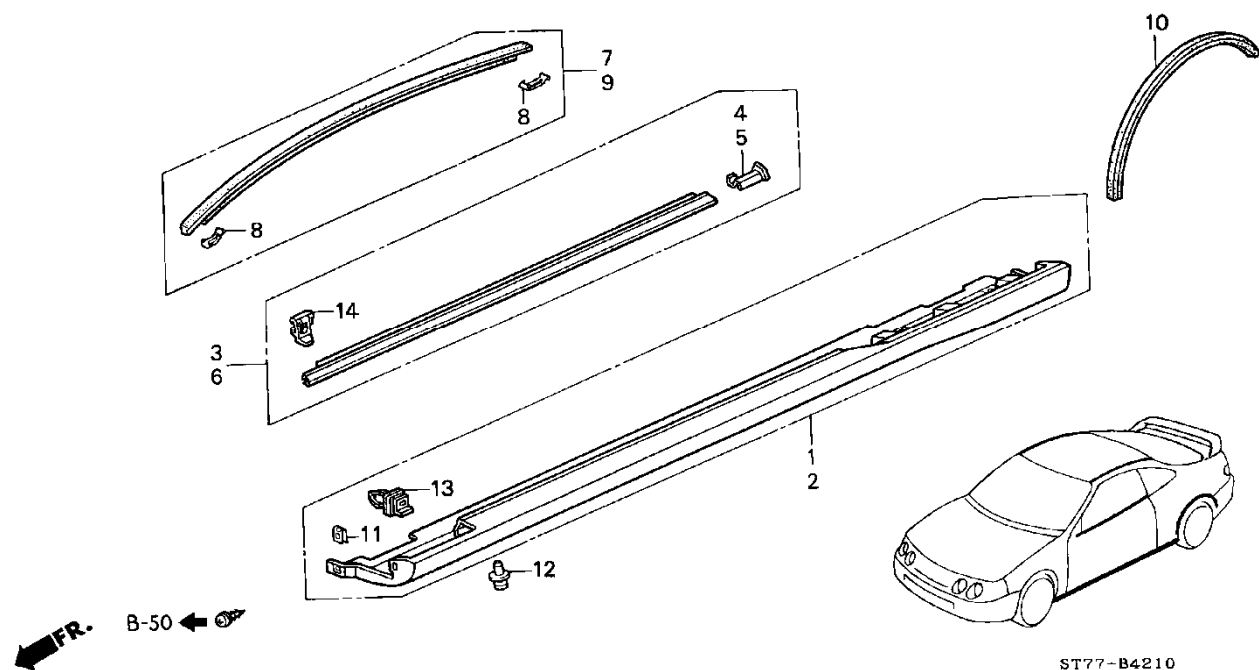


ST77-B4210

Refnr	Part Number	Part Description	Unit Qty
1	71800-ST7-Z00ZA	GARNISH ASSY., R. SIDE SILL *NH0*	001
1	71800-ST7-Z00ZC	GARNISH ASSY., R. SIDE SILL *R81*	001
1	71800-ST7-Z00ZG	GARNISH ASSY., R. SIDE SILL *NH592P*	001
1	71800-ST7-Z00ZN	GARNISH ASSY., R. SIDE SILL *Y56*	001 ('00) (LH)
2	71850-ST7-Z00ZA	GARNISH ASSY., L. SIDE SILL *NH0*	001
2	71850-ST7-Z00ZC	GARNISH ASSY., L. SIDE SILL *R81*	001
2	71850-ST7-Z00ZG	GARNISH ASSY., L. SIDE SILL *NH592P*	001
2	71850-ST7-Z00ZN	GARNISH ASSY., L. SIDE SILL *Y56*	001 ('00) (LH)
3	72410-ST7-003	MOLDING ASSY., R. FR. DOOR	001
4	72412-SS0-003	CAP, R. RR. DOOR MOLDING END	001
5	72417-SS0-003	CAP, L. RR. DOOR MOLDING END	001
6	72450-ST7-003	MOLDING ASSY., L. FR. DOOR	001
7	74306-ST7-003	MOLDING ASSY., R. ROOF	001
8	74308-ST0-003	BRACKET, ROOF MOLDING	004
9	74316-ST7-003	MOLDING ASSY., L. ROOF	001
10	74430-ST7-A00	PROTECTOR, RR. WHEEL ARCH	002
11	90331-SD5-003	NUT, SPRING, 5MM	002
12	90688-SB0-013	CLIP B, AIRSCOOP	012
13	91513-SM4-000	CLIP, SIDE SILL UPPER GARNISH	014
14	91523-ST7-003	CLIP, DOOR MOLDING	012

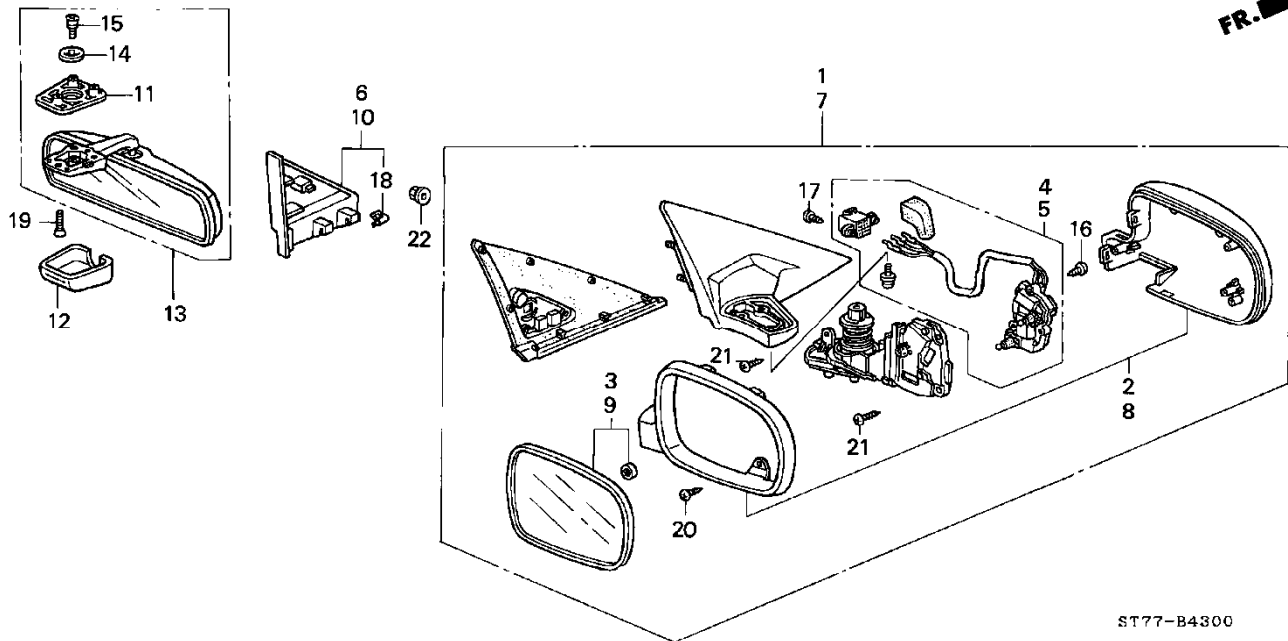

ST77-B4300


Refnr	Part Number	Part Description	Unit	Qty
1	76200-ST7-G22ZA	MIRROR ASSY., R. DOOR (R.C.) *NH0*	001	(LH)
1	76200-ST7-G22ZB	MIRROR ASSY., R. DOOR (R.C.) *NH592P*	001	(LH)
1	76200-ST7-G22ZC	MIRROR ASSY., R. DOOR (R.C.) *R81*	001	(LH)
1	76200-ST7-G22ZD	MIRROR ASSY., R. DOOR (R.C.) *Y56*	001	('00) (LH)
1	76200-ST7-J27ZD	MIRROR ASSY., R. DOOR (R.C.) *R81*	001	(RH)
1	76200-ST7-J27ZL	MIRROR ASSY., R. DOOR (R.C.) *NH0*	001	(RH)
1	76200-ST7-J27ZM	MIRROR ASSY., R. DOOR (R.C.) *NH592P*	001	(RH)
2	76201-S04-Y24YB	COVER SET, R. *NH0*	001	
2	76201-S04-Y24YK	COVER SET, R. *NH592P*	001	
2	76201-S04-Y24ZF	COVER SET, R. *R81*	001	
2	76201-S04-Y24D4	COVER SET, R. *Y56*	001	('00) (LH)
3	76203-S04-J01	MIRROR, R. (1400R)	001	
4	76210-S04-D14	ACTUATOR COMP., R.	001	
5	76215-S04-D14	ACTUATOR COMP., L.	001	
6	76220-ST7-000ZA	GARNISH, R. DOOR MIRROR *NH1L*	001	
7	76250-ST7-G22ZA	MIRROR ASSY., L. DOOR (R.C.) *NH0*	001	(LH)
7	76250-ST7-G22ZB	MIRROR ASSY., L. DOOR (R.C.) *NH592P*	001	(LH)
7	76250-ST7-G22ZC	MIRROR ASSY., L. DOOR (R.C.) *R81*	001	(LH)
7	76250-ST7-G22ZD	MIRROR ASSY., L. DOOR (R.C.) *Y56*	001	('00) (LH)
7	76250-ST7-J27ZG	MIRROR ASSY., L. DOOR (R.C.) *R81*	001	(RH)
7	76250-ST7-J27ZM	MIRROR ASSY., L. DOOR (R.C.) *NH0*	001	(RH)
7	76250-ST7-J27ZQ	MIRROR ASSY., L. DOOR (R.C.) *NH592P*	001	(RH)
8	76251-S04-Y24YB	COVER SET, L. *NH0*	001	
8	76251-S04-Y24YK	COVER SET, L. *NH592P*	001	
8	76251-S04-Y24ZF	COVER SET, L. *R81*	001	
8	76251-S04-Y24D3	COVER SET, L. *Y56*	001	('00) (LH)
9	76253-S04-J01	MIRROR, L. (1400R)	001	
10	76270-ST7-000ZA	GARNISH, L. DOOR MIRROR *NH1L*	001	
11	76401-SH3-901	BASE, STAY (MATSUYAMA)	001	
12	76408-SH3-901ZJ	COVER, STAY (MATSUYAMA) *NH180L*	001	
13	76430-SH4-004ZH	MIRROR & STAY COMP., RR. VIEW (DAY/NIGHT) *NH167L*	001	
14	88147-SA5-003	WASHER, TOOTHED (MATSUYAMA)	001	
15	88148-SE0-003	BOLT, LOCK, 6X7 (MATSUYAMA)	001	
16	90144-ST7-006	SCREW, TAPPING, 3X8	006	
17	90144-S04-006	SCREW, TAPPING PAN, 3X14	004	
18	90615-SK7-003	CLIP, MIRROR GARNISH	002	
19	93600-05020-0A	SCREW, FLAT, 5X20	003	
20	93903-24280	SCREW, TAPPING, 4X10	008	
21	93903-24420	SCREW, TAPPING, 4X16	006	
22	94050-05080	NUT, FLANGE, 5MM	006	

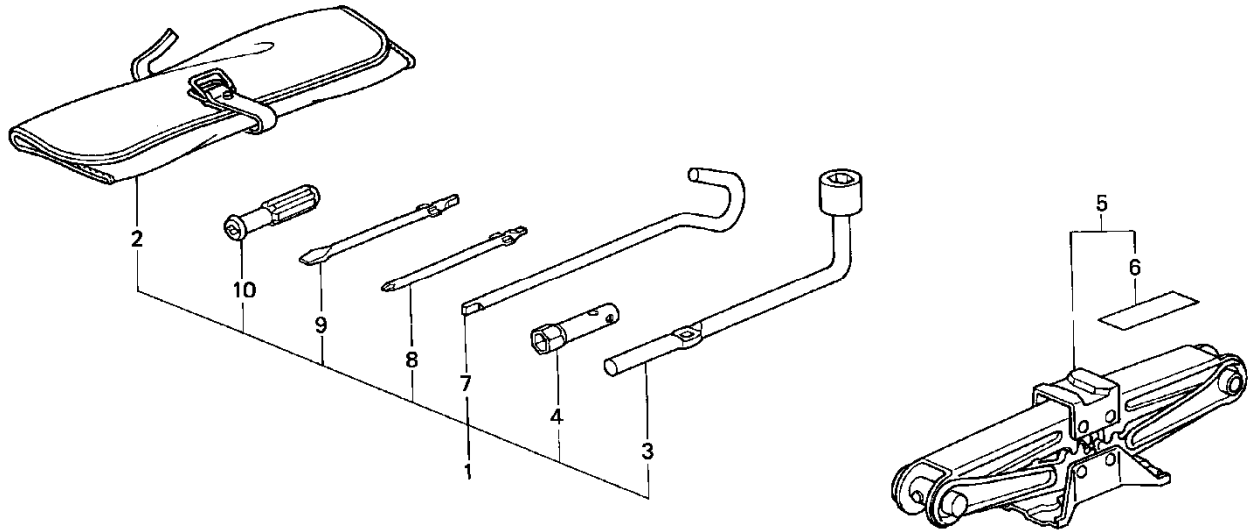

ST77-B4400

Refnr	Part Number	Part Description	Unit Qty
1	89000-SR3-952	TOOL SET	001
2	89101-SW5-003	BAG, TOOL	001
3	89211-S05-003	WRENCH, WHEEL	001
4	89217-355-000	WRENCH, BOX (10MM)	001
5	89310-S30-003	JACK ASSY., PANTOGRAPH	001
6	89311-SV4-003	PLATE, JACK CAUTION	001
7	89320-S05-003	BAR, JACK	001
8	99003-10000	DRIVER 1, PLUS SCREW (NO.2)	001
9	99003-30000	DRIVER 3, MINUS SCREW (NO.2)	001
10	99003-50000	GRIP, SCREW DRIVER	001


Block B-46 BUMPERS

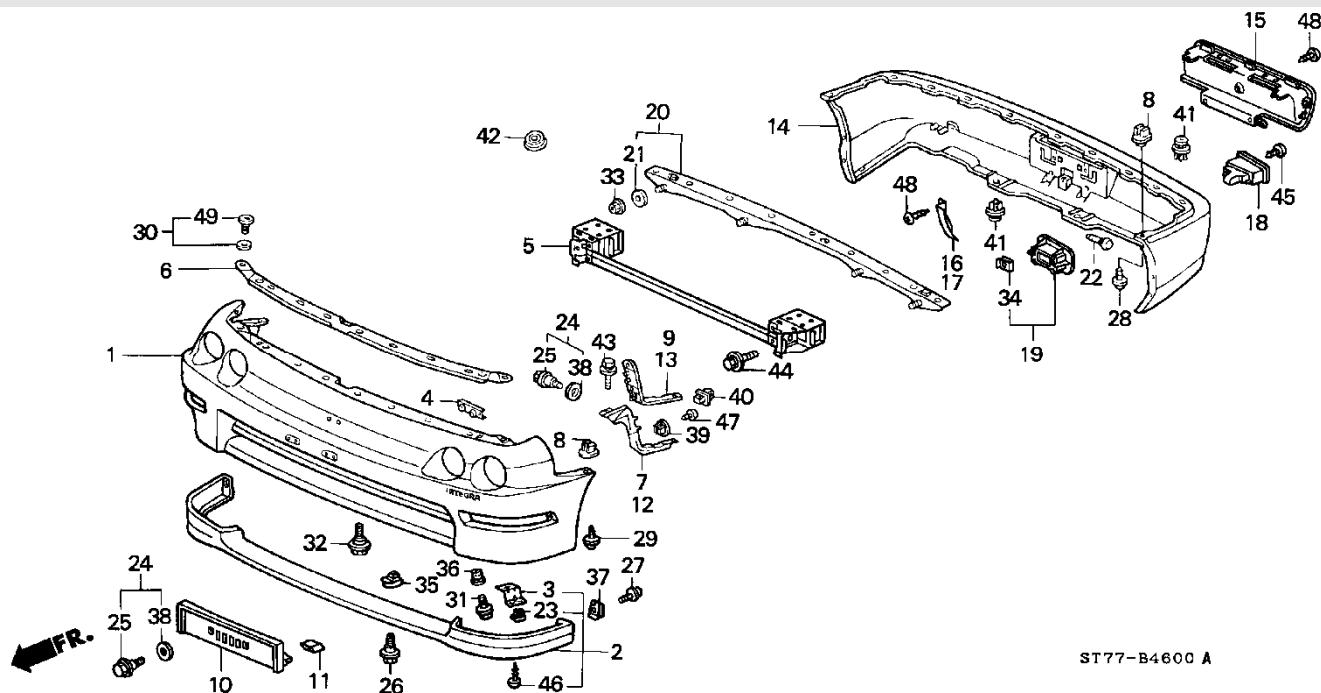

Refnr	Part Number	Part Description	Unit Qty
1	71101-ST7-R00ZZ	FACE, FR. BUMPER	001
2	71110-ST7-R01ZA	SPOILER, FR. AIR *NH0*	001
2	71110-ST7-R01ZB	SPOILER, FR. AIR *NH592P*	001
2	71110-ST7-R01ZC	SPOILER, FR. AIR *R81*	001
2	71110-ST7-R01ZD	SPOILER, FR. AIR *Y56*	001 ('00) (LH)
3	71112-ST7-R01	BRACKET A, FR. AIR SPOILER	002
4	71113-SH2-000	NUT, LICENSE PLATE	002
5	71138-ST7-Z00ZZ	EXTENSION COMP., FR. BUMPER	001
6	71142-ST7-000	STIFFENER, FR. BUMPER UPPER	001
7	71143-ST7-000	STIFFENER, R. FR. BUMPER SIDE	001
8	71144-SR3-013	GROMMET, BUMPER SIDE	004
9	71144-ST7-000	SEAL, R. FR. BUMPER SIDE	001
10	71180-SZ3-G02	BASE, FR. LICENSE PLATE	001
11	71181-ST7-G00	COVER, LICENSE BASE	002
12	71193-ST7-000	STIFFENER, L. FR. BUMPER SIDE	001
13	71194-ST7-000	SEAL, L. FR. BUMPER SIDE	001
14	71501-ST7-E00ZZ	FACE, RR. BUMPER	001 (RH)
14	71501-ST7-G00ZZ	FACE, RR. BUMPER	001 (LH)
15	71505-ST7-G00ZA	GARNISH, RR. LICENSE *NH0*	001
15	71505-ST7-G00ZB	GARNISH, RR. LICENSE *NH592P*	001
15	71505-ST7-G00ZC	GARNISH, RR. LICENSE *R81*	001
15	71505-ST7-G00ZD	GARNISH, RR. LICENSE *Y56*	001 ('00) (LH)
16	71506-ST7-G00	BRACKET, R. RR. LICENSE	001
17	71507-ST7-G00	BRACKET, L. RR. LICENSE	001
18	71511-ST7-E00	GARNISH, R. RR. FOG OUTSIDE	001 (RH)
18	71511-ST7-G00	GARNISH, L. RR. FOG OUTSIDE	001 (LH)
19	71512-ST7-E00	GARNISH, R. RR. FOG INSIDE	001 (RH)
19	71512-ST7-G00	GARNISH, L. RR. FOG INSIDE	001 (LH)
20	71540-ST7-000	BEAM COMP., RR. BUMPER UPPER	001
21	71544-SR2-000	SEAL, RR. UPPER BEAM	004
22	74177-ST7-000	CUSHION, BUMPER SIDE	004
23	75522-611-000	GROMMET, SCREW, 4MM	004
24	90101-SE0-010	BOLT ASSY. B, BUMPER	004
25	90109-SE0-003	BOLT B, BUMPER	004
26	90111-SM4-003	BOLT, BUMPER	006
27	90114-ST7-003	SCREW-WASHER, 5X20	004
28	90121-SA7-000	SCREW, TAPPING, 5X16	002 ('98-'99)
28	90109-SS0-000	SCREW, TAPPING, 5X20	002 ('00)
29	90126-SR4-000	SCREW-WASHER, 5X16	002
30	90130-SR2-003	BOLT ASSY., BUMPER	009
31	90139-SM4-003	BOLT-WASHER, 5X20	002
32	90149-SA0-003	BOLT, BUMPER	002
33	90222-SB4-000	NUT-WASHER, 6MM	004


34	90303-SA5-003	NUT, FR. COMBINATION LIGHT	002
35	90305-SH3-000	NUT, AIR SPOILER CLIP	006
36	90307-SD5-J01	NUT, MOTOR BRACKET, (5MM)	002
37	90308-SB2-013	NUT, SUSPENSION, 5MM	002
38	90540-SA7-000	WASHER, BUMPER	004
39	90661-SJ8-000	GROMMET, SCREW, 5MM	002
40	90661-ST7-003	CLIP, FR. BUMPER SIDE	004
41	91503-SZ3-003	CLIP A, BUMPER	011
42	91616-SS1-000	CAP, VALVE MAINTENANCE HOLE, 40MM	002
43	93405-06016-04	BOLT-WASHER, 6X16	002
44	93405-08025-08	BOLT-WASHER, 8X25	004
45	93901-243G0	SCREW, TAPPING, 4X12	001
46	93903-14480	SCREW, TAPPING, 4X16	004
47	93903-15380	SCREW, TAPPING, 5X16	002
48	93913-154G0	SCREW, TAPPING, 5X16 (PO)	007
49	90104-SR2-003	BOLT C, BUMPER	009

Block B-47 ENGINE MOUNTS

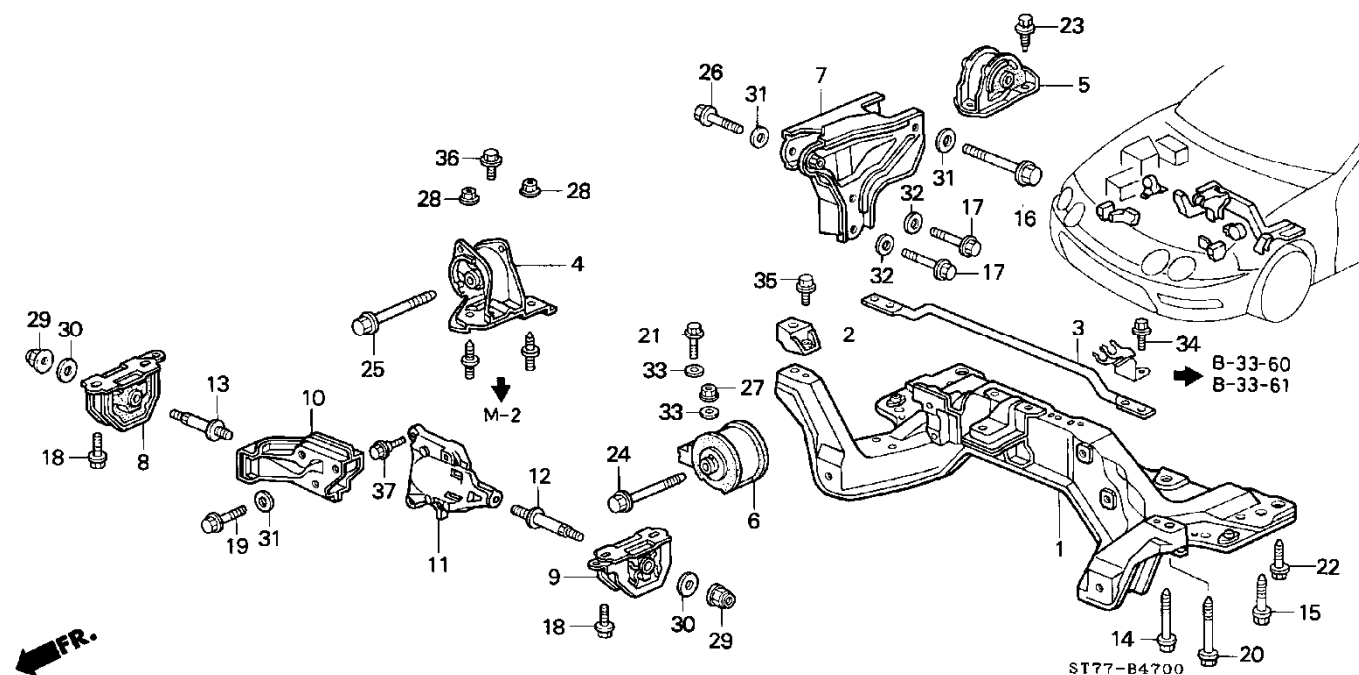


Refnr	Part Number	Part Description	Unit Qty
1	50200-SR3-951	BEAM, RR. (POWER STEERING)	001 (RH)
1	50200-SR3-H50	BEAM, RR. (POWER STEERING)	001 (LH)
2	50203-SR3-010	COLLAR, RR. BEAM	002
3	50205-ST7-000	ROD, RR. BEAM PERFORMANCE	001
4	50805-SR3-010	RUBBER, TRANSMISSION MOUNTING (MT)	001
5	50810-ST7-Z00	INSULATOR, RR. ENGINE MOUNTING RUBBER (MT)	001
6	50820-ST7-003	RUBBER ASSY., ENGINE SIDE MOUNTING (HYD)	001
7	50827-ST7-000	BRACKET, ENGINE RR. MOUNTING	001
8	50841-ST7-Z00	RUBBER, R. FR. STOPPER INSULATOR (MT)	001
9	50842-ST7-Z00	RUBBER, L. FR. STOPPER INSULATOR (MT)	001
10	50843-S04-N10	BRACKET, R. FR. STOPPER (MT)	001
11	50844-P73-000	BRACKET, L. FR. STOPPER	001
12	90131-ST7-000	BOLT, L. FR. STOPPER	001
13	90133-S04-000	BOLT, R. FR. STOPPER	001
14	90161-S04-000	BOLT, FLANGE, 14X100	002
15	90162-SR3-000	BOLT, FLANGE, 14X60	002
16	90165-SM4-020	BOLT, FLANGE, 12X101	001 ('98)
16	90165-S04-000	BOLT, FLANGE, 12X97	001 ('99-'00)
17	90165-ST7-000	BOLT, FLANGE, 14X67	002
18	90166-SR3-000	BOLT, FLANGE, 10X30	004
19	90166-ST7-000	BOLT, FLANGE, 12X64	003
20	90167-SR3-000	BOLT, FLANGE, 14X120	002
21	90167-ST7-000	BOLT, FLANGE, 10X60	001
22	90168-SR3-000	BOLT, FLANGE, 14X35	002
23	90176-S04-000	BOLT-WASHER, 10X32.5	003
24	90182-SR3-000	BOLT, FLANGE, 12X112	001
25	90183-SR3-000	BOLT, FLANGE, 12X100	001
26	90186-SL4-000	BOLT, FLANGE, 12X67	001 ('98-'99)
26	90190-SR3-000	BOLT, FLANGE, 12X64	001 ('00)
27	90365-ST7-000	NUT, FLANGE, 10MM	002
28	90371-SR3-000	NUT, FLANGE, 12MM	002
29	90372-SR3-003	NUT, FLANGE, 12MM	002
30	90504-SR3-010	WASHER, FR. STOPPER	002
31	90505-SB2-000	WASHER, SIDE MOUNTING	005
32	90505-SR3-000	WASHER, RR. BRACKET, 14MM	002
33	91771-SH3-000	WASHER, PLAIN, 10MM	003
34	93401-10025-08	BOLT-WASHER, 10X25	004
35	95701-06020-08	BOLT, FLANGE, 6X20	002
36	95701-12020-08	BOLT, FLANGE, 12X20	001
37	95801-10045-08	BOLT, FLANGE, 10X45	004

Block B-48 FRONT TOWER BAR/ PERFORMANCE ROD

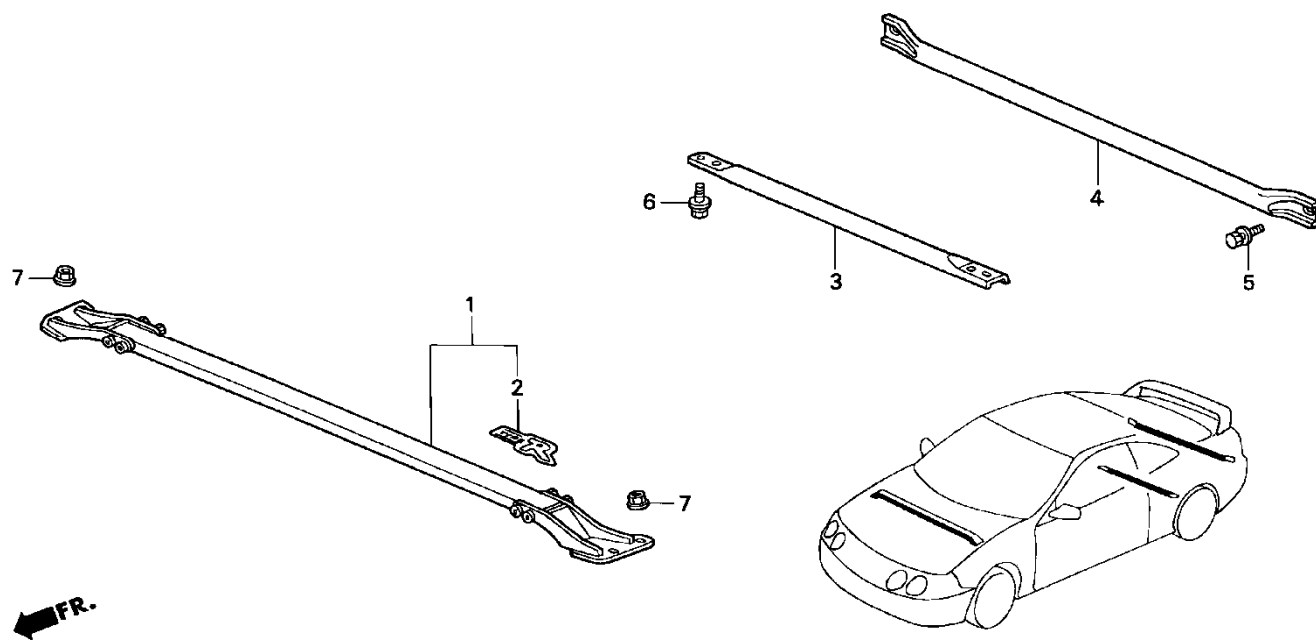

Refnr	Part Number	Part Description	Unit Qty
1	74300-ST7-Z00	BAR, FR. TOWER	001
2	74304-ST7-Z00	STICKER, FR. TOWER BAR	001
3	74350-ST7-R00	ROD, RR. LOWER ARM PERFORMANCE	001
4	74360-ST7-G00	ROD, RR. FRAME END PERFORMANCE	001
5	93407-08020-07	BOLT-WASHER, 8X20	002
6	93407-08020-08	BOLT-WASHER, 8X20	004
7	94050-08070	NUT, FLANGE, 8MM	004


Block B-49 FRONT BULKHEAD

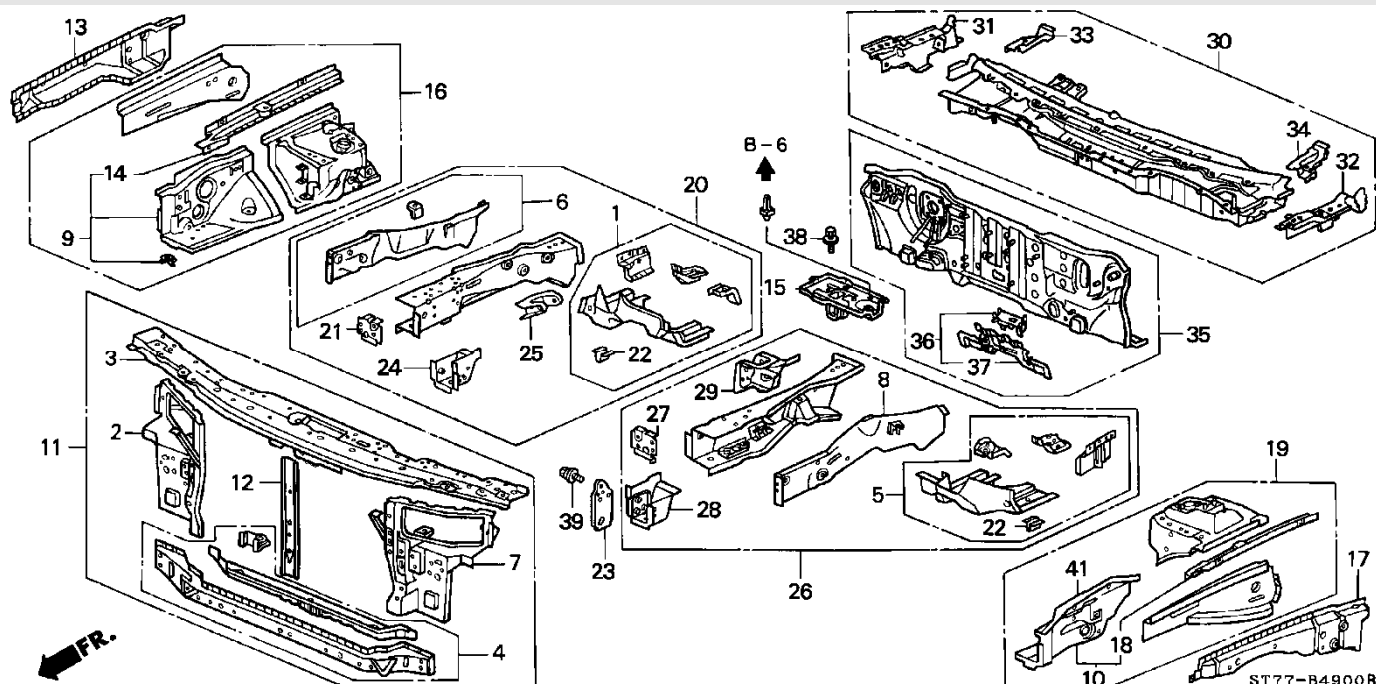

Refnr	Part Number	Part Description	Unit Qty
1	04600-ST7-A00ZZ	OUTRIGGER SET, R. FR. SIDE	001
2	04601-ST8-A00ZZ	PANEL SET, R. FR. BULKHEAD	001
3	04602-ST7-300ZZ	MEMBER SET, FR. BULKHEAD UPPER	001
4	04603-ST7-310ZZ	CROSSMEMBER SET, FR. LOWER	001
5	04605-ST7-A00ZZ	OUTRIGGER SET, L. FR. SIDE	001 ('98-'99)
5	04605-ST7-A02ZZ	OUTRIGGER SET, L. FR. SIDE	001 ('00)
6	04610-ST7-A00ZZ	PLATE SET, R. FR. SIDE	001
7	04611-ST8-A00ZZ	PANEL SET, L. FR. BULKHEAD	001
8	04615-ST7-A00ZZ	PLATE SET, L. FR. SIDE	001 ('98-'99)
8	04615-ST7-A01ZZ	PLATE SET, L. FR. SIDE	001 ('00)
9	04621-ST7-R01ZZ	WHEELHOUSE SET, R. FR.	001
10	04671-ST7-R00ZZ	WHEELHOUSE SET, L. FR.	001
11	60400-ST8-A01ZZ	BULKHEAD COMP., FR.	001
12	60434-ST7-300ZZ	STAY, BULKHEAD CENTER	001
13	60614-ST7-900ZZ	MEMBER, R. WHEELHOUSE UPPER	001
14	60618-ST7-300ZZ	EXTENSION, R. FR. WHEELHOUSE UPPER	001
15	60630-SR3-010ZZ	BASE COMP., BATTERY SETTING	001
16	60650-ST7-R01ZZ	HOUSING COMP., R. FR. SHOCK ABSORBER	001
17	60714-ST7-900ZZ	MEMBER, L. WHEELHOUSE UPPER	001
18	60718-ST7-300ZZ	EXTENSION, L. FR. WHEELHOUSE UPPER	001
19	60750-ST7-R01ZZ	HOUSING COMP., L. FR. SHOCK ABSORBER	001
20	60810-ST7-A01ZZ	FRAME COMP., R. FR. SIDE	001 (LH)
20	60810-ST7-Q01ZZ	FRAME COMP., R. FR. SIDE	001 (RH)
21	60813-SR3-A00ZZ	END, R. FR. SIDE FRAME	001
22	60817-SR3-300ZZ	BRACKET, JACK UP	002
23	60821-SR3-J00ZZ	HOOK, TIE DOWN	002
24	60828-ST7-300ZZ	BRACKET, R. FR. TIE DOWN	001
25	60831-SR3-300ZZ	BRACKET, TRANSMISSION MOUNT	001
26	60910-ST7-A00ZZ	FRAME COMP., L. FR. SIDE	001 ('99) (LH)
26	60910-ST7-A02ZZ	FRAME COMP., L. FR. SIDE	001 ('99-'00) (LH)
26	60910-ST7-Q00ZZ	FRAME COMP., L. FR. SIDE	001 ('98) (RH)
26	60910-ST7-Q02ZZ	FRAME COMP., L. FR. SIDE	001 ('99-'00) (RH)
27	60913-SR3-A00ZZ	END, L. FR. SIDE FRAME	001
28	60928-ST7-300ZZ	BRACKET, L. FR. TIE DOWN	001
29	60930-SR3-300ZZ	BRACKET COMP., ENGINE SUPPORT	001
30	61100-ST7-G00ZZ	DASHBOARD COMP., UPPER	001 (LH)
30	61100-ST7-Q03ZZ	DASHBOARD COMP., UPPER	001 (RH) (ABS)
30	61100-ST7-Q12ZZ	DASHBOARD COMP., UPPER	001 (RH) (SRS) (ABS)
31	61120-ST7-A00ZZ	MEMBER COMP., R. DASHBOARD UPPER SIDE	001 (LH)
31	61120-ST7-Q00ZZ	MEMBER COMP., R. DASHBOARD UPPER SIDE	001 (RH)
32	61130-ST7-A00ZZ	MEMBER COMP., L. DASHBOARD UPPER SIDE	001 (LH)
32	61130-ST7-Q00ZZ	MEMBER COMP., L. DASHBOARD UPPER SIDE	001 (RH)
33	61178-SR3-300ZZ	EXTENSION, R. DASHBOARD UPPER SIDE	001


34	61179-SR3-300ZZ	EXTENSION, L. DASHBOARD UPPER SIDE	001
35	61500-ST7-E00ZZ	DASHBOARD COMP., LOWER	001 ('98-'99) (RH) (SRS) (ABS)
35	61500-ST7-E01ZZ	DASHBOARD COMP., LOWER	001 ('00) (RH) (SRS) (ABS)
35	61500-ST7-E10ZZ	DASHBOARD COMP., LOWER	001 ('98-'99) (RH) (ABS)
35	61500-ST7-E11ZZ	DASHBOARD COMP., LOWER	001 ('00) (RH) (ABS)
35	61500-ST7-G00ZZ	DASHBOARD COMP., LOWER	001 ('98-'99) (LH) (SRS) (ABS)
35	61500-ST7-G01ZZ	DASHBOARD COMP., LOWER	001 ('00) (LH) (SRS) (ABS)
35	61500-ST7-G10ZZ	DASHBOARD COMP., LOWER	001 ('98-'99) (LH) (ABS)
35	61500-ST7-G11ZZ	DASHBOARD COMP., LOWER	001 ('00) (LH) (ABS)
36	61550-SR3-A00ZZ	CROSSMEMBER COMP., DASHBOARD LOWER	001 ('98-'99) (LH) (SRS) (ABS)
36	61550-S04-A00ZZ	CROSSMEMBER COMP., DASHBOARD LOWER	001 ('00) (LH) (SRS) (ABS)
36	61550-SR3-N00ZZ	CROSSMEMBER COMP., DASHBOARD LOWER	001 (RH) (SRS) (ABS)
37	61551-SR3-300ZZ	CROSSMEMBER, DASHBOARD LOWER	001 (RH) (ABS)
37	61551-SR3-G00ZZ	CROSSMEMBER, DASHBOARD LOWER	001 ('98-'99) (LH) (ABS)
38	90105-634-000	BOLT-WASHER, 8X20	003
39	93405-10025-08	BOLT-WASHER, 10X25	006
41	60711-ST7-320ZZ	WHEELHOUSE, L. FR.	001

Block B-49-10 INNER PANELS

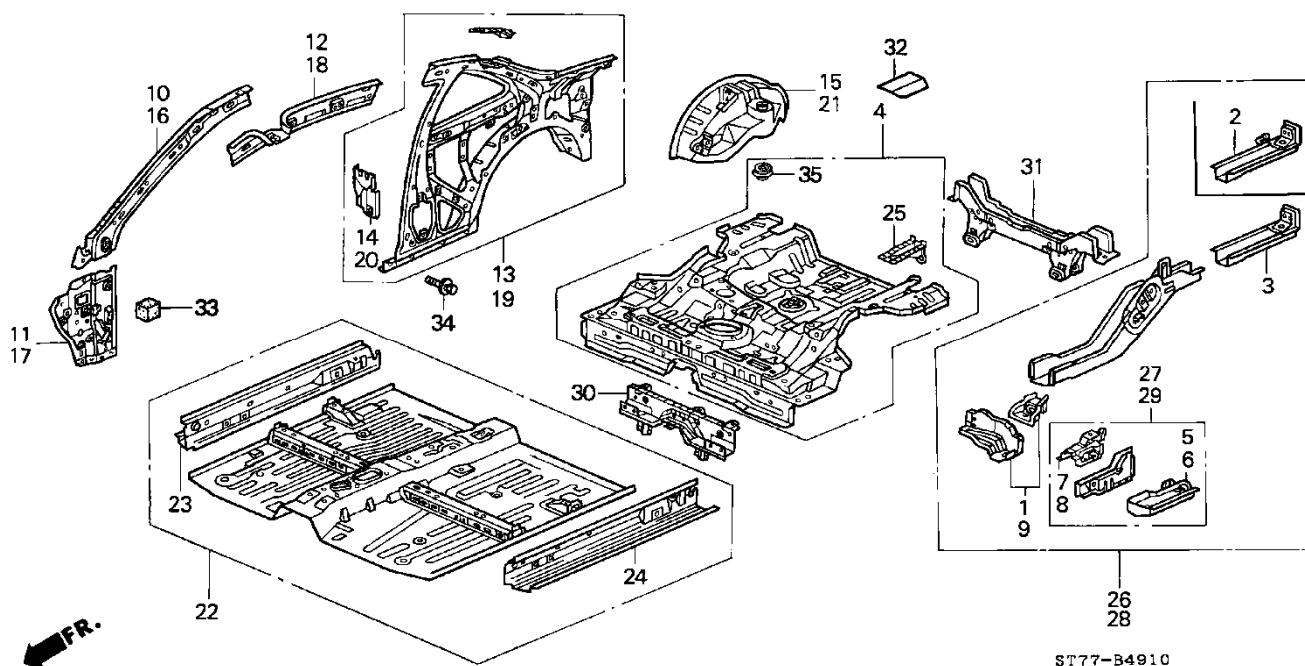


Refnr	Part Number	Part Description	Unit Qty
1	04650-SR3-A01ZZ	OUTRIGGER SET, R. MIDDLE CROSS MEMBER	001
2	04653-ST7-Z00ZZ	FRAME B SET, R. RR.	001
3	04654-ST7-Z00ZZ	FRAME B SET, L. RR.	001
4	04655-ST7-307ZZ	PANEL SET, RR. FLOOR	001 ('98-'99)
4	04655-ST7-G00ZZ	PANEL SET, RR. FLOOR	001 ('00)
5	04656-SR3-300ZZ	PANEL SET, R. SIDE SILL EXTENSION	001
6	04657-SR3-300ZZ	PANEL SET, L. SIDE SILL EXTENSION	001
7	04658-ST7-300ZZ	PANEL SET, R. RR. FRAME OUTRIGGER	001
8	04659-ST7-300ZZ	PANEL SET, L. RR. FRAME OUTRIGGER	001
9	04660-SR3-A01ZZ	OUTRIGGER SET, L. MIDDLE CROSS MEMBER	001
10	64121-ST7-310ZZ	PILLAR, R. FR. INNER UPPER	001
11	64130-ST7-300ZZ	PILLAR COMP., R. FR. INNER LOWER	001 (RH)
11	64130-ST7-A01ZZ	PILLAR COMP., R. FR. INNER LOWER	001 (LH)
12	64211-ST7-300ZZ	RAIL, R. ROOF SIDE	001
13	64300-ST7-Z02ZZ	PANEL COMP., R. RR. INSIDE	001
14	64321-ST7-Z00ZZ	EXTENSION, R. RR. WHEEL ARCH	001
15	64330-ST7-G00ZZ	WHEELHOUSE COMP., R. RR.	001
16	64521-ST7-310ZZ	PILLAR, L. FR. INNER UPPER	001
17	64530-ST7-300ZZ	PILLAR COMP., L. FR. INNER LOWER	001 (RH)
17	64530-ST7-A00ZZ	PILLAR COMP., L. FR. INNER LOWER	001 (LH)
18	64611-ST7-300ZZ	RAIL, L. ROOF SIDE	001
19	64700-ST7-Z02ZZ	PANEL COMP., L. RR. INSIDE	001
20	64721-ST7-Z00ZZ	EXTENSION, L. RR. WHEEL ARCH	001
21	64730-ST7-G00ZZ	WHEELHOUSE COMP., L. RR.	001
22	65100-ST7-A01ZZ	FLOOR COMP., FR.	001 ('98-'99)
22	65100-ST7-A02ZZ	FLOOR COMP., FR.	001 ('00)
23	65140-ST7-A00ZZ	SILL, R. FR. INSIDE	001
24	65190-ST7-A00ZZ	SILL, L. FR. INSIDE	001
25	65513-SR4-300ZZ	STIFFENER, RR. JACK UP	001
26	65610-ST7-R01ZZ	FRAME COMP., R. RR.	001
27	65640-ST7-A01ZZ	EXTENSION COMP., R. SIDE SILL	001
28	65660-ST7-R01ZZ	FRAME COMP., L. RR.	001 ('98-'99)
28	65660-ST7-R02ZZ	FRAME COMP., L. RR.	001 ('00)
29	65690-ST7-A01ZZ	EXTENSION COMP., L. SIDE SILL	001
30	65700-ST7-A01ZZ	CROSSMEMBER COMP., MIDDLE FLOOR	001 ('98-'99)
30	65700-SR3-A00ZZ	CROSSMEMBER COMP., MIDDLE FLOOR	001 ('00)
31	65750-ST7-R00ZZ	CROSSMEMBER COMP., RR. FLOOR	001
32	74711-ST7-G00	SPACER, SPARE TIRE	001
33	91616-ST7-000	BLOCK, FR. PILLAR INNER LOWER	002
34	93404-08025-08	BOLT-WASHER, 8X25	002
35	95550-18000	PLUG, BLIND, 18MM	002

Block B-49-20 OUTER PANELS

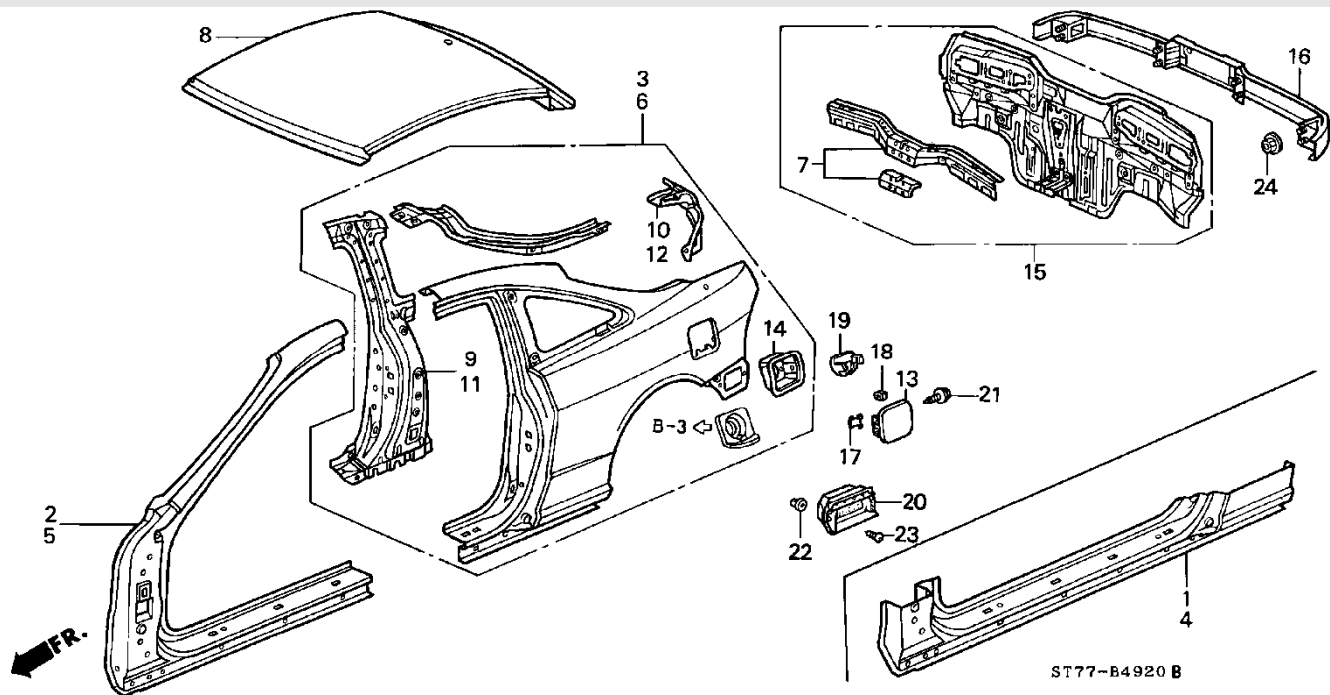

Refnr	Part Number	Part Description	Unit Qty
1	04631-ST7-310ZZ	PANEL, R. SIDE SILL	001
2	04635-ST7-Q01ZZ	PANEL SET, R. FR. OUTSIDE	001
3	04636-ST7-Z03ZZ	PANEL SET, R. RR. OUTSIDE	001
4	04641-ST7-310ZZ	PANEL, L. SIDE SILL	001
5	04645-ST7-Q01ZZ	PANEL SET, L. FR. OUTSIDE	001
6	04646-ST7-Z03ZZ	PANEL SET, L. RR. OUTSIDE	001
7	04664-ST7-310ZZ	STIFFENER SET, RR. PANEL UPPER	001
8	62100-ST7-G00ZZ	PANEL COMP., ROOF	001
9	63210-ST7-310ZZ	STIFFENER COMP., R. CENTER PILLAR	001
10	63322-ST7-Z00ZZ	GUTTER, R. RR. PILLAR LOWER	001
11	63610-ST7-310ZZ	STIFFENER COMP., L. CENTER PILLAR	001
12	63722-ST7-Z00ZZ	GUTTER, L. RR. PILLAR LOWER	001
13	63910-ST7-000ZZ	LID COMP., FUEL FILLER	001
14	63915-ST7-310ZZ	ADAPTER, FUEL CAP	001
15	66100-ST7-G01ZZ	PANEL COMP., RR.	001
16	66130-ST7-020ZZ	SKIRT COMP., RR. PANEL UPPER	001
17	70494-SE0-000	SPRING, FUEL LID OPENER	001
18	74422-SH3-000	CUSHION, FUEL FILLER LID	002
19	74423-SP0-000	HOLDER, FUEL CAP	001
20	75450-SM4-000	OUTLET ASSY., RR. AIR	001
21	90147-634-003	BOLT, FENDER, 6X18	002
22	90664-SB3-003	GROMMET, SCREW, 5MM	002
23	93903-253J0	SCREW, TAPPING, 5X16	002
24	94071-06080	NUT-WASHER, 6MM	008


Block B-50 FRONT FENDERS

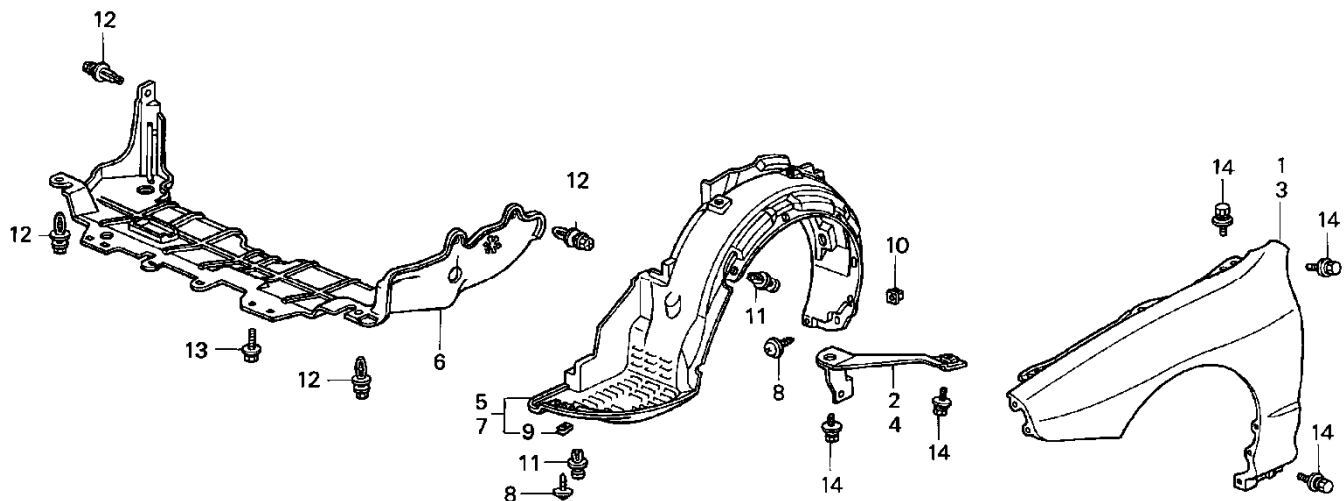

ST77-B5000


Refnr	Part Number	Part Description	Unit Qty
1	60211-ST7-010ZZ	PANEL, R. FR. FENDER	001
2	60212-ST7-000ZZ	STAY, R. FR. FENDER	001
3	60261-ST7-010ZZ	PANEL, L. FR. FENDER	001
4	60262-ST7-000ZZ	STAY, L. FR. FENDER	001
5	74101-ST7-A00	FENDER, R. FR. INNER	001
6	74111-ST7-A02	SHIELD, FR. SPLASH	001
7	74151-ST7-A00	FENDER, L. FR. INNER	001
8	90126-SR4-000	SCREW-WASHER, 5X16	014
9	90308-SB2-013	NUT, SUSPENSION, 5MM	004
10	90682-SB0-003	GROMMET, SCREW, 5MM	008
11	91501-S04-003	CLIP, INNER FENDER	014
12	91516-SK7-013	CLIP, UNDER COVER	005
13	93405-06016-04	BOLT-WASHER, 6X16	003
14	93405-06016-08	BOLT-WASHER, 6X16	016

Block B-51 HOOD (LH)

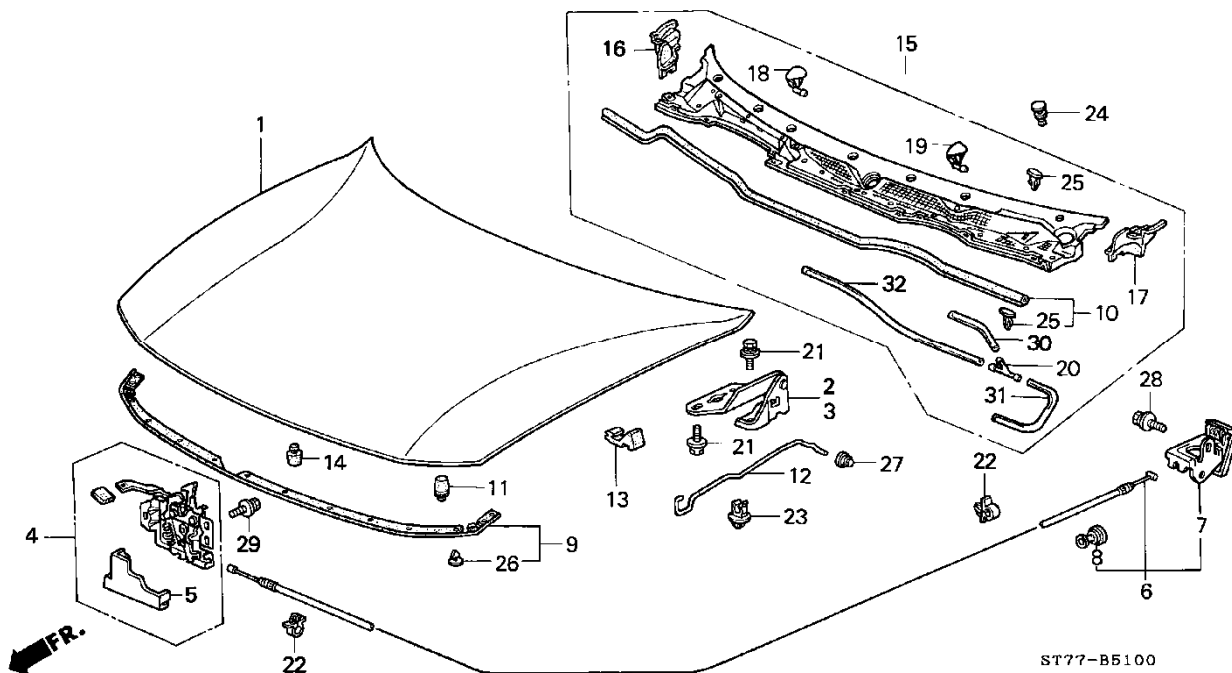

Refnr	Part Number	Part Description	Unit Qty
1	60100-ST7-000ZZ	HOOD COMP.	001
2	60120-ST0-000ZZ	HINGE COMP., R. HOOD	001
3	60170-ST0-000ZZ	HINGE COMP., L. HOOD	001
4	74120-ST7-A02	LOCK ASSY., HOOD	001
5	74129-SK7-000	COVER, HOOD LOCK	001
6	74130-ST7-A00	WIRE ASSY., HOOD	001
7	74132-SR3-A00	LEVER ASSY., HOOD WIRE	001
8	74134-SH3-003	GROMMET, HOOD WIRE	001
9	74142-ST7-000	RUBBER, HOOD SEAL	001
10	74143-ST7-003	RUBBER, HOOD RR. SEAL	001
11	74144-SR3-000	CUSHION, HOOD	002
12	74145-SR3-000	STAY, HOOD OPENER	001
13	74146-ST7-000	CUSHION, HOOD SIDE	002
14	74177-SD4-000	CUSHION A, HOOD	002
15	74200-ST7-A01	COWL TOP ASSY.	001
16	74213-ST7-003	COVER, R. HOOD HINGE	001
17	74214-ST7-003	COVER, L. HOOD HINGE	001
18	76810-ST7-901	NOZZLE ASSY., WASHER	001
19	76815-ST7-003	NOZZLE ASSY., WASHER	001
20	76830-SL0-003	JOINT Y, TUBE (MITSUBA)	001
21	90127-SA0-000	BOLT-WASHER, 6X16	008
22	90654-SA4-003	CLIP, WIRE HARNESS, 6MM (WHITE)	005
23	90672-SJ4-013	HOLDER, ROD	001
24	91508-SR3-000	CLIP, COWL TOP (BLACK)	007
25	91515-SR3-000	CLIP, RR. HOOD	023
26	91518-SM4-003	CLIP, TRUNK MOLDING	016
27	91604-SD2-013	GROMMET, HOOD STAY	001
28	93401-06016-08	BOLT-WASHER, 6X16	002
29	93405-06016-04	BOLT-WASHER, 6X16	003
30	95003-07022-31	TUBE, VINYL, 4X7X220 (95003-07001-60M)	001
31	95003-07043-31	TUBE, VINYL, 4X7X430 (95003-07001-60M)	001
32	95003-07075-31	TUBE, VINYL, 4X7X750 (95003-07001-60M)	001


Block B-51-1 HOOD (RH)

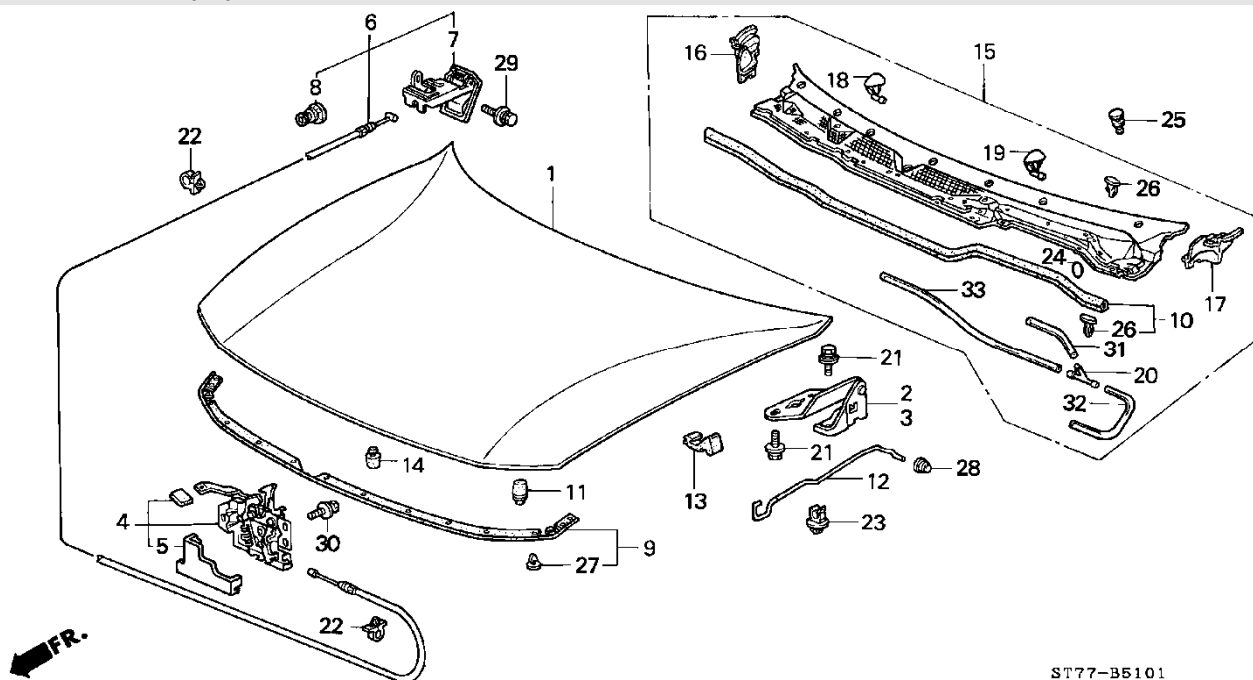

ST77-B5101


Refnr	Part Number	Part Description	Unit Qty
1	60100-ST7-000ZZ	HOOD COMP.	001
2	60120-ST0-000ZZ	HINGE COMP., R. HOOD	001
3	60170-ST0-000ZZ	HINGE COMP., L. HOOD	001
4	74120-ST7-A02	LOCK ASSY., HOOD	001
5	74129-SK7-000	COVER, HOOD LOCK	001
6	74130-ST7-000	WIRE ASSY., HOOD	001
7	74132-SH4-J01	LEVER ASSY., HOOD WIRE	001
8	74134-SH3-003	GROMMET, HOOD WIRE	001
9	74142-ST7-000	RUBBER, HOOD SEAL	001
10	74143-ST7-003	RUBBER, HOOD RR. SEAL	001
11	74144-SR3-000	CUSHION, HOOD	002
12	74145-SR3-000	STAY, HOOD OPENER	001
13	74146-ST7-000	CUSHION, HOOD SIDE	002
14	74177-SD4-000	CUSHION A, HOOD	002
15	74200-ST7-J01	COWL TOP ASSY.	001
16	74213-ST7-003	COVER, R. HOOD HINGE	001
17	74214-ST7-003	COVER, L. HOOD HINGE	001
18	76810-ST7-003	NOZZLE ASSY., WASHER	001
19	76815-ST7-901	NOZZLE ASSY., WASHER	001
20	76830-SL0-003	JOINT Y, TUBE (MITSUBA)	001
21	90127-SA0-000	BOLT-WASHER, 6X16	008
22	90654-SA4-003	CLIP, WIRE HARNESS, 6MM (WHITE)	005
23	90672-SJ4-013	HOLDER, ROD	001
24	90851-SJ4-000	SEAL, DOOR HOLE, 20MM	001
25	91508-SR3-000	CLIP, COWL TOP (BLACK)	007
26	91515-SR3-000	CLIP, RR. HOOD	023
27	91518-SM4-003	CLIP, TRUNK MOLDING	016
28	91604-SD2-013	GROMMET, HOOD STAY	001
29	93401-06016-08	BOLT-WASHER, 6X16	002
30	93405-06016-04	BOLT-WASHER, 6X16	003
31	95003-07027-70	TUBE, VINYL, 4X7X270 (95003-07001-70M)	001
32	95003-07052-70	TUBE, VINYL, 4X7X520 (95003-07001-70M)	001
33	95003-07083-70	TUBE, VINYL, 4X7X830 (95003-07001-70M)	001

Block B-52 FRONT WINDSHIELD

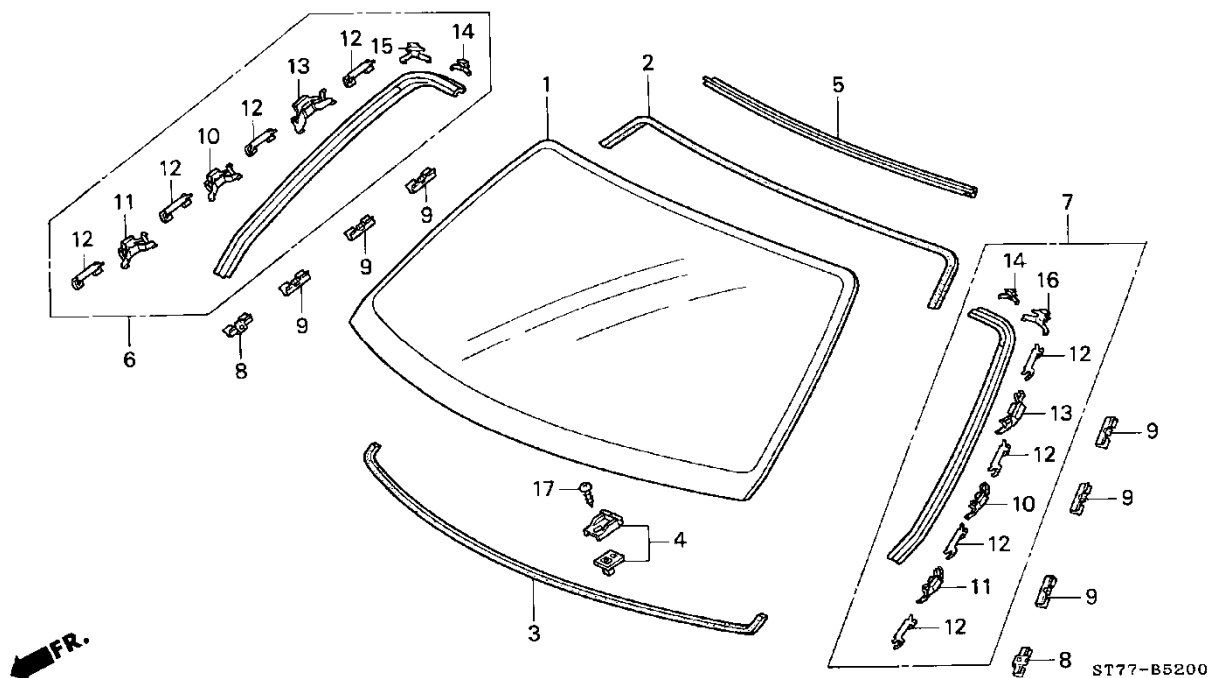


Refnr	Part Number	Part Description	Unit Qty
1	73111-ST7-Z00	GLASS, FR. WINDSHIELD (GREEN) (ASAHI)	001
2	73125-ST7-000	RUBBER A, FR. WINDSHIELD DAM	001
3	73126-ST7-000	RUBBER B, FR. WINDSHIELD DAM	001
4	73127-SR3-003	HOLDER, FR. WINDSHIELD GLASS	002
5	73151-ST7-003	MOLDING, FR. WINDSHIELD UPPER	001
6	73152-ST7-003	MOLDING ASSY., R. FR. WINDSHIELD SIDE	001
7	73162-ST7-003	MOLDING ASSY., L. FR. WINDSHIELD SIDE	001
8	91511-SR2-004	CLIP, FR. WINDSHIELD SIDE MOLDING (NATURAL)	002
9	91511-SR3-003	CLIP D, FR. WINDSHIELD SIDE MOLDING (ORANGE)	006
10	91519-SR2-003	CLIP B, FR. WINDSHIELD SIDE MOLDING (BLACK)	002
11	91519-SR3-003	CLIP B, FR. WINDSHIELD SIDE MOLDING (GREEN)	002
12	91520-SR3-003	CLIP C, FR. WINDSHIELD SIDE MOLDING (RED)	008
13	91533-ST0-003	CLIP B, FR. WINDSHIELD SIDE MOLDING (ORANGE)	002
14	91541-SR2-003	CLIP H, FR. WINDSHIELD SIDE MOLDING (BLUE)	002
15	91541-ST7-003	CLIP, R. FR. CORNER SIDE MOLDING (BLUE)	001
16	91542-ST7-003	CLIP, L. FR. CORNER SIDE MOLDING (NATURAL)	001
17	93903-453J0	SCREW, TAPPING, 5X16	002

Block B-52-10 REAR GLASS/QUARTER GLASS

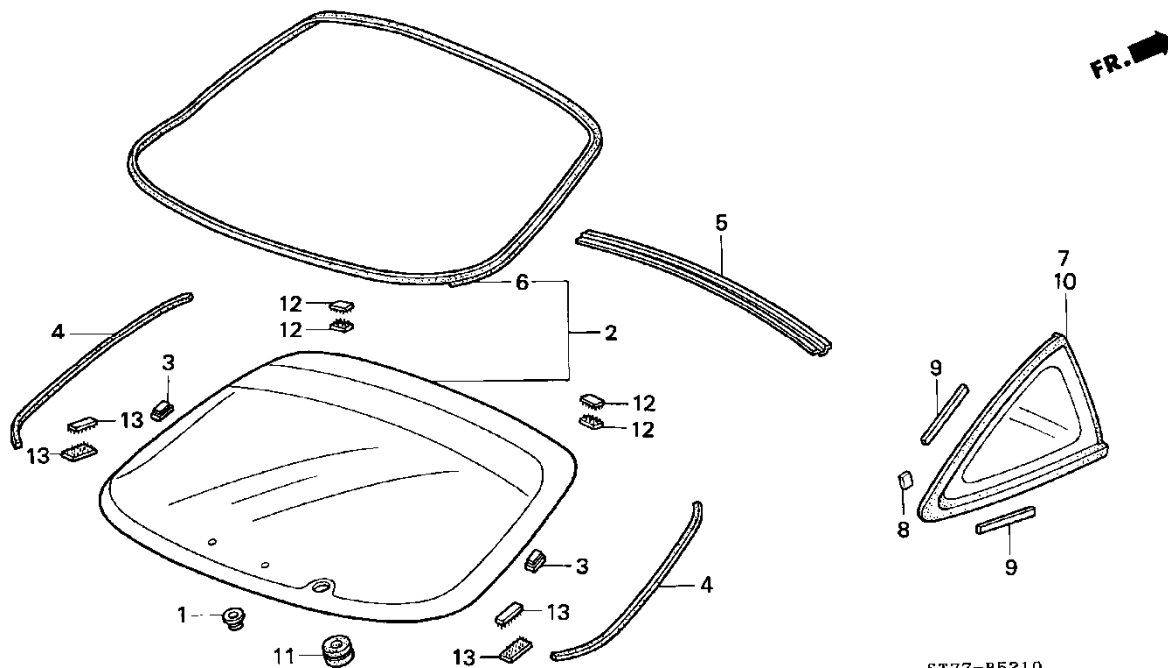


Refnr	Part Number	Part Description	Unit Qty
1	34275-ST7-000	SEAL, BUSH	002
2	73201-ST7-A01	GLASS, RR. WINDSHIELD (GREEN) (ASAHI)	001
3	73221-ST7-000	SPACER, RR. WINDSHIELD SIDE	002
4	73226-SK7-000	RUBBER, RR. WINDSHIELD SIDE DAM	002
5	73229-ST7-000	SEAL, RR. WINDSHIELD UPPER	001
6	73251-ST7-305	MOLDING, RR. WINDSHIELD	001
7	73501-ST7-A02	GLASS, R. QUARTER (GREEN) (ASAHI)	001
8	73502-ST7-000	TAPE A	002
9	73503-ST7-000	TAPE B	004
10	73551-ST7-A02	GLASS, L. QUARTER (GREEN) (ASAHI)	001
11	76707-ST7-000	SEAL, RR. WIPER	001
12	90617-SK7-010	FASTENER A, RR. WINDSHIELD UPPER	004
13	90619-SK7-000	FASTENER, RR. WINDSHIELD LOWER	004

Block B-53 DOOR WINDOWS

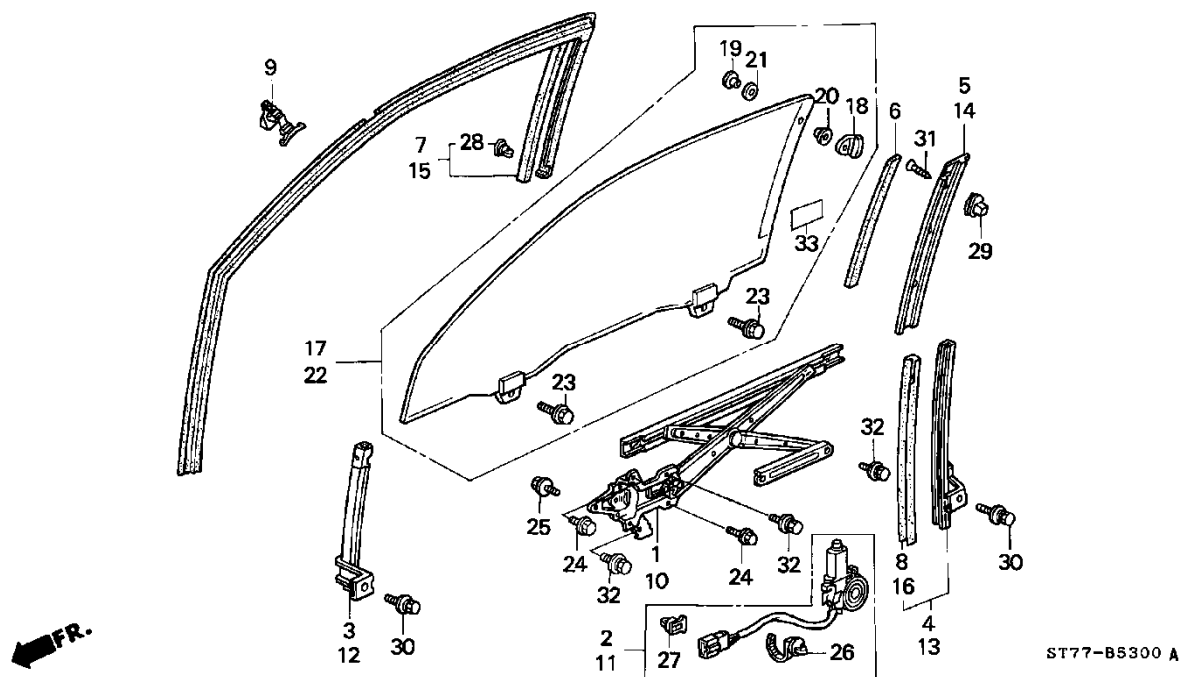

Refnr	Part Number	Part Description	Unit Qty
1	72211-ST7-J02	REGULATOR, R. FR. DOOR (POWER)	001
2	72755-S10-013	MOTOR ASSY., WINDOW (RIGHT HAND SIDE)	001 (LH)
2	72215-SR3-003	MOTOR ASSY., R. WINDOW	001 (-'98) (RH)
2	72215-SR3-013	MOTOR ASSY., R. WINDOW	001 ('98-'00) (RH)
3	72230-ST7-003	SASH, R. FR. DOOR LOWER	001
4	72231-ST7-003	SASH, R. FR. DOOR CENTER LOWER	001
5	72232-ST7-003	GUIDE, R. DOOR CENTER SASH	001
6	72233-SS0-003	COVER, SASH GUIDE	002 (-'00)
6	72233-SS0-013	COVER, SASH GUIDE	002 ('00)
7	72235-ST7-G00	RUNCHANNEL, R. DOOR	001
8	72236-ST7-003	RUNCHANNEL, R. FR. DOOR LOWER	001
9	72246-S03-003	STOPPER, DOOR GLASS	002
10	72251-ST7-J02	REGULATOR, L. FR. DOOR (POWER)	001
11	72255-SR3-A01	MOTOR ASSY., L. WINDOW	001 (-'98) (LH)
11	72255-SR3-A02	MOTOR ASSY., L. WINDOW	001 ('98-'00) (LH)
11	72715-S10-003	MOTOR ASSY., WINDOW (LEFT HAND SIDE)	001 (-'98) (RH)
11	72715-S10-013	MOTOR ASSY., WINDOW (LEFT HAND SIDE)	001 ('98-'00) (RH)
12	72270-ST7-003	SASH, L. FR. DOOR LOWER	001
13	72271-ST7-003	SASH, L. FR. DOOR CENTER LOWER	001
14	72272-ST7-003	GUIDE, L. DOOR CENTER SASH	001
15	72275-ST7-G00	RUNCHANNEL, L. DOOR	001
16	72276-ST7-003	RUNCHANNEL, L. DOOR LOWER	001
17	73300-ST7-J10	GLASS ASSY., R. FR. DOOR (GREEN)(ASAHI)	001 (-'00)
17	73300-ST7-E01	GLASS ASSY., R. FR. DOOR (GREEN)(ASAHI)	001 ('00)
18	73341-SS0-000	BRACKET, PIN GUIDE	002
19	73342-SS0-010	BOLT, PIN GUIDE	002
20	73344-SM2-A00	SEAL A, PIN GUIDE	002
21	73345-SM2-A00	SEAL B, PIN GUIDE	002
22	73350-ST7-J10	GLASS ASSY., L. FR. DOOR (GREEN)(ASAHI)	001 (-'00)
22	73350-ST7-E01	GLASS ASSY., L. FR. DOOR (GREEN)(ASAHI)	001 ('00)
23	90011-896-000	BOLT, FLANGE, 6X8	004
24	90115-SG0-003	BOLT, FLANGE, 6MM	004
25	90120-SE3-003	BOLT, FLANGE, 6X12	006
26	91540-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM)	002
27	91555-SM4-003	CLIP, COUPLER (RED)	002
28	91568-SR2-003	CLIP, DOOR WEATHERSTRIP	006
29	91623-SM2-003	GROMMET, GLASS GUIDE	006
30	93405-06016-08	BOLT-WASHER, 6X16	004
31	93905-245J0	SCREW, TAPPING, 4X20	006
32	95701-06010-08	BOLT, FLANGE, 6X10	008
33	39885-S5A-G01	LABEL, IMMOBILISER	002 ('00)


Block B-53-10 DOOR LOCKS

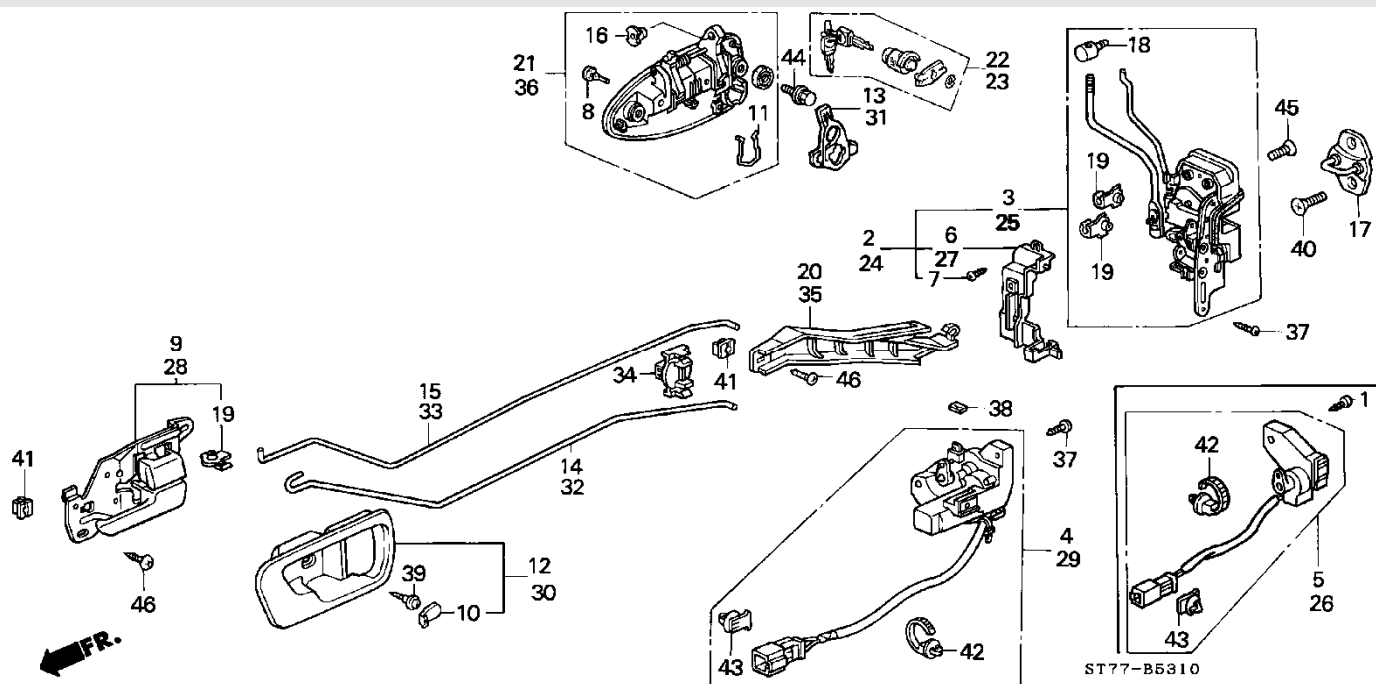

Refnr	Part Number	Part Description	Unit Qty
1	35103-SE3-003	SCREW, RECESSED, 3X8	001
2	72110-ST7-A02	LOCK ASSY., R. FR. DOOR	001 (LH)
3	72110-ST7-003	LOCK ASSY., R. FR. DOOR	001 (RH)
4	72115-SR3-J11	ACTUATOR, R. FR. DOOR LOCK	001 (LH)
5	72116-SR3-J01	SWITCH ASSY., R. DOOR LOCK	001 (RH)
6	72117-ST7-A01	PROTECTOR, R. FR. DOOR LOCK	001
7	72118-ST7-003	SCREW, TAPPING, 3X5	002
8	72119-S04-003	STOPPER A, OUTSIDE HANDLE	004
9	72120-ST7-023ZA	HANDLE ASSY., R. INSIDE *NH167L*	001
10	72122-SR2-003ZB	CAP, INSIDE HANDLE CASE *NH167L*	002
11	72123-SR0-003	RING, OUTSIDE HANDLE	002
12	72125-ST7-023ZA	CASE ASSY., R. INSIDE *NH167L*	001
13	72130-ST7-A01	PROTECTOR, R. DOOR CYLINDER	001
14	72131-ST7-003	ROD, R. INSIDE HANDLE	001
15	72132-ST7-003	ROD, R. INSIDE LOCK	001
16	72134-SM1-003	BUSH, OUTSIDE HANDLE JOINT	002
17	72135-SR3-003	STRIKER ASSY., DOOR LOCK	002
18	72136-SR3-003	JOINT	002
19	72139-SR3-003	FASTENER (NATURAL)	006
20	72139-ST7-A00	PROTECTOR, R. FR. DOOR ROD	001
21	72140-ST7-013YD	HANDLE ASSY., R. OUTSIDE *NH592P*	001
21	72140-ST7-013ZH	HANDLE ASSY., R. OUTSIDE *R81*	001
21	72140-ST7-013ZV	HANDLE ASSY., R. OUTSIDE *NH0*	001
21	72140-ST7-013YN	HANDLE ASSY., R. OUTSIDE *Y56*	001 ('00) (LH)
22	72145-ST7-003	CYLINDER, R. DOOR	001
23	72146-ST7-003	CYLINDER, L. DOOR	001
24	72150-ST7-A02	LOCK ASSY., L. FR. DOOR	001 (LH)
25	72150-ST7-003	LOCK ASSY., L. FR. DOOR	001 (RH)
26	72156-SR3-J01	SWITCH ASSY., L. DOOR LOCK	001 (LH)
27	72157-ST7-A01	PROTECTOR, L. FR. DOOR LOCK	001
28	72160-ST7-023ZA	HANDLE ASSY., L. INSIDE *NH167L*	001
29	72165-SR3-J11	ACTUATOR, L. FR. DOOR LOCK	001 (RH)
30	72165-ST7-023ZA	CASE ASSY., L. INSIDE *NH167L*	001
31	72170-ST7-A01	PROTECTOR, L. DOOR CYLINDER	001
32	72171-ST7-003	ROD, L. FR. INSIDE HANDLE	001
33	72172-ST7-003	ROD, L. INSIDE LOCK	001
34	72175-SH3-901	HOLDER, DOOR LOCK ROD	004
35	72179-ST7-A00	PROTECTOR, L. FR. DOOR ROD	001
36	72180-ST7-013YB	HANDLE ASSY., L. OUTSIDE *NH592P*	001
36	72180-ST7-013ZH	HANDLE ASSY., L. OUTSIDE *R81*	001
36	72180-ST7-013ZV	HANDLE ASSY., L. OUTSIDE *NH0*	001
36	72180-ST7-013YL	HANDLE ASSY., L. OUTSIDE *Y56*	001 ('00) (LH)
37	90102-SR3-003	SCREW, TAPPING, 3X14	002
38	90104-SR3-003	GROMMET	001


39	90120-SM4-000	SCREW, TAPPING	002
40	90120-SV4-000	BOLT, LOCK STRIKER	004
41	90662-SB2-003	GROMMET, SCREW, 5MM	006
42	91540-SV4-003	CLIP, HARNESS BAND (NATURAL) (145.2MM)	002
43	91580-SM4-003	CLIP, COUPLER	002
44	93403-06012-08	BOLT-WASHER, 6X12	004
45	93600-06028-0A	SCREW, FLAT, 6X28	006
46	93903-45220	SCREW, TAPPING, 5X12	006

Block B-53-20 DOOR PANELS

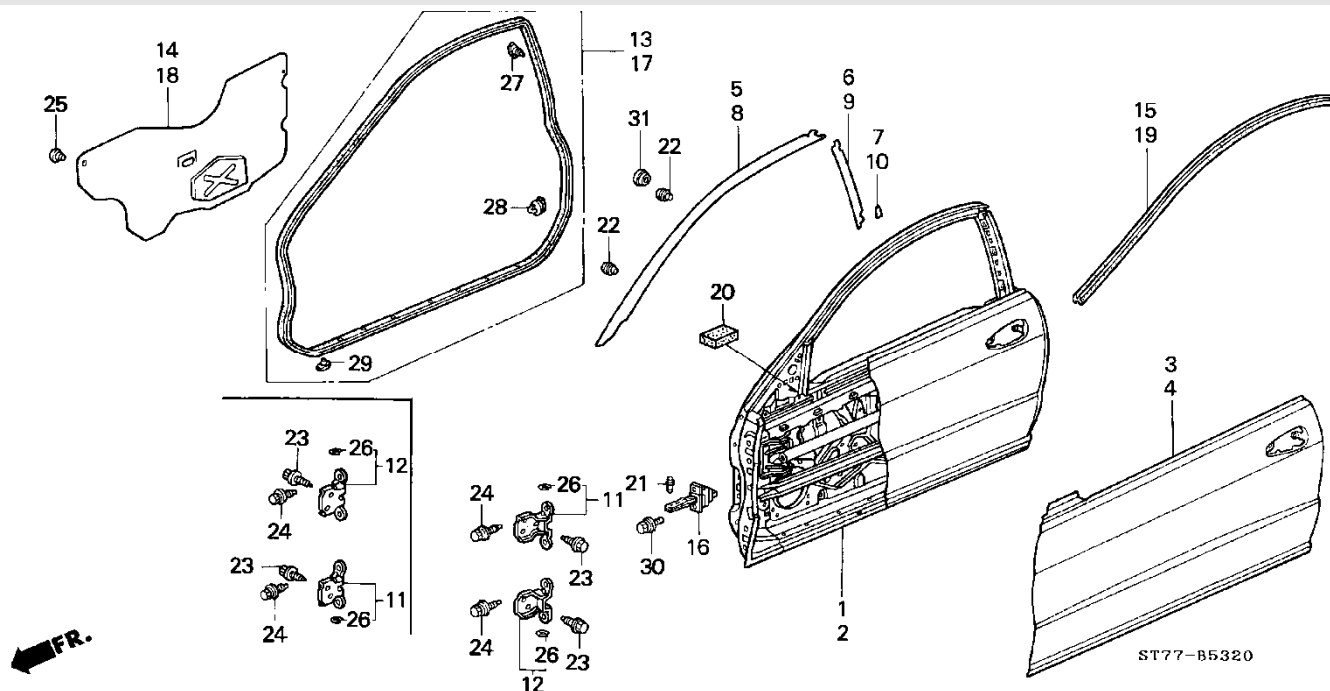

Refnr	Part Number	Part Description	Unit	Qty
1	67010-ST7-010ZZ	PANEL COMP., R. FR. DOOR	001	
2	67050-ST7-010ZZ	PANEL COMP., L. FR. DOOR	001	
3	67111-ST7-300ZZ	SKIN, R. FR. DOOR	001	
4	67151-ST7-300ZZ	SKIN, L. FR. DOOR	001	
5	67325-ST7-003ZB	TAPE, R. SASH UPPER *TYPEBM* (BLACK)	001	(-00)
5	67325-ST7-901ZA	TAPE, R. SASH UPPER *TYPEBM* (BLACK)	001	(00)
6	67326-ST7-003ZB	TAPE, R. SASH CENTER *TYPEBM* (BLACK)	001	(-00)
6	67326-ST7-901ZA	TAPE, R. SASH CENTER *TYPEBM* (BLACK)	001	(00)
7	67327-ST7-003ZB	TAPE, R. SASH CENTER LOWER *TYPEBM* (BLACK)	001	(-00)
7	67327-ST7-901ZA	TAPE, R. SASH CENTER LOWER *TYPEBM* (BLACK)	001	(00)
8	67365-ST7-003ZB	TAPE, L. SASH UPPER *TYPEBM* (BLACK)	001	(-00)
8	67365-ST7-901ZA	TAPE, L. SASH UPPER *TYPEBM* (BLACK)	001	(00)
9	67366-ST7-003ZB	TAPE, L. SASH CENTER *TYPEBM* (BLACK)	001	(-00)
9	67366-ST7-901ZA	TAPE, L. SASH CENTER *TYPEBM* (BLACK)	001	(00)
10	67367-ST7-003ZB	TAPE, L. SASH CENTER LOWER *TYPEBM* (BLACK)	001	(-00)
10	67367-ST7-901ZA	TAPE, L. SASH CENTER LOWER *TYPEBM* (BLACK)	001	(00)
11	67410-SH3-K02ZZ	HINGE A, FR. DOOR	002	
12	67450-SH3-K02ZZ	HINGE B, FR. DOOR	002	
13	72310-ST7-023	WEATHERSTRIP, R. DOOR	001	
14	72321-ST7-000	SEAL, R. FR. DOOR HOLE	001	(LH)
14	72321-ST7-A00	SEAL, R. FR. DOOR HOLE	001	(RH)
15	72325-ST7-G00	SUB SEAL, R. FR. DOOR	001	
16	72340-ST7-A01	CHECKER COMP., DOOR	002	
17	72350-ST7-023	WEATHERSTRIP, L. DOOR	001	
18	72361-ST7-000	SEAL, L. FR. DOOR HOLE	001	(RH)
18	72361-ST7-A00	SEAL, L. FR. DOOR HOLE	001	(LH)
19	72365-ST7-G00	SUB SEAL, L. FR. DOOR	001	
20	75513-ST7-000	SEAL, DOOR PANEL	002	
21	75760-SB2-003	PIN, DOOR CHECKER	002	
22	75891-SA7-000	STOPPER, DOOR	004	
23	90001-SD2-000	BOLT, FLANGE, 8X22	008	
24	90157-SA0-000	BOLT-WASHER, 8X25	008	
25	90686-692-003	CAP, LINING MOUNT	004	
26	90755-SB2-000	E-RING, 6MM	004	
27	91530-SH4-003	CLIP, DOOR WEATHERSTRIP	002	
28	91561-SP0-003	CLIP, DOOR WEATHERSTRIP	002	
29	91568-SR2-003	CLIP, DOOR WEATHERSTRIP	040	
30	93405-06016-08	BOLT-WASHER, 6X16	004	
31	95550-25000	PLUG, BLIND, 25MM	002	


Block B-55 TAILGATE (LH)

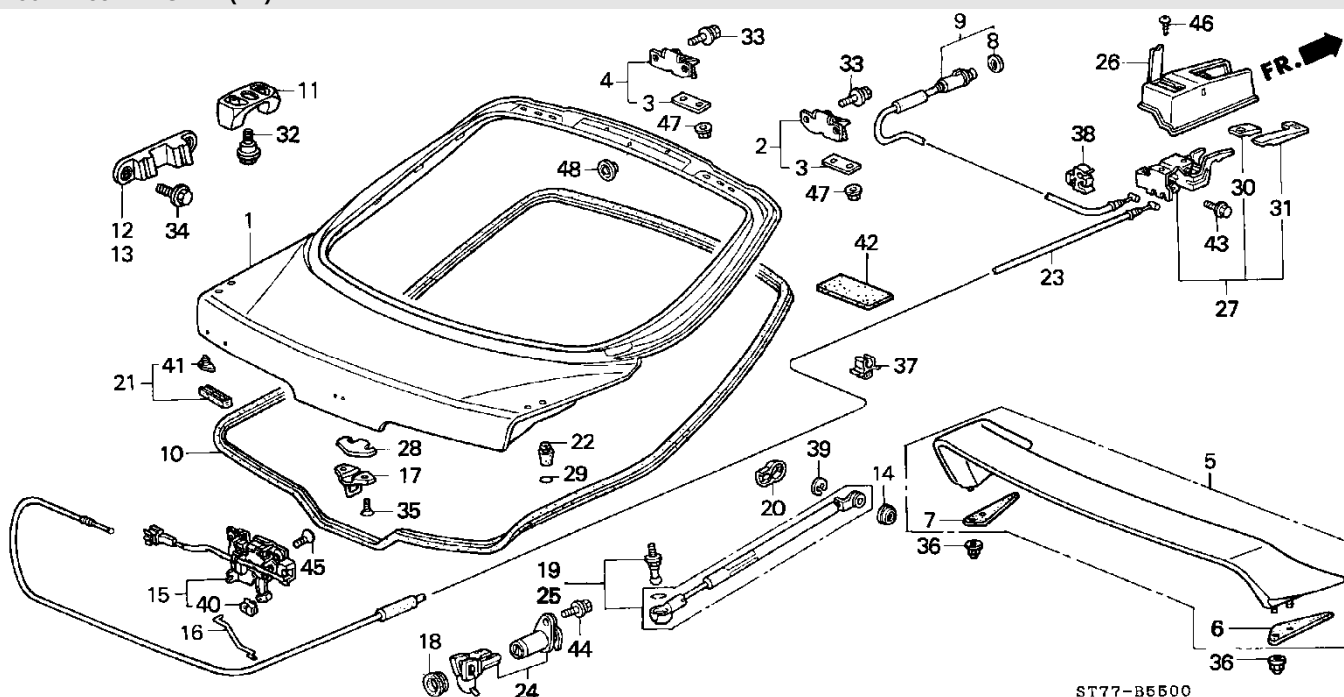

Refrn	Part Number	Part Description	Unit Qty	
1	68100-ST7-Z00ZZ	TAILGATE COMP.	001	
2	68210-ST7-Z00ZZ	HINGE COMP., R. TAILGATE	001	
3	68217-SK7-000	SEAL, TAILGATE HINGE	002	
4	68260-ST7-Z00ZZ	HINGE COMP., L. TAILGATE	001	
5	71700-ST7-Z00ZA	SPOILER ASSY., TAILGATE *NH0*	001	
5	71700-ST7-Z00ZC	SPOILER ASSY., TAILGATE *R81*	001	
5	71700-ST7-Z00ZD	SPOILER ASSY., TAILGATE *NH592P*	001	
5	71700-ST7-Z00ZF	SPOILER ASSY., TAILGATE *Y56*	001	('00)
6	71712-ST7-Z00	PACKING, R. SPONGE	001	
7	71722-ST7-Z00	PACKING, L. SPONGE	001	
8	73219-693-951	SEAL, FUEL LID OPENER	001	
9	74411-SK7-A02	CABLE, FUEL LID OPENER	001	
10	74440-ST7-000	WEATHERSTRIP, TAILGATE	001	
11	74442-ST7-Z00	STOPPER A, TAILGATE SIDE	002	
12	74443-ST7-Z00	STOPPER B, R. TAILGATE SIDE	001	
13	74493-ST7-Z00	STOPPER B, L. TAILGATE SIDE	001	
14	74541-SE1-000	SEAL, OPEN STAY PIN	002	
15	74801-ST7-Z01	LOCK, TAILGATE	001	
16	74811-ST7-003	ROD, TAILGATE LOCK	001	
17	74813-ST7-Z00	STRIKER, TAILGATE	001	
18	74815-SK7-000	GROMMET, KEY CYLINDER	001	
19	74820-ST7-326	STAY ASSY., R. TAILGATE OPEN	001	
20	74826-SE0-000	COVER, OPEN STAY UPPER	002	
21	74826-SK7-000	STOPPER, RR. COMBINATION	002	
22	74828-ST7-900	STOPPER, TAILGATE	002	
23	74830-ST7-A02	CABLE, TAILGATE OPENER	001	
24	74861-SM4-003	CYLINDER, TRUNK	001	
25	74870-ST7-306	STAY ASSY., L. TAILGATE OPEN	001	
26	74881-SK7-A01ZA	COVER, TAILGATE OPENER *NH167L*	001	
27	74882-S03-G01ZA	OPENER ASSY., TAILGATE *NH167L*	001	
28	83307-SD2-000	SHIM, TAILGATE STRIKER (2.0)	N	
28	83307-SD2-900	SHIM, TAILGATE STRIKER (1.0)	N	
29	85268-SA0-000	PROTECTION, TAILGATE, 20MM (CIRCLE)	002	
30	85511-SB2-003ZQ	KNOB ASSY., FUEL OPENER *NH167L*	001	
31	85512-SB2-003ZN	KNOB ASSY., TAILGATE OPENER *NH167L*	001	
32	90104-SM5-A00	BOLT, TAILGATE STOP, 6MM	002	
33	90105-634-000	BOLT-WASHER, 8X20	004	
34	90106-SX0-000	BOLT, FLANGE, 6X16	004	(-'99)
34	90106-SX0-010	BOLT, FLANGE, 6X15	004	('99-'00)
35	90120-SV4-000	BOLT, LOCK STRIKER	002	
36	90307-S03-000	NUT, SPOILER CAP, 6MM	004	
37	90684-SD4-003	CLIP, FUEL LID OPENER	001	
38	90692-SK8-003	CLIP, TRUNK OPENER CABLE	001	

39	90755-SB2-000	E-RING, 6MM	002
40	90856-SK7-003	SNAP, TAILGATE LOCK	001
41	91530-SE0-003	CLIP A, DOOR WEATHERSTRIP	004
42	91902-SB2-003	CUSHION, WIRE HARNESS (50X100)	005
43	93402-06012-08	BOLT-WASHER, 6X12	002
44	93403-06020-08	BOLT-WASHER, 6X20	001
45	93600-06016-1A	SCREW, FLAT, 6X16	003
46	93903-14180	SCREW, TAPPING, 4X8	001
47	94071-08080	NUT-WASHER, 8MM	004
48	95550-15000	PLUG, BLIND, 15MM	001


Block B-55-1 TAILGATE (RH)

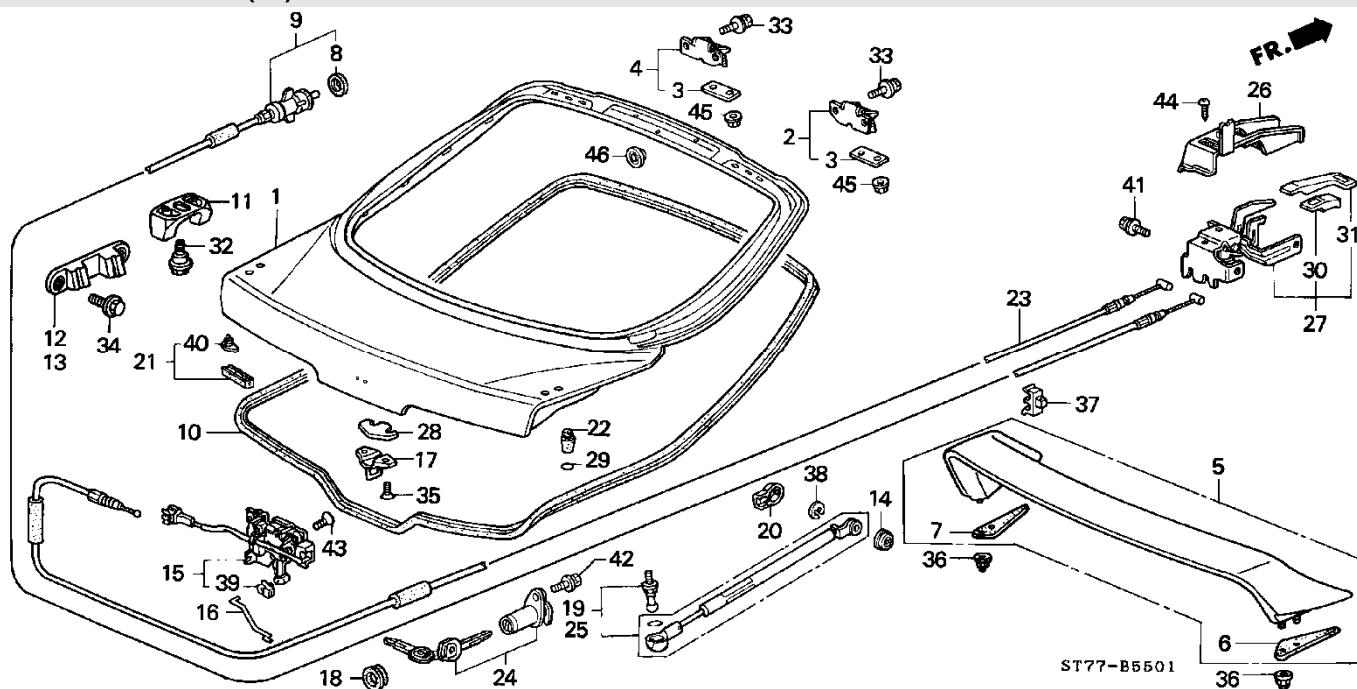


Refnr	Part Number	Part Description	Unit Qty
1	68100-ST7-Z00ZZ	TAILGATE COMP.	001
2	68210-ST7-Z00ZZ	HINGE COMP., R. TAILGATE	001
3	68217-SK7-000	SEAL, TAILGATE HINGE	002
4	68260-ST7-Z00ZZ	HINGE COMP., L. TAILGATE	001
5	71700-ST7-Z00ZA	SPOILER ASSY., TAILGATE *NH0*	001
5	71700-ST7-Z00ZC	SPOILER ASSY., TAILGATE *R81*	001
5	71700-ST7-Z00ZD	SPOILER ASSY., TAILGATE *NH592P*	001
6	71712-ST7-Z00	PACKING, R. SPONGE	001
7	71722-ST7-Z00	PACKING, L. SPONGE	001
8	73219-693-951	SEAL, FUEL LID OPENER	001
9	74411-SJ4-013	CABLE, FUEL LID OPENER	001
10	74440-ST7-000	WEATHERSTRIP, TAILGATE	001
11	74442-ST7-Z00	STOPPER A, TAILGATE SIDE	002
12	74443-ST7-Z00	STOPPER B, R. TAILGATE SIDE	001
13	74493-ST7-Z00	STOPPER B, L. TAILGATE SIDE	001
14	74541-SE1-000	SEAL, OPEN STAY PIN	002
15	74801-ST7-Z01	LOCK, TAILGATE	001
16	74811-ST7-003	ROD, TAILGATE LOCK	001
17	74813-ST7-Z00	STRIKER, TAILGATE	001
18	74815-SK7-000	GROMMET, KEY CYLINDER	001
19	74820-ST7-326	STAY ASSY., R. TAILGATE OPEN	001
20	74826-SE0-000	COVER, OPEN STAY UPPER	002
21	74826-SK7-000	STOPPER, RR. COMBINATION	002
22	74828-ST7-900	STOPPER, TAILGATE	002
23	74830-SK7-013	CABLE, TAILGATE OPENER	001
24	74861-SM4-003	CYLINDER, TRUNK	001
25	74870-ST7-306	STAY ASSY., L. TAILGATE OPEN	001
26	74881-SK7-003ZA	COVER, TAILGATE OPENER *NH167L*	001
27	74882-SK7-003ZA	OPENER ASSY., TAILGATE *NH167L*	001
28	83307-SD2-000	SHIM, TAILGATE STRIKER (2.0)	N
28	83307-SD2-900	SHIM, TAILGATE STRIKER (1.0)	N
29	85268-SA0-000	PROTECTION, TAILGATE, 20MM (CIRCLE)	002
30	85511-SB2-003ZQ	KNOB ASSY., FUEL OPENER *NH167L*	001
31	85512-SB2-003ZN	KNOB ASSY., TAILGATE OPENER *NH167L*	001
32	90104-SM5-A00	BOLT, TAILGATE STOP, 6MM	002
33	90105-634-000	BOLT-WASHER, 8X20	004
34	90106-SX0-000	BOLT, FLANGE, 6X16	004 (-'99)
34	90106-SX0-010	BOLT, FLANGE, 6X15	004 ('99-'00)
35	90120-SV4-000	BOLT, LOCK STRIKER	002
36	90307-S03-000	NUT, SPOILER CAP, 6MM	004
37	90692-SK8-003	CLIP, TRUNK OPENER CABLE	001
38	90755-SB2-000	E-RING, 6MM	002
39	90856-SK7-003	SNAP, TAILGATE LOCK	001

40	91530-SE0-003	CLIP A, DOOR WEATHERSTRIP	004
41	93402-06012-08	BOLT-WASHER, 6X12	002
42	93403-06020-08	BOLT-WASHER, 6X20	001
43	93600-06016-1A	SCREW, FLAT, 6X16	003
44	93903-14180	SCREW, TAPPING, 4X8	001
45	94071-08080	NUT-WASHER, 8MM	004
46	95550-15000	PLUG, BLIND, 15MM	001

Block BOP-1 AIR CONDITIONER (KIT)

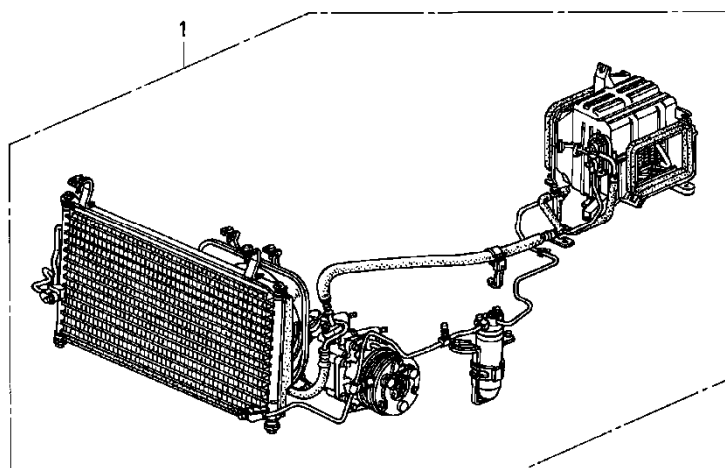


FR.

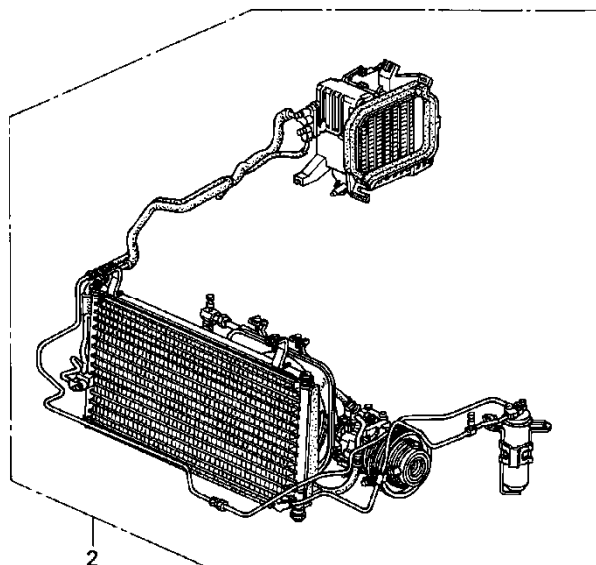

ST77-Z0100


Refnr	Part Number	Part Description	Unit Qty
1	80000-ST7-E51	GENERAL ASSY., AIR CONDITIONER	001 ('98-'99) (RH)
1	80000-ST7-E52	GENERAL ASSY., AIR CONDITIONER	001 ('00) (RH)
2	80000-ST7-G51	GENERAL ASSY., AIR CONDITIONER	001 ('98-'99) (LH)
2	80000-ST7-G52	GENERAL ASSY., AIR CONDITIONER	001 ('00) (LH)

Block BOP-2 AIR CONDITIONER (COMPRESSOR) (DENSO)

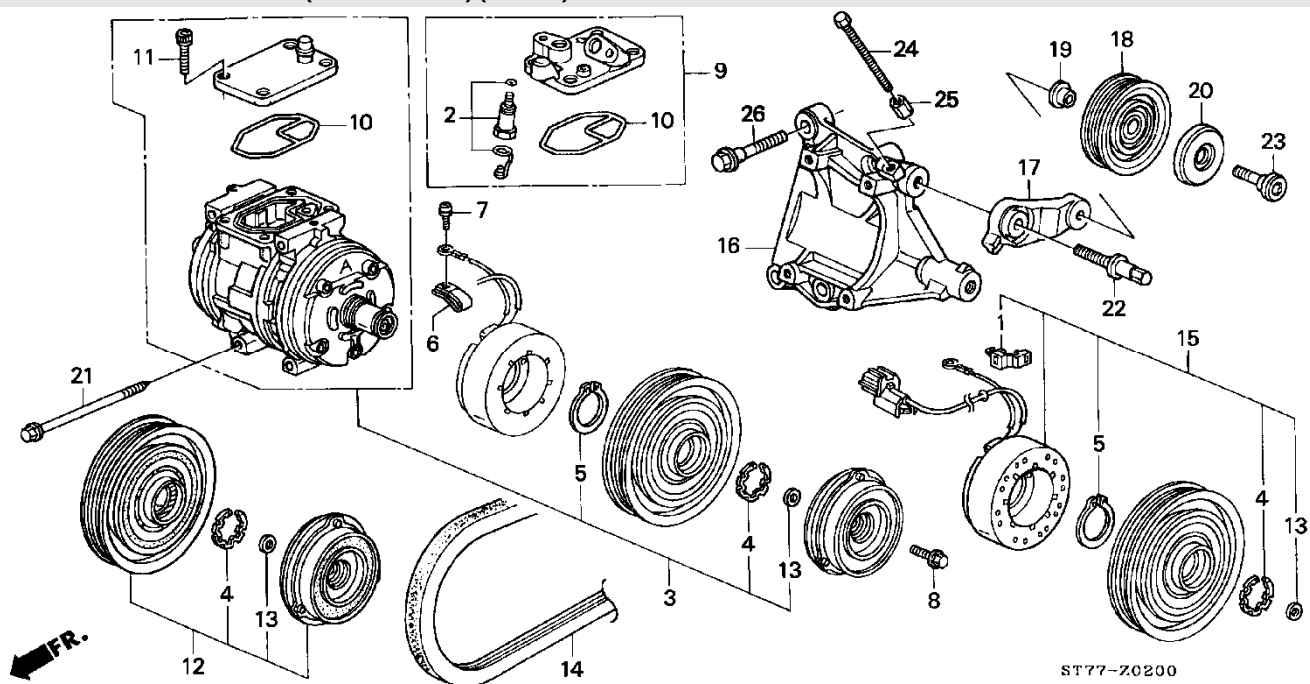

Refnr	Part Number	Part Description	Unit Qty
1	38773-PR3-003	CLIP, WIRE HARNESS	001
2	38801-P9K-E01	VALVE SUB ASSY., SAFETY	001
3	38810-P9K-E01	COMPRESSOR COMP. (DENSO)	001
4	38812-PH1-003	RING B, SNAP	001
5	38812-671-003	RING A, SNAP	001
6	38816-PR3-003	CLIP, LEAD WIRE	001
7	38827-PH7-003	SCREW-WASHER, 5X8	001
8	38829-PR3-003	BOLT, WASHER HEAD	001
9	38838-P9K-E01	VALVE, SUCTION SERVICE	001
10	38839-PR7-A01	O-RING	001
11	38840-PC1-003	BOLT B	004
12	38900-P73-003	CLUTCH SET	001
13	38912-PH1-N01	PLATE SET, WASHER	001
14	38920-P73-003	BELT, COMPRESSOR (BANDO)	001
15	38924-P73-013	STATOR SET	001 ('98-'99)
15	38924-P73-J01	STATOR SET	001 ('00)
16	38930-P73-A00	BRACKET, COMPRESSOR	001
17	38941-P73-000	BRACKET, IDLER (HAC)	001
18	38942-P73-000	PULLEY COMP., IDLE	001
19	38944-P2T-000	COLLAR, IDLE PULLEY	001
20	38945-P30-000	COVER, BEARING	001
21	90023-P30-000	BOLT, FLANGE, 8X90	004
22	90054-P30-000	BOLT, SPECIAL, 10X30	001
23	90086-PR3-000	BOLT, SOCKET, 10X28	001
24	90087-P30-003	BOLT, HEX., 8X84	001
25	94001-08080-0S	NUT, HEX., 8MM	001
26	95801-10045-08	BOLT, FLANGE, 10X45	004


Block BOP-3 AIR CONDITIONER (CONDENSER)

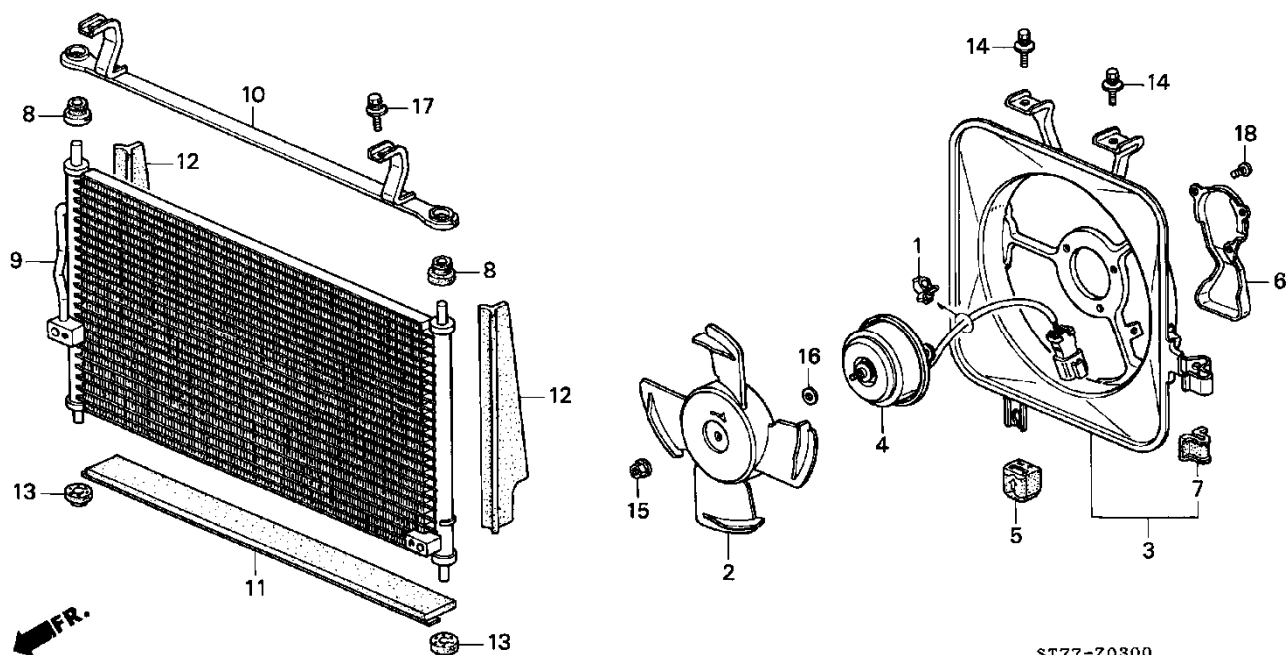

ST77-Z0300


Refnr	Part Number	Part Description	Unit Qty
1	32175-647-920	CLIP, WIRE HARNESS	001
2	38611-PT2-J02	FAN COMP., COOLING (MITSUBA)	001 ('98-'99)
2	38611-P7J-J01	FAN COMP., COOLING (MITSUBA)	001 ('00)
3	38615-P72-000	SHROUD COMP., AIR CONDITIONER	001
4	38616-PT3-A03	MOTOR, COOLING FAN (MITSUBA)	001 ('98-'99)
4	38616-PAA-A01	MOTOR, COOLING FAN (MITSUBA)	001 ('00)
5	38618-PR3-000	MOUNT, SHROUD	001
6	38619-PT2-J00	PROTECTOR, FAN MOTOR	001
7	38626-PM5-A00	RUBBER B	001
8	80107-SS0-000	MOUNT, CONDENSER UPPER	002
9	80110-ST7-003	CONDENSER COMP. (SAK)	001
10	80111-ST7-000	BRACKET, CONDENSER MOUNT UPPER	001
11	80115-ST7-000	SEAL, LOWER CONDENSER	001
12	80116-ST7-000	SEAL, SIDE CONDENSER	002
13	80175-SE0-000	MOUNT, CONDENSER	002
14	90003-PG7-660	BOLT-WASHER, 6X16 (DACRO COATING)	002
15	90041-PD2-004	NUT, SPECIAL, 5MM (MITSUBA)	001 ('98-'99)
15	90041-PAA-A01	NUT, TOOTHED, 5MM	001 ('00)
16	90403-PM3-004	WASHER, PLAIN, 7MM	001 ('98-'99)
16	90430-PAA-A01	WASHER, PLAIN, 8MM	001 ('00)
17	93403-06012-08	BOLT-WASHER, 6X12	002
18	93893-04008-08	SCREW-WASHER, 4X8	003

Block BOP-4 AIR CONDITIONER (COOLING UNIT) (LH)

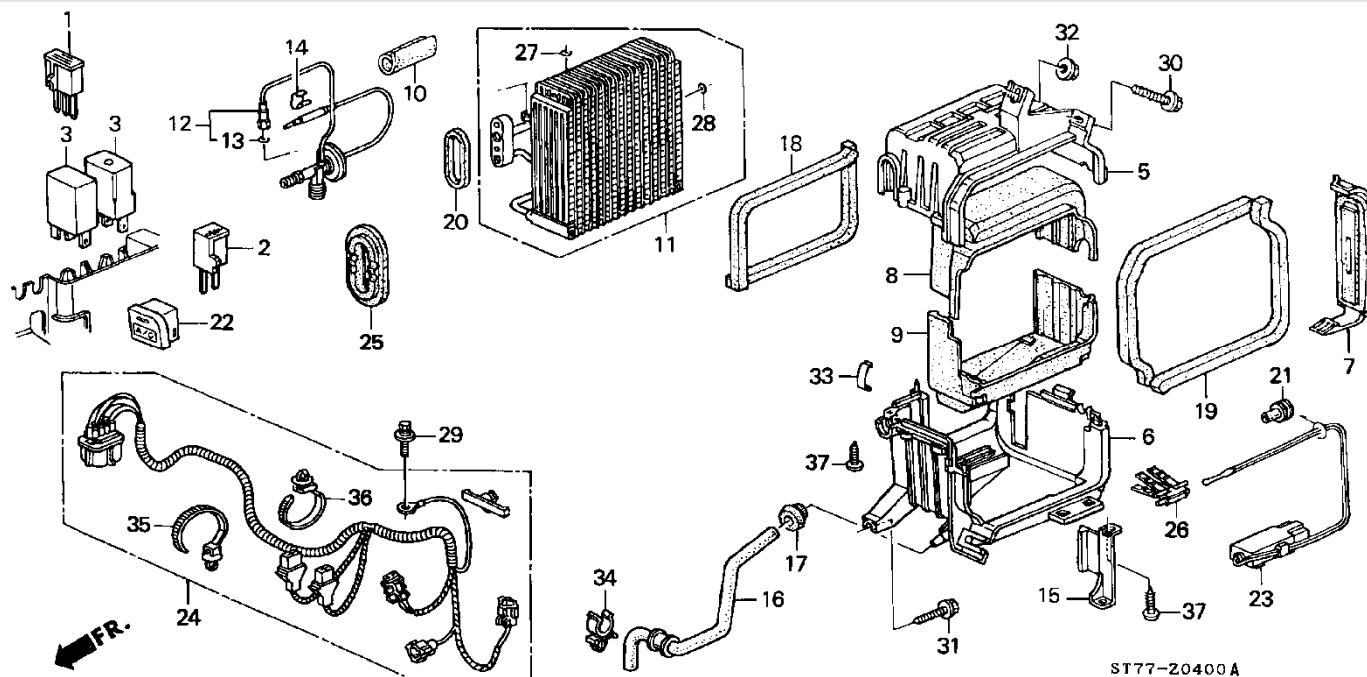


Refnr	Part Number	Part Description	Unit Qty
1	32146-SD2-013	DIODE (3P)	001
2	32146-SH3-003	CONNECTOR, DIODE (2P)	001
3	39794-S01-A01	RELAY ASSY., POWER (4P) (MICRO ISO) (OMRON)	002
3	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	002
3	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	002
5	80201-ST3-G00	CASE, EVAPORATOR UPPER (SAK)	001
6	80202-ST3-G00	CASE, EVAPORATOR LOWER (SAK)	001
7	80203-ST3-E00	LID, EVAPORATOR UPPER CASE (SAK)	001
8	80205-ST3-G00	INSULATOR, EVAPORATOR UPPER (SAK)	001
9	80206-ST3-G00	INSULATOR, EVAPORATOR LOWER	001
10	80214-SL5-A01	INSULATOR, EXPANSION	001
11	80215-ST3-G01	EVAPORATOR COMP. (SAK)	001
12	80220-ST7-A02	VALVE ASSY., EXPANSION (10N) (FUJI KOKI)	001 ('98)
12	80220-ST7-A03	VALVE ASSY., EXPANSION (10N) (FUJI KOKI)	001 ('98-'00)
13	80223-ST7-A01	O-RING (FUJI KOKI)	001
14	80225-SR3-010	CLAMP	001
15	80266-ST3-G00	PLATE, EVAPORATOR HARNESS	001
16	80271-ST7-A01	HOSE, DRAIN	001
17	80272-SF4-000	GROMMET, DRAIN HOSE	001
18	80286-SR3-000	SEAL, EVAPORATOR INNER	001
19	80287-SR3-000	SEAL, EVAPORATOR OUTER	001
20	80288-SR3-000	SEAL, EVAPORATOR JOINT	001
21	80291-SR3-000	GROMMET, EVAPORATOR SENSOR	001
22	80411-ST7-J53	KNOB, AIR CONDITIONER SWITCH	001
23	80430-SR3-003	THERMOSTAT, AIR CONDITIONER	001
24	80460-ST7-A01	HARNESS, AIR CONDITIONER WIRE	001
25	80464-SR3-000	GROMMET, AIR CONDITIONER PIPE	001
26	80566-SR3-003	CLIP, EVAPORATOR SENSOR	001
27	80872-ST7-000	O-RING (1/2")	001
28	80873-ST7-000	O-RING, 8MM	001
29	90153-SE0-003	BOLT, EARTH, 6X12	001
30	90155-SE0-003	SCREW, TAPPING, 6X20	002
31	90156-SH3-000	BOLT-WASHER, 6X24	001
32	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	001
33	90659-692-000	CLAMP, CASE	002
34	91546-SR3-003	CLAMP, 16.5	001
35	91551-SF4-003	BAND, WIRE HARNESS (BROWN)(110MM)	001
36	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	009
37	93913-14420	SCREW, TAPPING, 4X16 (PO)	002

Block BOP-4-1 AIR CONDITIONER (COOLING UNIT) (RH)

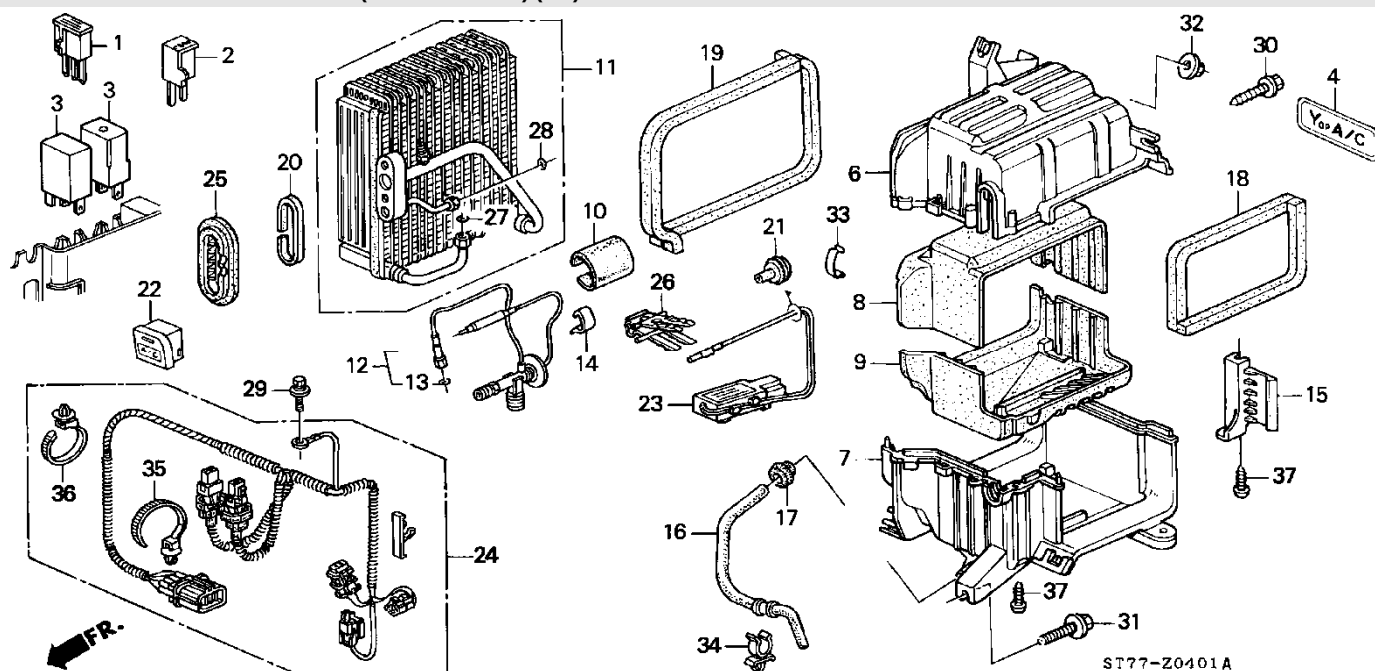


Refnr	Part Number	Part Description	Unit Qty
1	32146-SD2-013	DIODE (3P)	001
2	32146-SH3-003	CONNECTOR, DIODE (2P)	001
3	39794-S01-A01	RELAY ASSY., POWER (4P) (MICRO ISO) (OMRON)	002
3	39794-S04-003	RELAY ASSY., POWER (4P) (MICRO ISO) (MITSUBA)	002
3	39794-S04-004	RELAY ASSY., POWER (4P) (MICRO ISO) (MATSUSHITA)	002
4	80009-SJ4-000	LABEL, AIR CONDITIONER (YOP AIR CONDITIONER)	001
6	80201-SR3-000	CASE, EVAPORATOR UPPER	001
7	80202-SR3-000	CASE, EVAPORATOR LOWER	001
8	80205-SR3-000	INSULATOR, EVAPORATOR UPPER	001
9	80206-SR3-000	INSULATOR, EVAPORATOR LOWER	001
10	80214-SL5-A01	INSULATOR, EXPANSION	001
11	80215-ST7-013	EVAPORATOR COMP.	001
12	80220-ST7-A02	VALVE ASSY., EXPANSION (10N) (FUJI KOKI)	001 (-'98)
12	80220-ST7-A03	VALVE ASSY., EXPANSION (10N) (FUJI KOKI)	001 ('98-'00)
13	80223-ST7-A01	O-RING (FUJI KOKI)	001
14	80225-SR3-010	CLAMP	001
15	80266-SR3-000	PLATE, EVAPORATOR HARNESS	001
16	80271-SR3-000	HOSE, DRAIN	001
17	80272-SF4-000	GROMMET, DRAIN HOSE	001
18	80286-SR3-000	SEAL, EVAPORATOR INNER	001
19	80287-SR3-000	SEAL, EVAPORATOR OUTER	001
20	80288-SR3-000	SEAL, EVAPORATOR JOINT	001
21	80291-SR3-000	GROMMET, EVAPORATOR SENSOR	001
22	80411-ST7-J53	KNOB, AIR CONDITIONER SWITCH	001
23	80430-SR3-003	THERMOSTAT, AIR CONDITIONER	001
24	80460-ST7-010	HARNESS, AIR CONDITIONER WIRE	001
25	80464-SR3-000	GROMMET, AIR CONDITIONER PIPE	001
26	80566-SR3-003	CLIP, EVAPORATOR SENSOR	001
27	80872-ST7-000	O-RING (1/2")	001
28	80873-ST7-000	O-RING, 8MM	001
29	90153-SE0-003	BOLT, EARTH, 6X12	001
30	90155-SE0-003	SCREW, TAPPING, 6X20	002
31	90156-SH3-000	BOLT-WASHER, 6X24	001
32	90321-SV4-003	NUT-WASHER, 6MM (PAINT CUTTING)	001
33	90659-692-000	CLAMP, CASE	004
34	91546-SR3-003	CLAMP, 16.5	001
35	91551-SF4-003	BAND, WIRE HARNESS (BROWN)(110MM)	002
36	91558-ST5-003	CLIP, HARNESS BAND (NATURAL) (135MM) (7MM HOLE)	003
37	93913-14420	SCREW, TAPPING, 4X16 (PO)	003

Block BOP-5 AIR CONDITIONER (HOSES/PIPES) (LH)

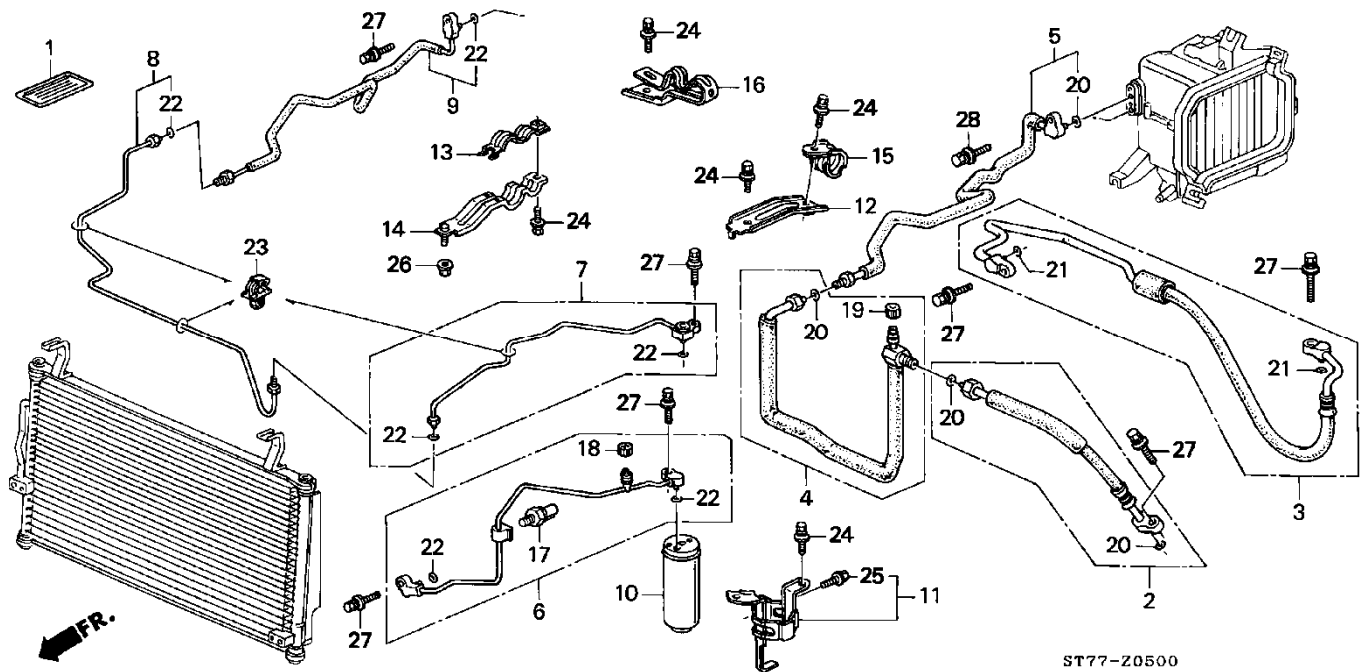


Refnr	Part Number	Part Description	Unit Qty
1	80050-SP0-000	LABEL, AIR CONDITIONER CAUTION (HFC134A)	001
2	80311-ST7-A02	HOSE COMP., SUCTION	001
3	80315-ST7-003	HOSE COMP., DISCHARGE	001
4	80321-ST7-A02	PIPE A, SUCTION	001
5	80322-ST7-A02	PIPE B, SUCTION	001
6	80331-ST7-E01	PIPE, CONDENSER	001
7	80341-ST7-G01	PIPE A, RECEIVER	001
8	80342-ST7-A02	PIPE B, RECEIVER	001
9	80343-ST7-A01	PIPE C, RECEIVER	001
10	80351-ST7-003	RECEIVER COMP.	001
11	80352-SR3-000	BRACKET, LIQUID TANK	001
12	80361-ST7-A00	STAY, SUCTION HOSE	001
13	80363-ST7-A00	CLAMP, DISCHARGE HOSE	001
14	80364-ST7-A00	STAY, DISCHARGE HOSE	001
15	80365-SH3-A00	CLAMP, SUCTION PIPE	001
16	80367-SR3-A00	CLAMP B, SUCTION PIPE	001
17	80440-SS0-901	SWITCH, DUAL PRESSURE (FUJI)	001
18	80865-SL0-003	CAP, VALVE (H)	001
19	80866-SL0-003	CAP, VALVE (L)	001
20	80871-ST7-000	O-RING (5/8")	004
21	80872-ST7-000	O-RING (1/2")	002
22	80873-ST7-000	O-RING, 8MM	006
23	91548-SR3-003	CLIP, 8MM	003
24	93403-06012-08	BOLT-WASHER, 6X12	006
25	93403-06020-08	BOLT-WASHER, 6X20	001
26	94050-06080	NUT, FLANGE, 6MM	001
27	95701-06025-08	BOLT, FLANGE, 6X25	007
28	95701-06035-08	BOLT, FLANGE, 6X35	001


Block BOP-5-1 AIR CONDITIONER (HOSES/PIPES) (RH)

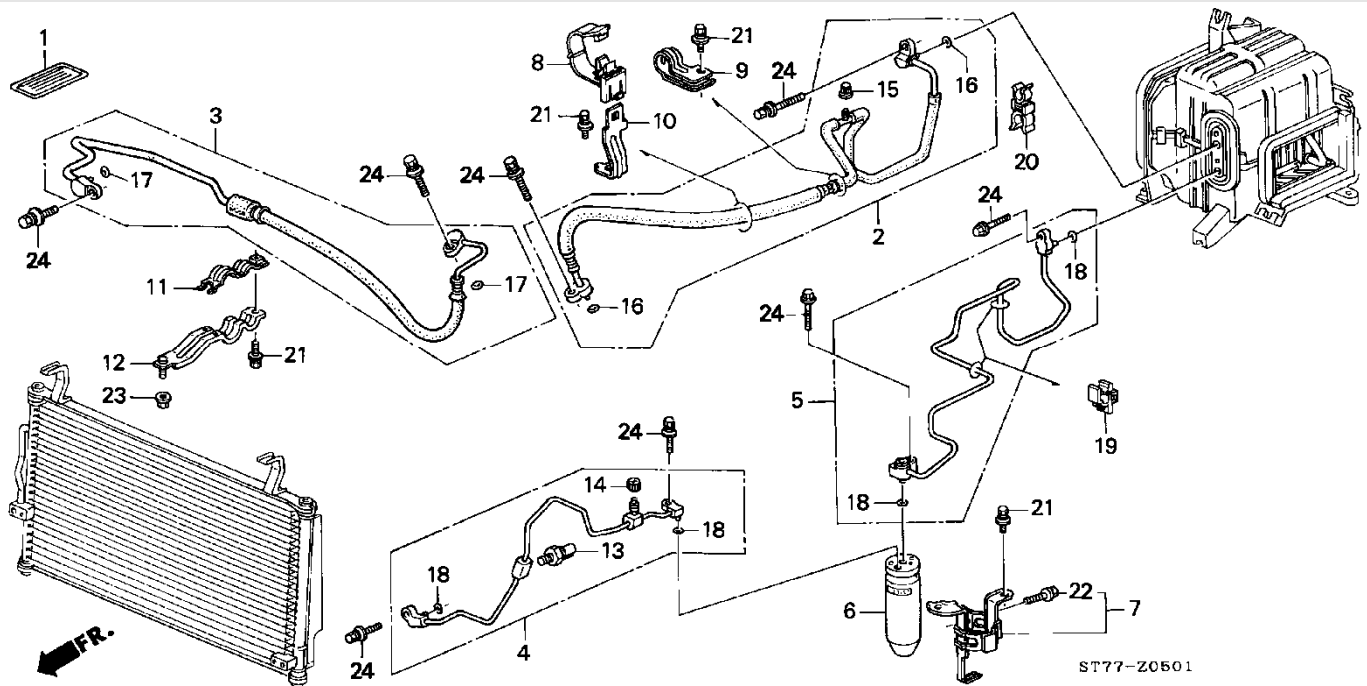


Refnr	Part Number	Part Description	Unit Qty
1	80050-SP0-000	LABEL, AIR CONDITIONER CAUTION (HFC134A)	001
2	80311-ST7-013	HOSE COMP., SUCTION (NICHIRIN)	001
3	80315-ST7-003	HOSE COMP., DISCHARGE	001
4	80331-ST7-E01	PIPE, CONDENSER	001
5	80341-ST7-003	PIPE A, RECEIVER (SAK)	001
6	80351-ST7-003	RECEIVER COMP.	001
7	80352-SR3-000	BRACKET, LIQUID TANK	001
8	80360-SE0-013	CLAMP A, SUCTION HOSE	001
9	80362-SR3-000	CLAMP, SUCTION HOSE	001
10	80363-SR3-000	STAY, SUCTION HOSE	001
11	80363-ST7-A00	CLAMP, DISCHARGE HOSE	001
12	80364-ST7-A00	STAY, DISCHARGE HOSE	001
13	80440-SS0-901	SWITCH, DUAL PRESSURE (FUJI)	001
14	80865-SL0-003	CAP, VALVE (H)	001
15	80866-ST0-003	CAP L, VALVE (NICHIRIN)	001
16	80871-ST7-000	O-RING (5/8")	002
17	80872-ST7-000	O-RING (1/2")	002
18	80873-ST7-000	O-RING, 8MM	004
19	91548-SR3-003	CLIP, 8MM	002
20	91599-SH3-A31	CLAMP, PURGE HOSE	001
21	93403-06012-08	BOLT-WASHER, 6X12	005
22	93403-06020-08	BOLT-WASHER, 6X20	001
23	94050-06080	NUT, FLANGE, 6MM	001
24	95701-06025-08	BOLT, FLANGE, 6X25	008

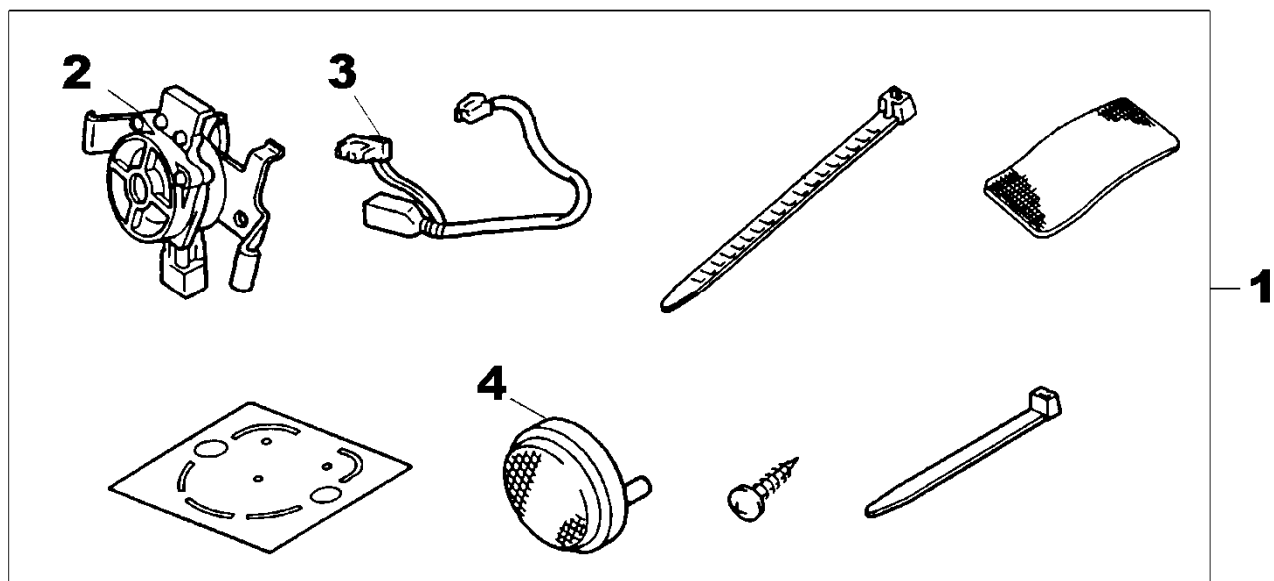

Refnr	Part Number	Part Description	Unit Qty
1	08A55-ST7-600	FRONT TWEETER KIT	001
2	08A54-ST7-AM001	TWEETER,ASSY	002
3	08A54-ST7-A0003	SUB CORD FR SPKR	002
4	08A54-ST7-A0012	TWEETER CAP	002

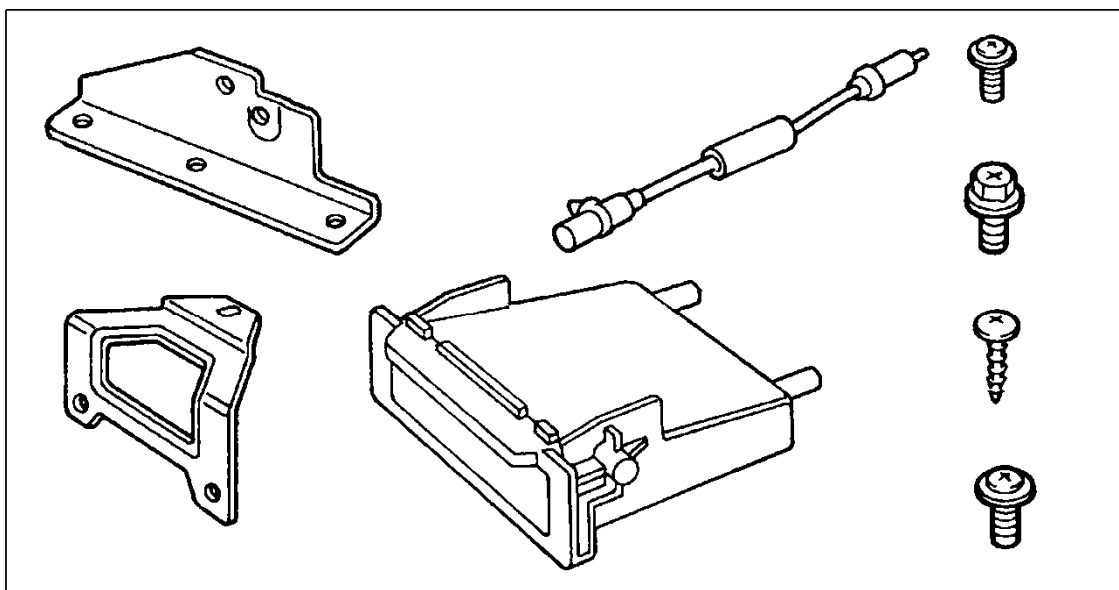


Refnr	Part Number	Part Description	Unit Qty
1	08B60-ST7-600	POCKET ATTACHMENT	001

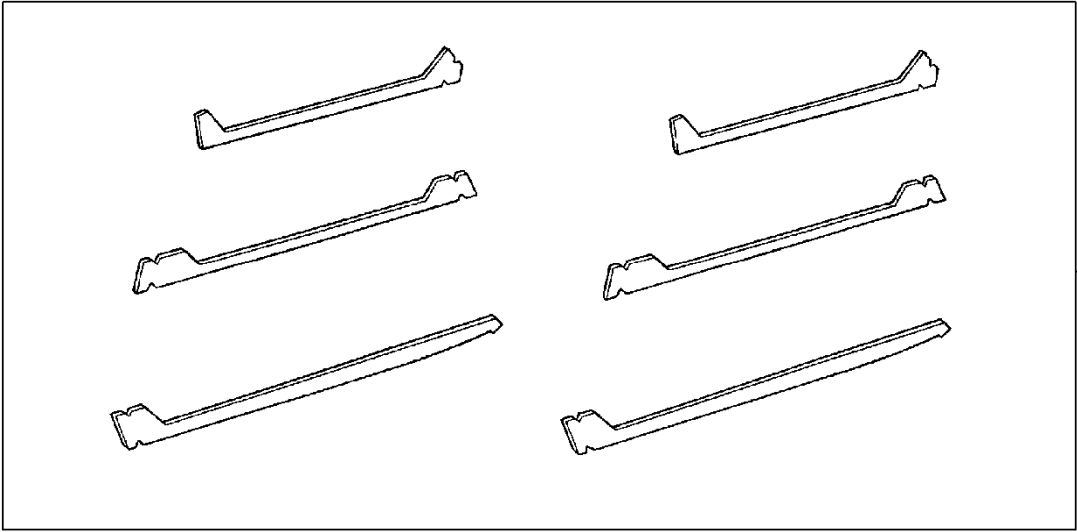


Refnr	Part Number	Part Description	Unit Qty
1	08F30-ST7-600	PIN STRIPING KIT	001


Block 08F-30-02 PIN STRIPING KIT

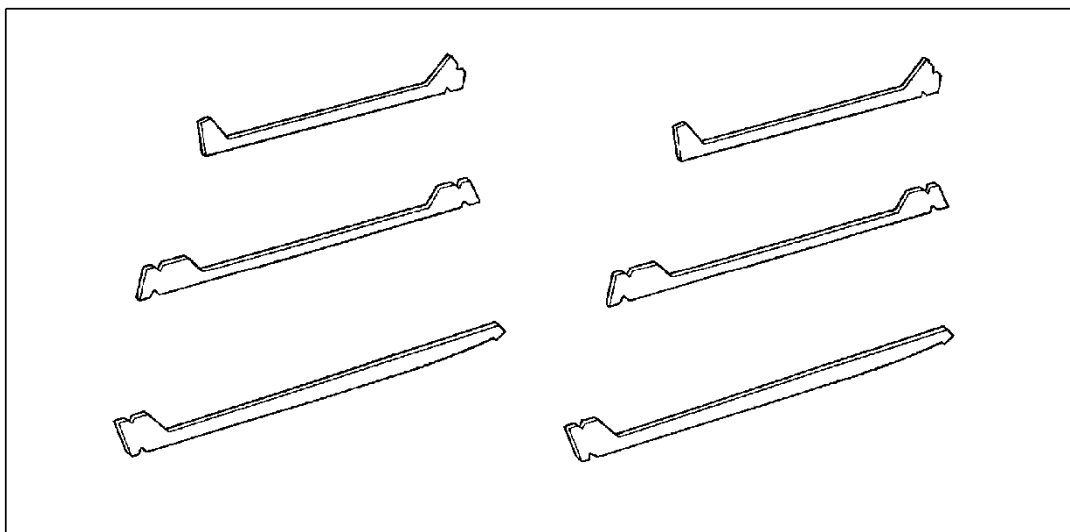


Refnr	Part Number	Part Description	Unit Qty
1	08F30-ST7-600F	PIN STRIPING KIT	001

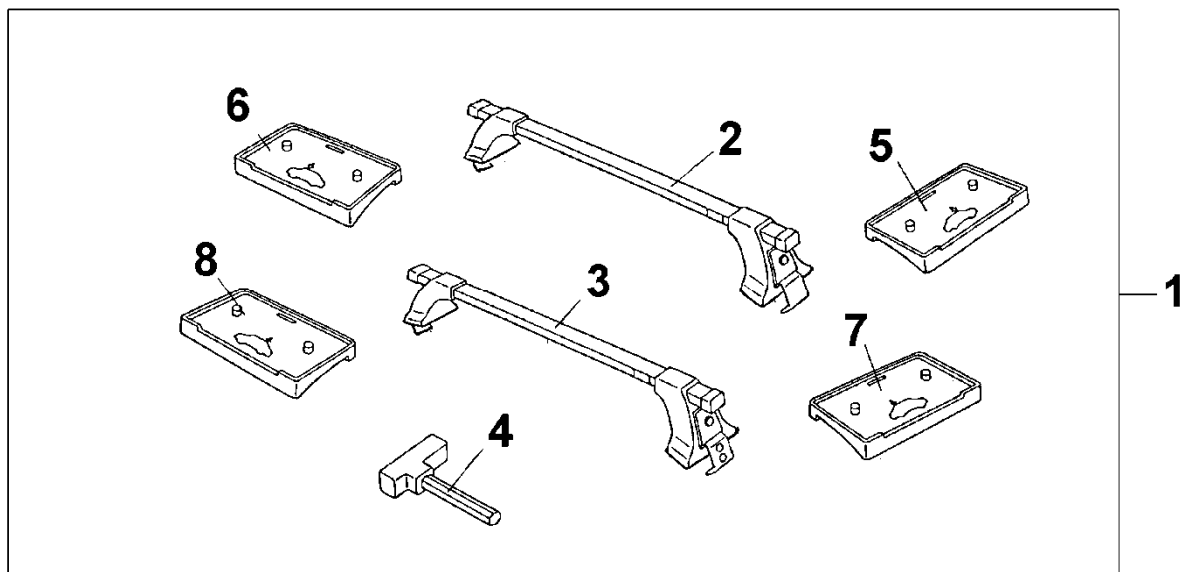


Refnr	Part Number	Part Description	Unit Qty
1	08L02-ST7-600	BASE CARRIER	001
2	08L02-ST7-60001	ROOF CARRIER ASSY FRONT	001
3	08L02-ST7-60011	ROOF CARRIER ASSY REAR	001
4	08L02-S04-60033	WRENCH HEX	001
5	08L02-ST7-60009	CUSHION FRONT RIGHT	001
6	08L02-ST7-60010	CUSHION FRONT LEFT	001
7	08L02-ST7-60019	CUSHION REAR RIGHT	001
8	08L02-ST7-60020	CUSHION REAR LEFT	001

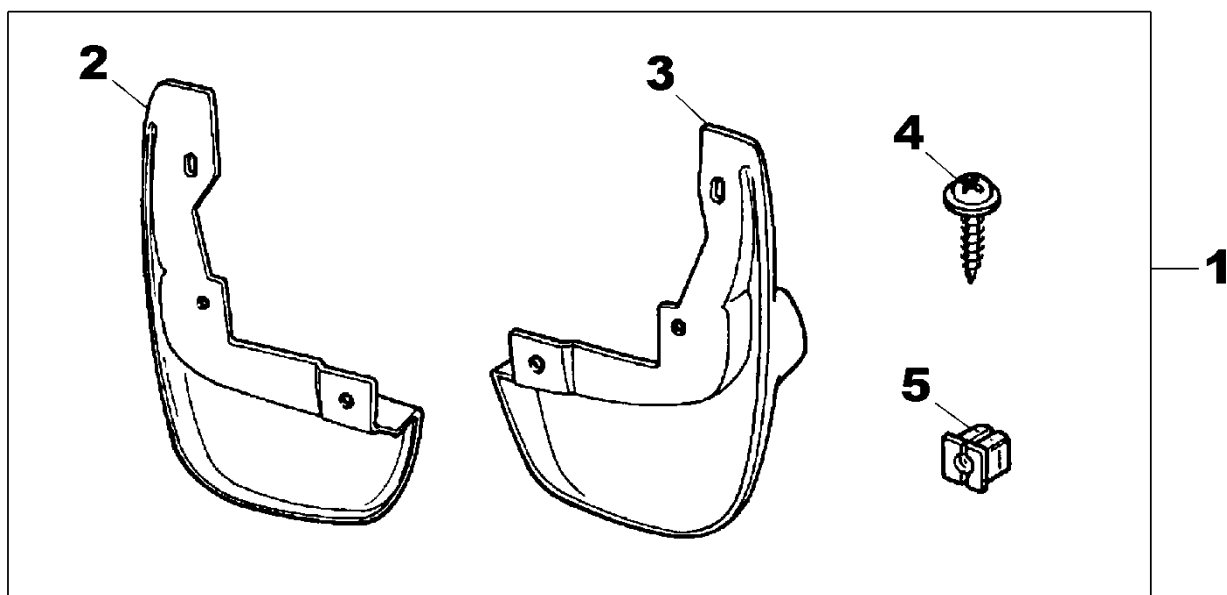


Refnr	Part Number	Part Description	Unit Qty
1	08P08-ST7-600	FRONT MUDGUARDS	001
2	08P08-ST7-00001	MUD, GUARD, R, FR	001
3	08P08-ST7-00002	MUD, GUARD, L, FR	001
4	90114-SZ3-000	SCREW-WASHER, 5X20	006
5	90676-SA7-003	GROMMET, SCREW, 5MM (BLACK)	002

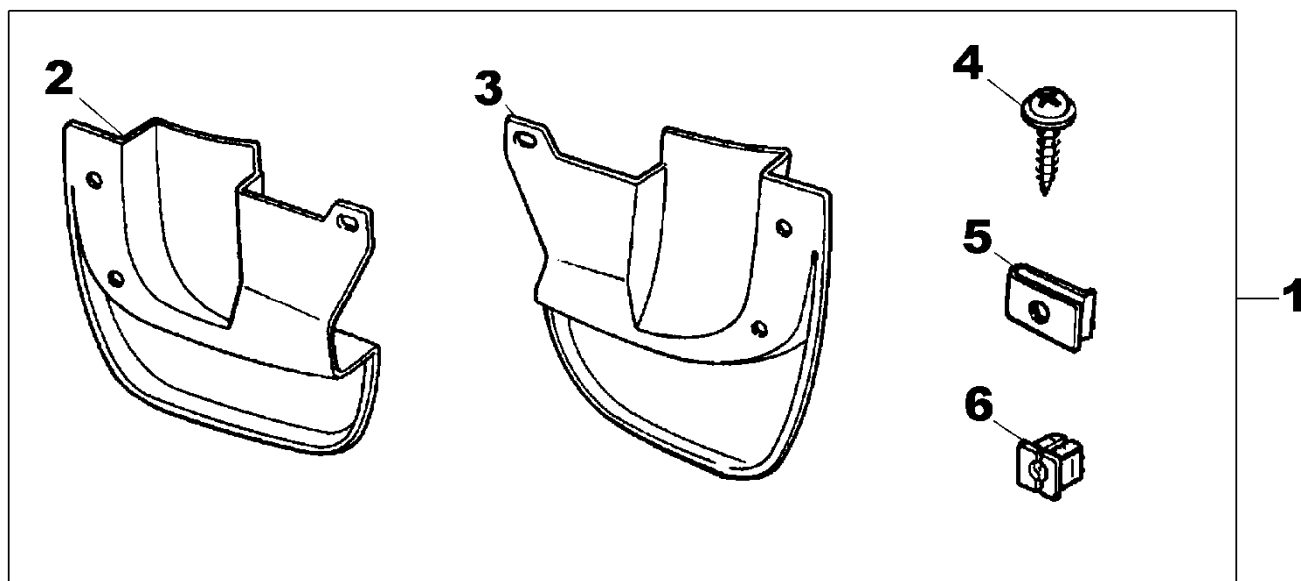


Refnr	Part Number	Part Description	Unit Qty
1	08P09-ST7-600	REAR MUDGUARDS	001
2	08P09-ST7-A0001	RIGHT REAR MUD GUARD	001
3	08P09-ST7-A0002	LEFT REAR MUD GUARD	001
4	90114-SZ3-000	SCREW-WASHER, 5X20	006
5	90308-SB2-013	NUT, SUSPENSION, 5MM	004
6	90676-SA7-003	GROMMET, SCREW, 5MM (BLACK)	002

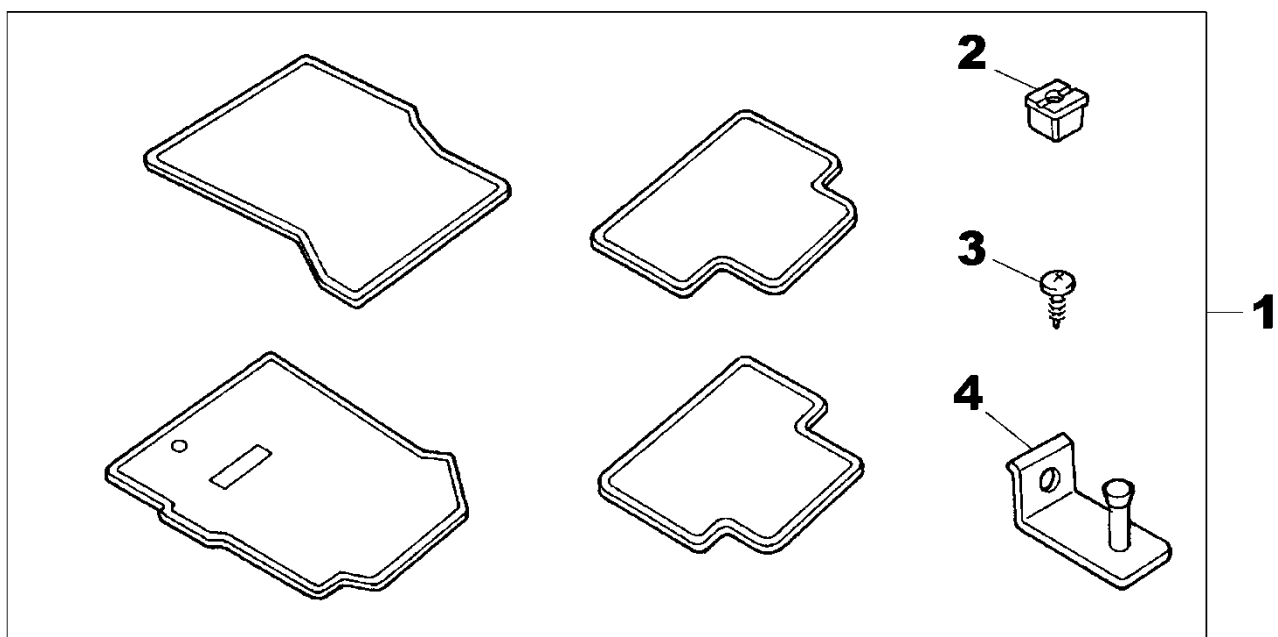

Refnr	Part Number	Part Description	Unit Qty
1	08P15-ST7-510	FLOOR CARPET ELEGANC	001
2	90662-SB2-003	GROMMET, SCREW, 5MM	001
3	93903-45320	SCREW, TAPPING, 5X16	001
4	08P13-ST3-60006	HOLDER,FLOOR MAT	001

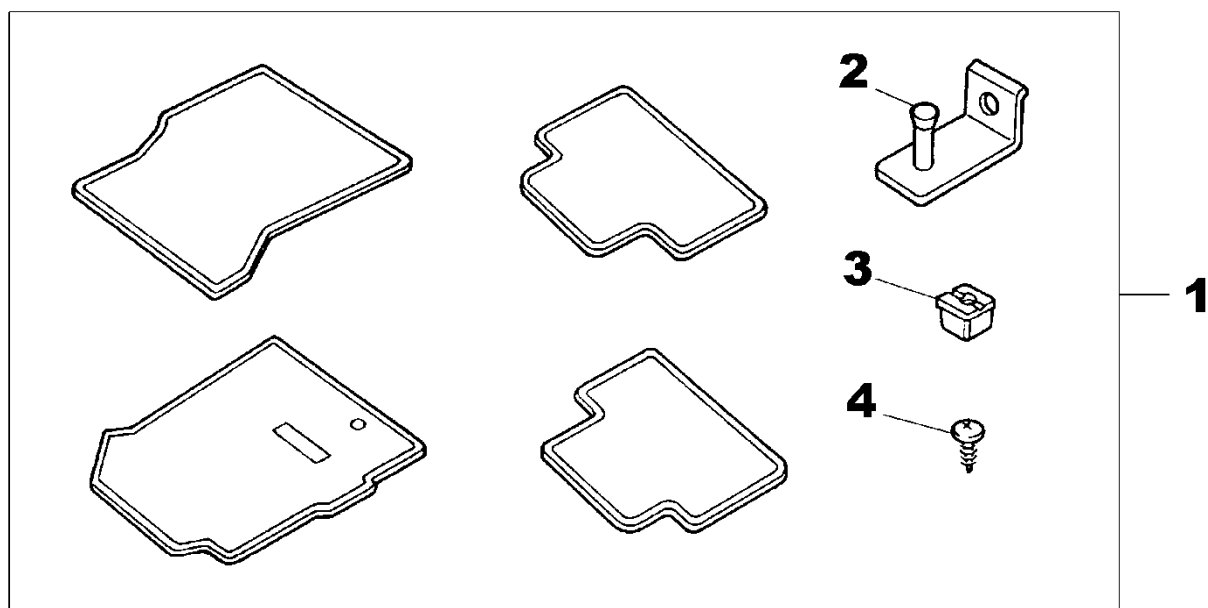


Refnr	Part Number	Part Description	Unit Qty
1	08P15-ST7-610	FLOOR CARPET ELEGANC	001
2	08P13-ST3-60006	HOLDER,FLOOR MAT	001
3	90662-SB2-003	GROMMET, SCREW, 5MM	001
4	93903-45320	SCREW, TAPPING, 5X16	001

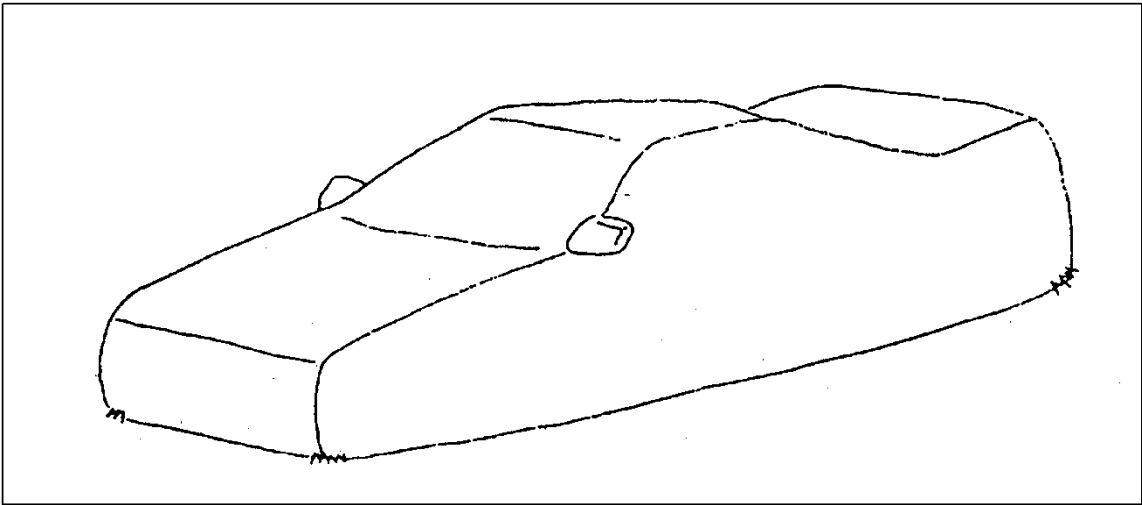


1

Refnr	Part Number	Part Description	Unit Qty
1	08P34-ST7-600F	BODY COVER	001

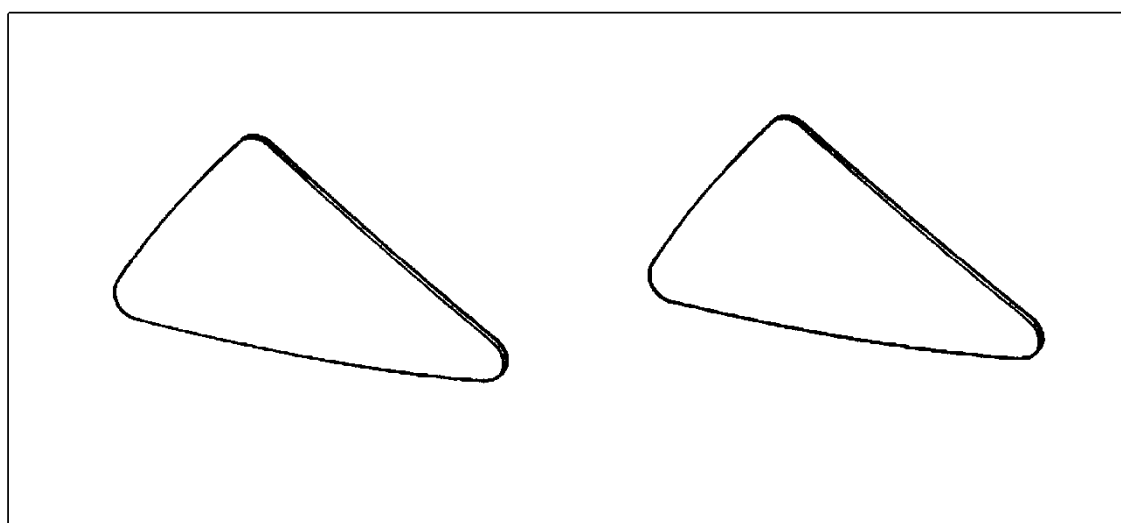


1


Refnr	Part Number	Part Description	Unit Qty
1	08R18-ST7-600	QUARTER WINDOW FILM	001

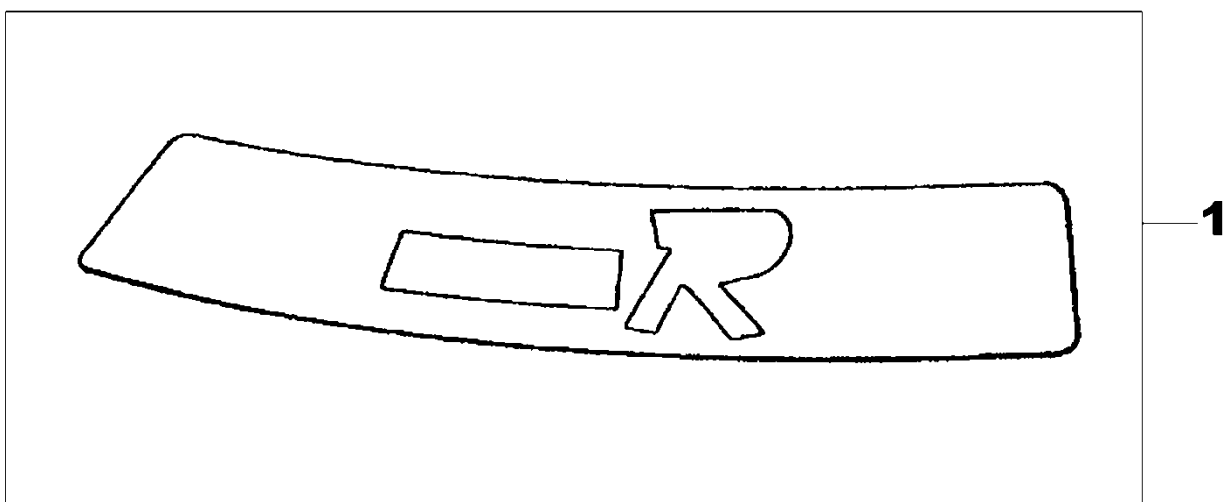


Refnr	Part Number	Part Description	Unit Qty
1	08R20-ST7-600	REAR WINDOW FILM	001

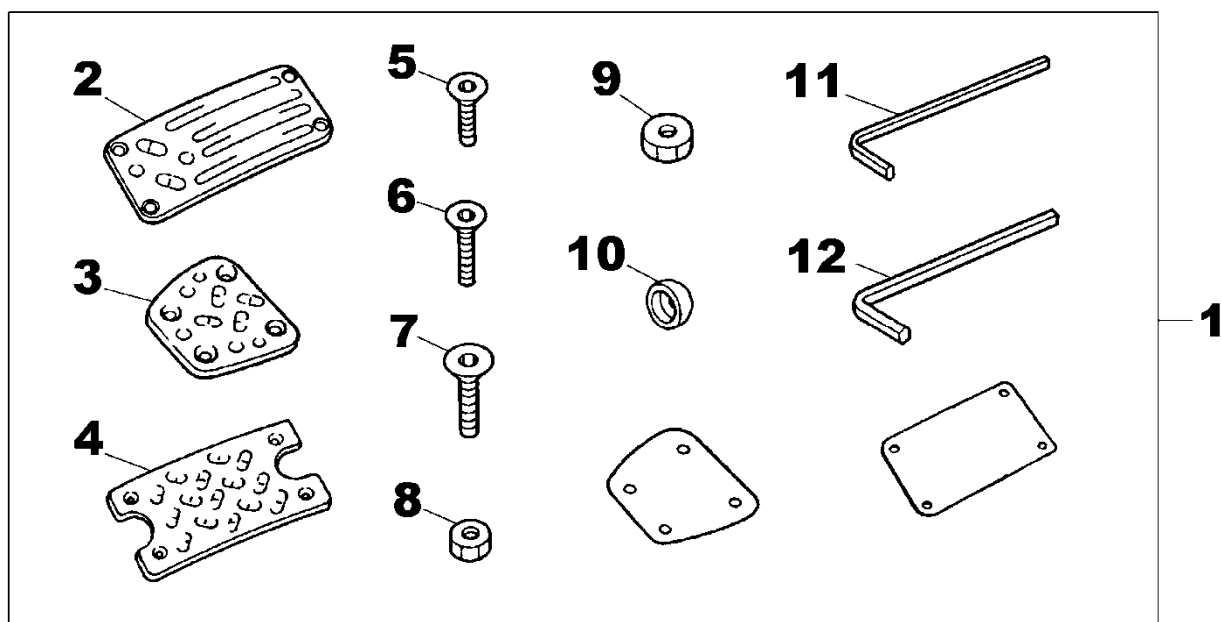


Refnr	Part Number	Part Description	Unit Qty
1	08U74-ST7-600	KIT,SPORTS PEDAL	001
2	08U74-S30-A0001	PEDAL,ACCEL	001
3	08U74-S30-A0002	PEDAL,BRAKE&CLUTC	002
4	08U74-S04-A0001	FOOT REST	001
5	08U74-S30-A0004	SCREW,FLAT 3X10	004
6	08U74-S30-A0015	SCREW,FLAT 3X12	004
7	08U74-S30-A0013	SCREW,FLAT 4X12	008
8	08U74-S30-A0006	NUT,SELF LOCK 3MM	008
9	08U74-S30-A0007	NUT,SELF LOCK 4MM	008
10	08U74-S30-A0014	CAP	004
11	08U74-S30-A0008	WRENCH,HEX 2	001
12	08U74-S30-A0009	WRENCH,HEX 2.5	001

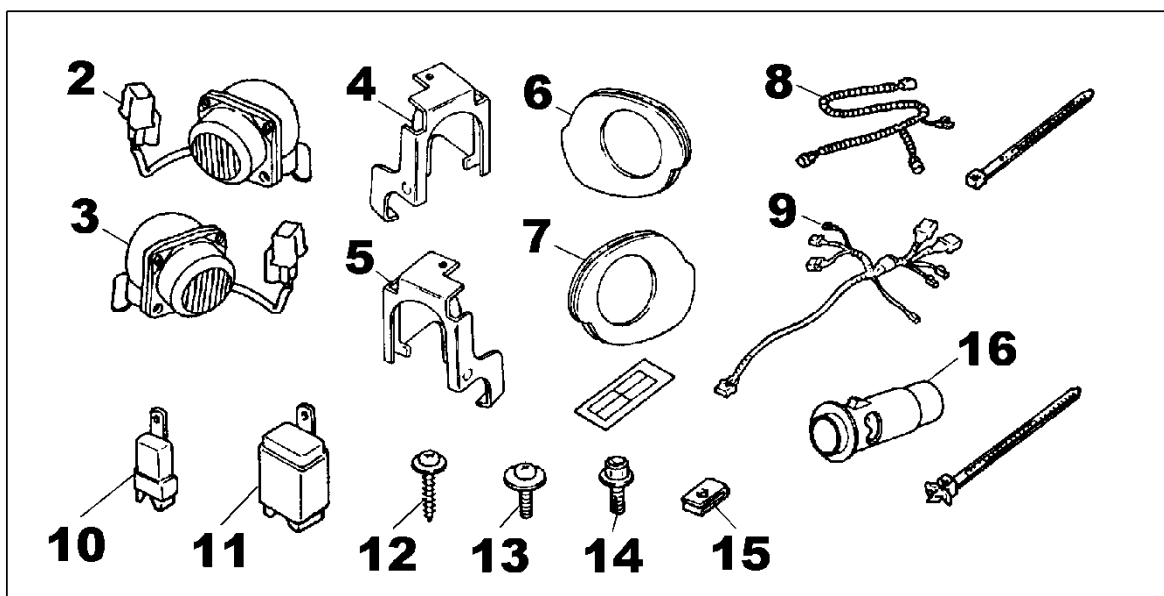

Refnr	Part Number	Part Description	Unit Qty
1	08V31-ST7-600	FRONT FOGLIGHT KIT	001
2	34221-ST3-E03	LIGHT UNIT, R. FOG	001
3	34226-ST3-E03	LIGHT UNIT, L. FOG	001
4	08V31-ST7-60003	RIGHT FOG LIGHT BRACKET	001
5	08V31-ST7-60004	LEFT FOG LIGHT BRACKET	001
5	39797-SE0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
6	08V31-ST7-60005	RIGHT FOG LIGHT GARNISH	001
7	08V31-ST7-60006	LEFT FOG LIGHT GARNISH	001
8	08V31-ST7-20008	HARN,FOG LT	001
9	08V31-ST7-60007	FOG LIGHT SWITCH HARNESS	001
11	39799-SE0-003	RELAY ASSY., POWER, 5P (DENSO) (058700-1211)	001
12	08V31-S04-C0019	SCREW WASH 5X6	006
13	08V31-S30-A0020	SCREW,SPECIAL5X20	006
14	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM) (ZN)	001
15	90306-SA0-000	NUT, FLOATING, 5MM	002
16	35180-ST7-Z01	SW ASSY FR FOG	001

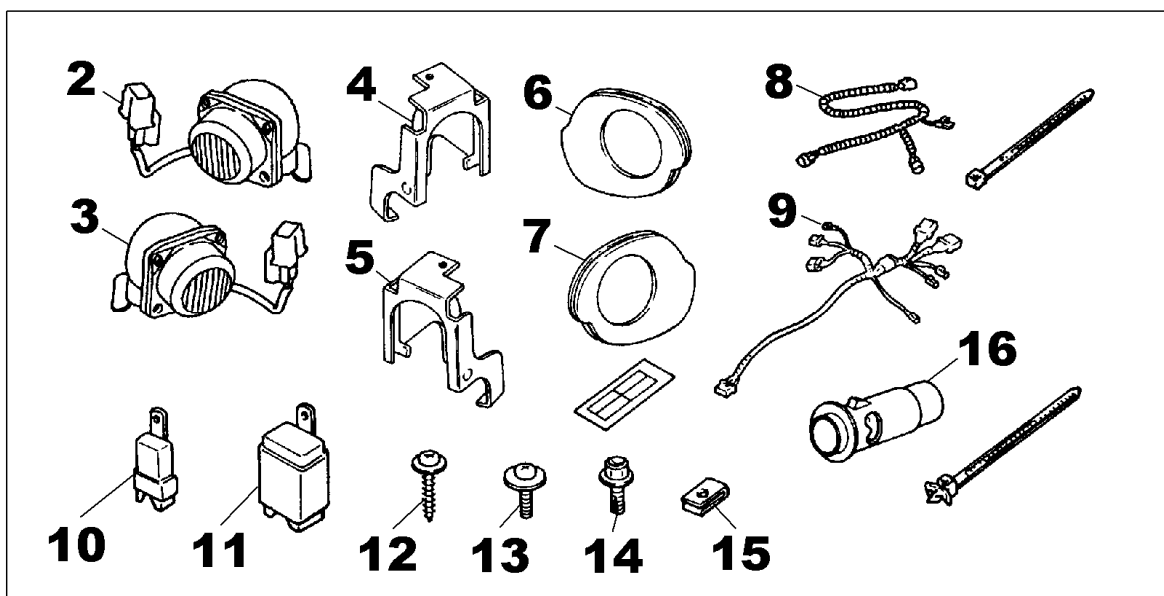

Refnr	Part Number	Part Description	Unit Qty
1	08V31-ST7-601	FR FOG LIGHT	001
2	34221-ST3-E03	LIGHT UNIT, R. FOG	001
3	34226-ST3-E03	LIGHT UNIT, L. FOG	001
4	08V31-ST7-60003	RIGHT FOG LIGHT BRACKET	001
5	08V31-ST7-60004	LEFT FOG LIGHT BRACKET	001
5	39797-SE0-004	RELAY ASSY., POWER (4P) (MITSUBA) (RC-2201)	001
6	08V31-ST7-60005	RIGHT FOG LIGHT GARNISH	001
7	08V31-ST7-60006	LEFT FOG LIGHT GARNISH	001
8	08V31-ST7-20008	HARN, FOG LT	001
9	08V31-ST7-60007	FOG LIGHT SWITCH HARNESS	001
11	39799-SE0-003	RELAY ASSY., POWER, 5P (DENSO) (058700-1211)	001
12	08V31-S04-C0019	SCREW WASH 5X6	006
13	08V31-S30-A0020	SCREW, SPECIAL 5X20	006
14	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM) (ZN)	001
15	90306-SA0-000	NUT, FLOATING, 5MM	002
16	35180-ST7-Z01	SW ASSY FR FOG	001

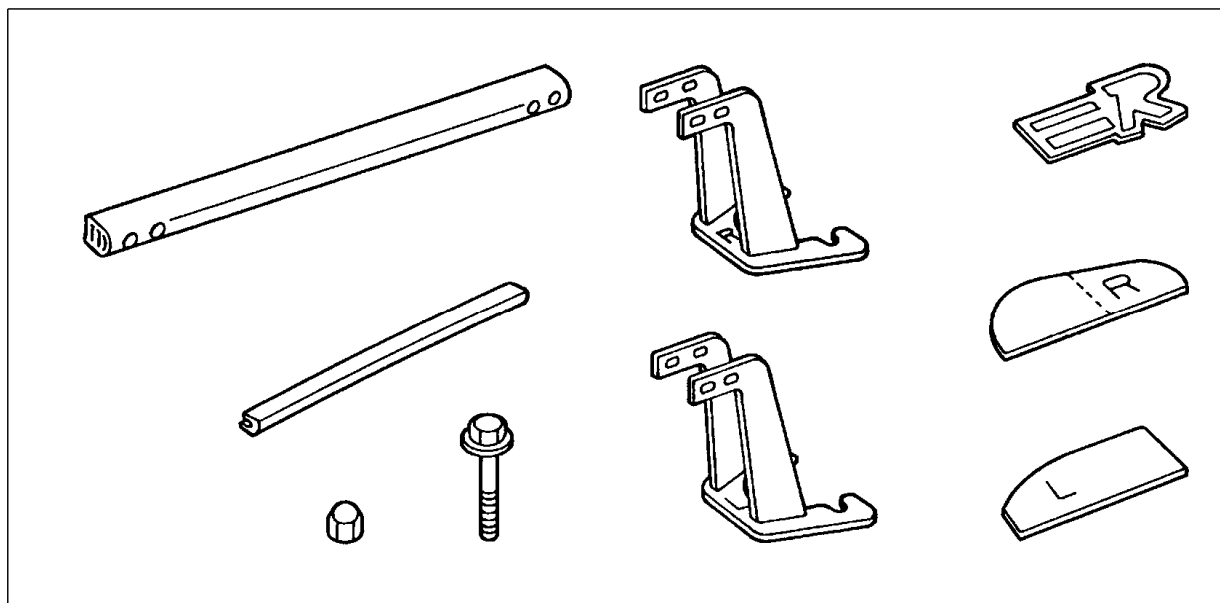

Refnr	Part Number	Part Description	Unit Qty
1	08W71-ST7-600	KIT,RR TOWER BAR	001